

GoWISEUSA®

AIR FRYER OVEN

3 PIECE ACCESSORY KIT

USER MANUAL

Model No.: GWA0080



Please read through this manual carefully before use

 **IMPORTANT SAFEGUARDS AND TIPS**

WWW.GOWISEUSA.COM

THANK YOU FOR YOUR PURCHASE!

Join

the GoWISE Community on Facebook, Instagram, Twitter, and Pinterest for updates, tips, and great deals!



Explore

our recipes at www.gowiseproducts.com/blogs/recipes



Contact Our Customer Care Team

855-233-9199
support@gowiseusa.com
Live Chat at gowiseusa.com
M-F 8:30am - 4:00pm MST



Register Your Product

www.gowiseproducts.com/apps/product-registration






TABLE OF CONTENTS

Register Your Product.....	2
Important Safeguards.....	4
Accessories.....	5
Items Included.....	5
Using the Air Fry Basket.....	5
Warranty.....	6

IMPORTANT SAFEGUARDS

HOUSEHOLD USE ONLY • READ ALL INSTRUCTIONS BEFORE USE

   IMPORTANT: Before initial use and after subsequent use, hand wash the square basket and any other cooking accessories. Then, wipe the outside and inside of the unit with a warm, moist cloth and mild detergent.

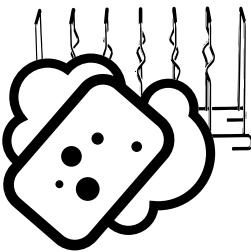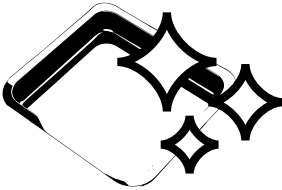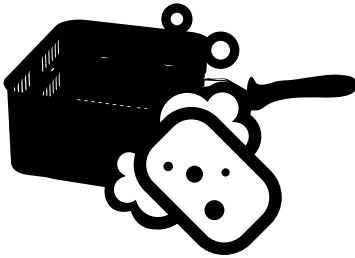

CAUTION: NEVER POUR oil into the square air fry basket. This could result in fire or personal injury.



 
⚠ WARNING! Contents and cooking accessories will be extremely hot after every use. To prevent personal injury, always use oven mitts to remove contents and always wait until the unit has cooled sufficiently before touching or cleaning any area of the internal heating compartment of the Air Fryer Oven.

SAVE THESE INSTRUCTIONS

ACCESSORIES

ITEMS INCLUDED

1. Air Fry Basket (6.3Qt) with Removable Handle
2. 8" Baking Tray
3. Toasting Rack

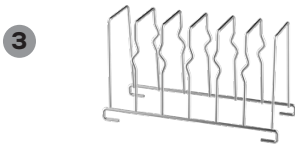


USING THE AIR FRY BASKET

Air Fry Basket: Allows you to cook any of your favorite foods in the **GoWISE USA Air Fryer Oven** – (item sold separately).

Attaching the Removable Handle

 1. To attach removable handle – with thumb and index finger, squeeze the two prongs of the handle together, place between the slots and release prongs. The handle will latch into place with a ‘click’.

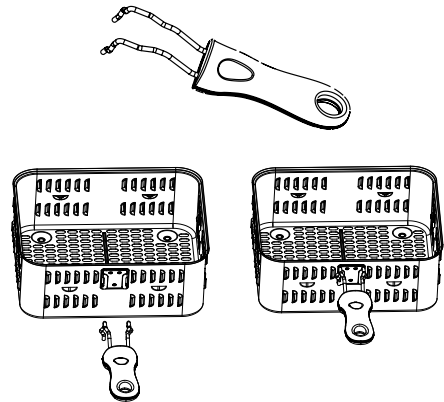

2. The oven door cannot close with the removable handle still attached. Remove handle before closing the oven door.

NOTE: The air fry basket should always be removed using the removable fry basket handle to prevent personal injury. Oven contents will be extremely hot.

WARRANTY

GoWISE USA warrants all products against defects in materials and workmanship for **one (1) year** effective from the date of purchase.

GoWISE USA will replace any products that are found to be defective due to manufacturer flaws based on eligibility. Refunds issued by GoWISE USA must be purchased directly from GoWISE USA and are only available to the original purchaser within the first 30 days. We do not issue refunds for items bought by thirdparty retailers.

This warranty extends only to personal use and does not extend to products that has been used for commercial, rental or any other use this product was not intended for. There are no warranties other than the warranties expressly set forth with each product.

This warranty is non-transferrable. GoWISE USA is not responsible in any way for any damages, losses, or inconveniences caused by equipment failure by user negligence, abuse, or use noncompliant with the user manual or any additional safety, use, or warnings included in the product packaging and manual.

This warranty only covers purchases within the 48 contiguous States of United States of America. For purchases made outside the 48 contiguous states, such as, AK, HI, PR or Canada; upon receipt of a proven defect by video or picture, we will replace the unit under the 1-year warranty, however the replacement will only ship to a freight forwarder or an address within the 48 contiguous United States. The consumer is responsible for arranging shipment outside of the 48 contiguous states.

GoWISE USA assumes no liability for damage caused using this product other than for its intended use or as instructed in the user manual. Some states do not allow this exclusion or limitation of incidental or consequential losses, so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

ALL EXPRESSED AND IMPLIED WARRANTIES INCLUDING THE WARRANTY OF MERCHATIBILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

NOTE: General Warranty excludes refurbished / auction items.

WARRANTY

Additional 60-Days Warranty

You can extend your 1-year warranty by an additional 60 days. Log onto [www.gowiseproducts.com/apps/ product-registration](http://www.gowiseproducts.com/apps/product-registration) and register your product within the first 14 days of your purchase for the extended warranty.

DEFECTIVE PRODUCTS & RETURNS

If your product is defective within the 1-year warranty period, please email our Customer Care Team at support@gowiseusa.com. To expedite your issue, please provide at least 3 of the 4 items below:

- 1.** Copy of the invoice, order information, or gift receipt showing the date of purchase
- 2.** Serial number, usually found on a sticker located on the bottom on back of the unit
- 3.** Picture or video of the issue or defect that you are experiencing
- 4.** Shipping address information

Authorized Retailers:

Amazon
GoWISE USA
WayFair
Houzz
Home Depot
etailz
MorningSave.com
Bed Bath & Beyond
Jet.com
Walmart.com
Macy's

GoWISE USA®

WWW.GOWISEUSA.COM

855-233-9199

support@gowiseusa.com

Live Chat at gowiseusa.com

M-F 8:30am - 4:00pm MST

- To ensure the correct use of this product, read these instructions carefully and thoroughly.
- Please keep this manual for future reference.
- Thank you for purchasing this GoWISE USA Air Fryer Oven Accessory Kit.



USE PROMO CODE: **LIVEWISERAF**

10% OFF

YOUR NEXT **GoWISE USA** PURCHASE

