ACDP-2 Master Basic Module



Device connection mode:







3: PC connection



ACDP-2 Package List:

ACDP-2 Programmer Configuration List (ACDP Host)

Item No.	Adapters / Parts	Pictures	Quantity	Adapters / Parts Functions
1	ACDP Programmer	#####################################	1 PC	
2	Puncture Socket (With one more plastic part)		1 PC	Applicable to read and write 8-pin EEPROM data without removing/soldering. Used with 8P cable and 20P cable.
3	BAV-KEY adapter	Las and Las an	1 PC	Applicable to identify BMW keys, data writing and matching.
4	P8P Cable		1 PC	Applicable to read and write 8-pin EEPROM data via cable connecting
5	8P Cable	%	1 PC	Applicable to connect the 8-PIN interface board of each module.
6	20P Cable		1 PC	Applicable to connect the ACDP2 host to 20 pin interface board.
7	20P to 8P cable		1 PC	Applicable to connect the ACDP2 host to 20 pin and 8 pin interface board.
8	Android cable	O	1 PC	Applicable to connect the ACDP2 host and Android phone.
9	IOS cable		1 PC	Applicable to connect the ACDP2 host and IOS phone.
10	USB cable	\O /	1 PC	Applicable to connect the ACDP2 host and PC.
11	OBD cable	O	1 PC	Applicable to connect the ACDP2 host and vehicle OBD.
12	14V Switch Power Supply		1 PC	Power the ACDP-2 host.
13	OBP2 adapter		1 PC	Applicable to reading 8-pin chip data with or without soldering
14	Test Points cleaning probes		4 PCS	Applicable to clean test point three anti-paint.
15	Double-head line	Q	1 PC	Applicable to point-to-point connections.