


Function Display

1) Main Page/Brand Supported

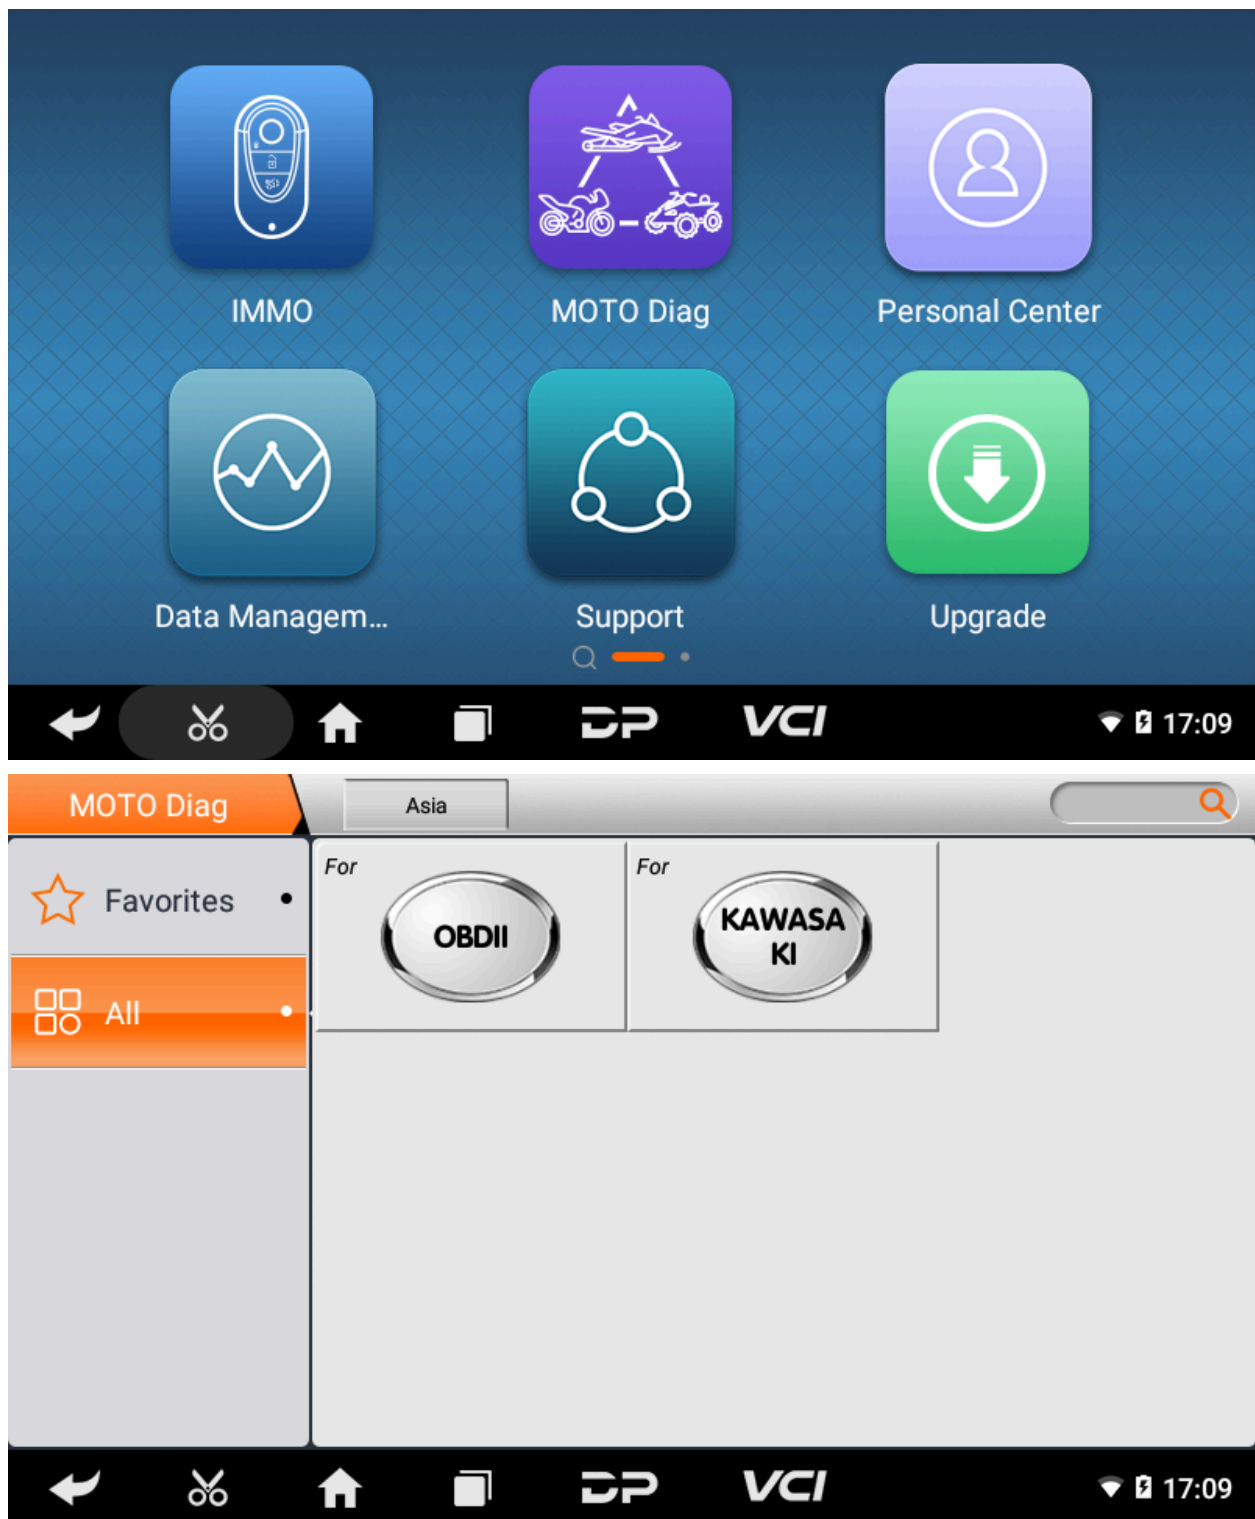

2) Help Data/Technical Bulletin

Help Data

DOC10.12

Notice

- Notes on "Select from vehicle" and "Select from system":
 - Select from vehicle: Press "Select from vehicle" to get detailed technical information, but the model update will lag;
 - Select from system: A system that automatically recognizes the vehicle model and assembly. If there is no corresponding model in the "Select from vehicle" option, you can enter this menu.
- M041/N041 is generally used for the China IV or Euro V models after 2019, as shown in the following figure:


Tips

Esc

← ✂ 🏠 📄 DP VCI 🔋 17:09

Help Data

DOC10.12

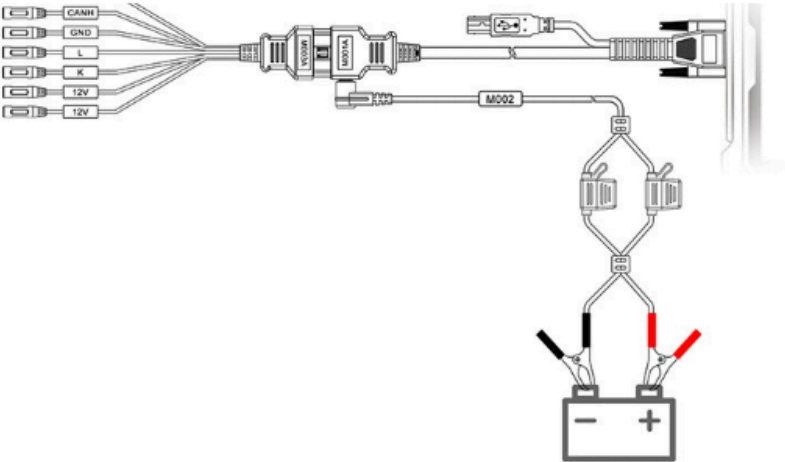


The diagram illustrates the electrical connections for a VCI (Vehicle Communication Interface) device. On the left, a multi-pin connector is labeled with the following terminals: CANH, GND, L, K, 12V, and 12V. These are connected to a central VCI unit. The VCI unit is connected to a vehicle's OBD-II port. A separate cable labeled 'M002' connects the VCI unit to a battery. The battery is shown with its positive (+) and negative (-) terminals. The M002 cable has two wires that connect to the battery terminals, with one wire being red and the other black.


Tips

Esc

← ✂ 🏠 📄 DP VCI 🔋 17:09

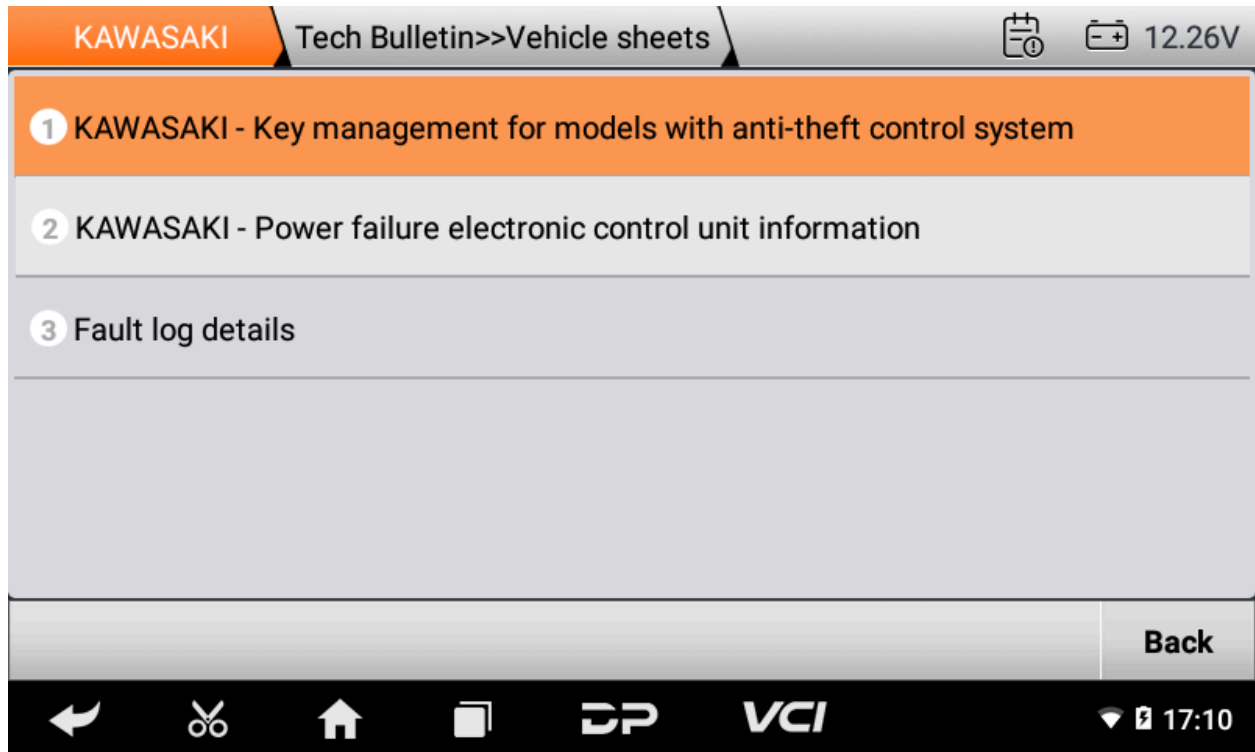

3) Supported Systems List/Vehicles List

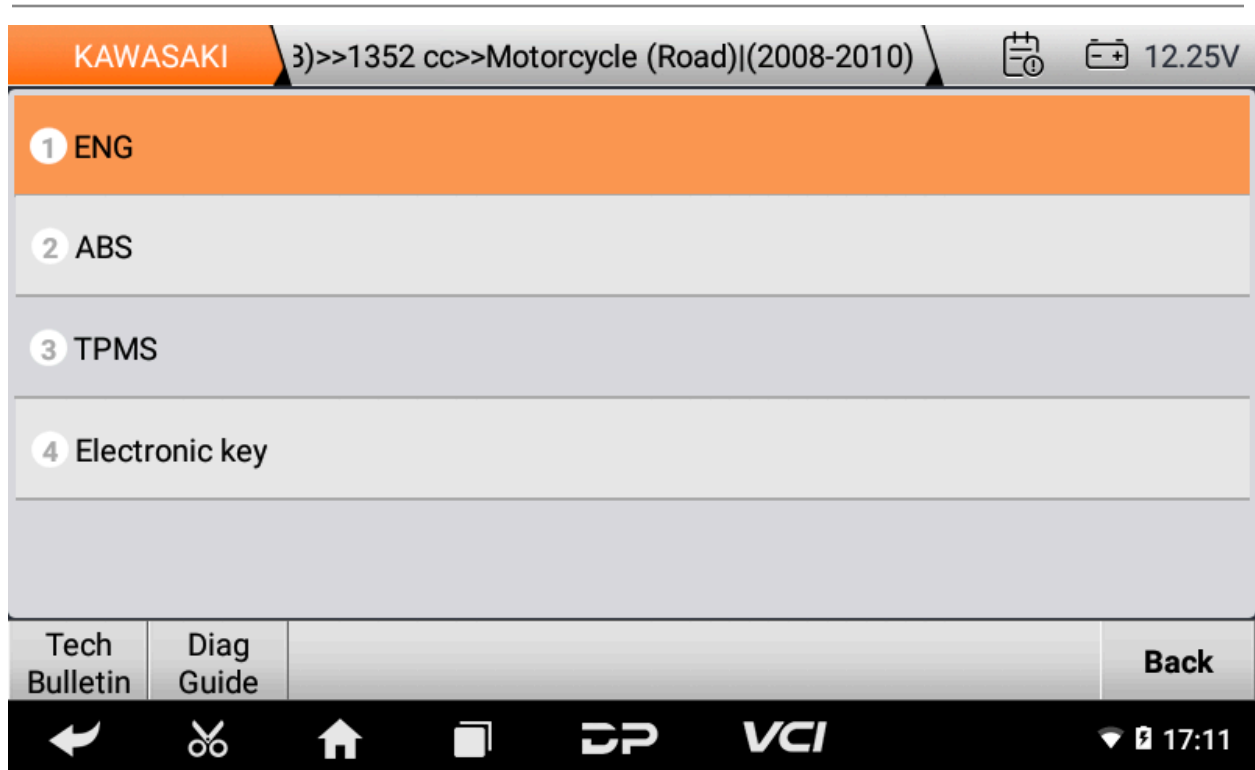

KAWASAKI VEHICLES>>Help data>>Initial Index 12.25V

- 1 B
- 2 C
- 3 D
- 4 E
- 5 G

Back

← ✂ 🏠 📄 DP VCI 17:10



KAWASAKI Help data>>Initial Index>>Select from vehicle 12.23V

- 1 Z1000 (ZR1000 GEF/GEFA)
- 2 Z1000 (ZR1000A)
- 3 Z1000 (ZR1000B)
- 4 Z1000 (ZR1000C)
- 5 Z1000 (ZR1000D)



Back

← ✂ 🏠 📄 DP VCI 17:12

4) Diag Socket/Diag Connector Location

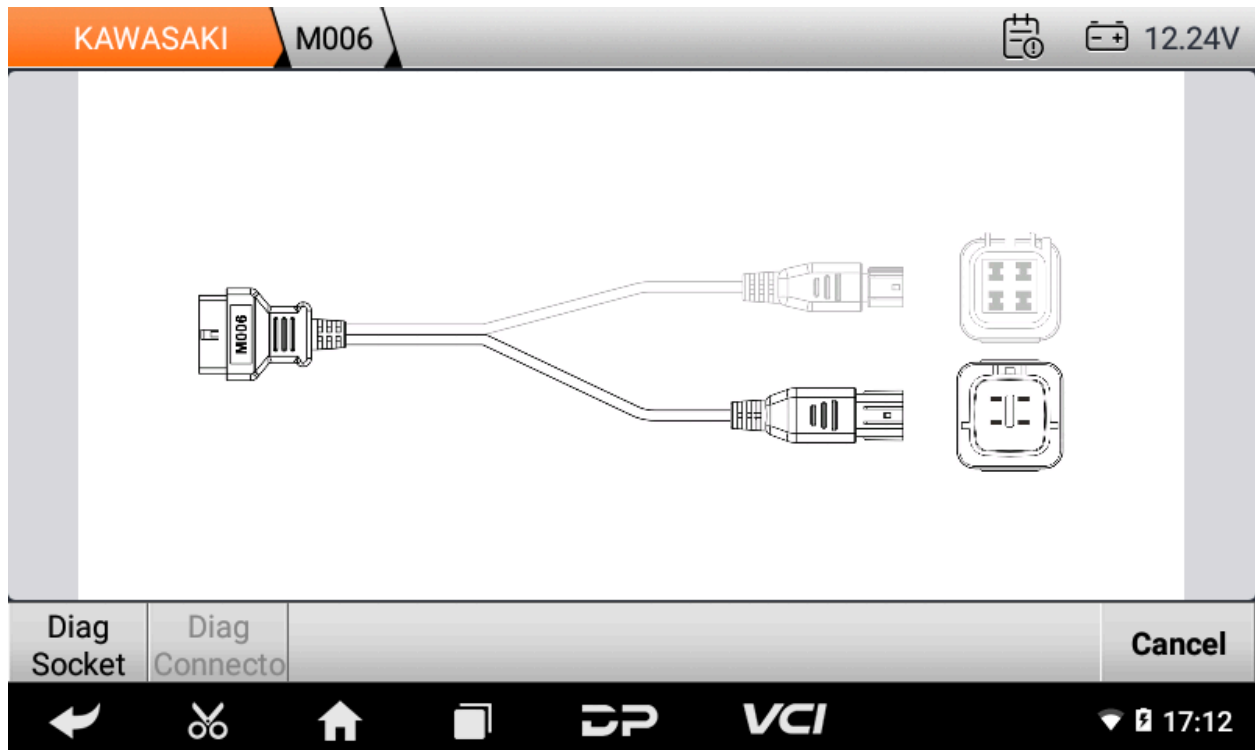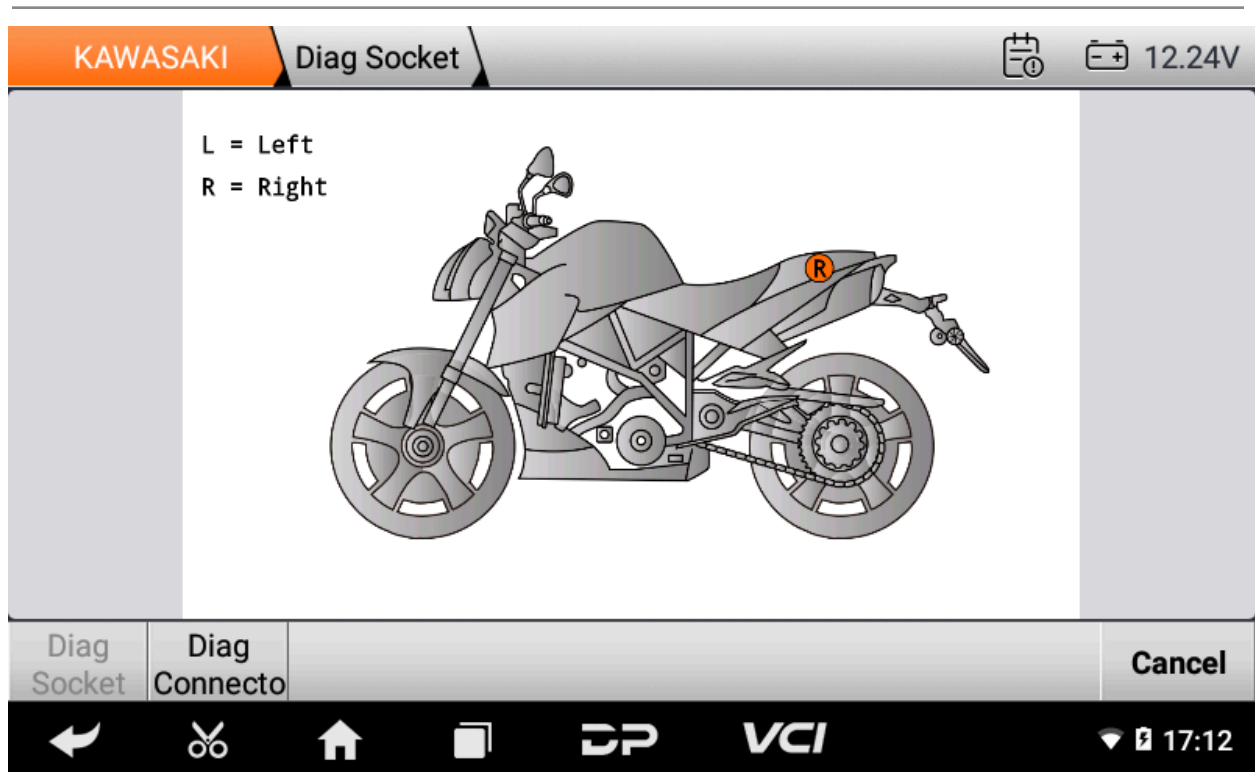

5) Special Function

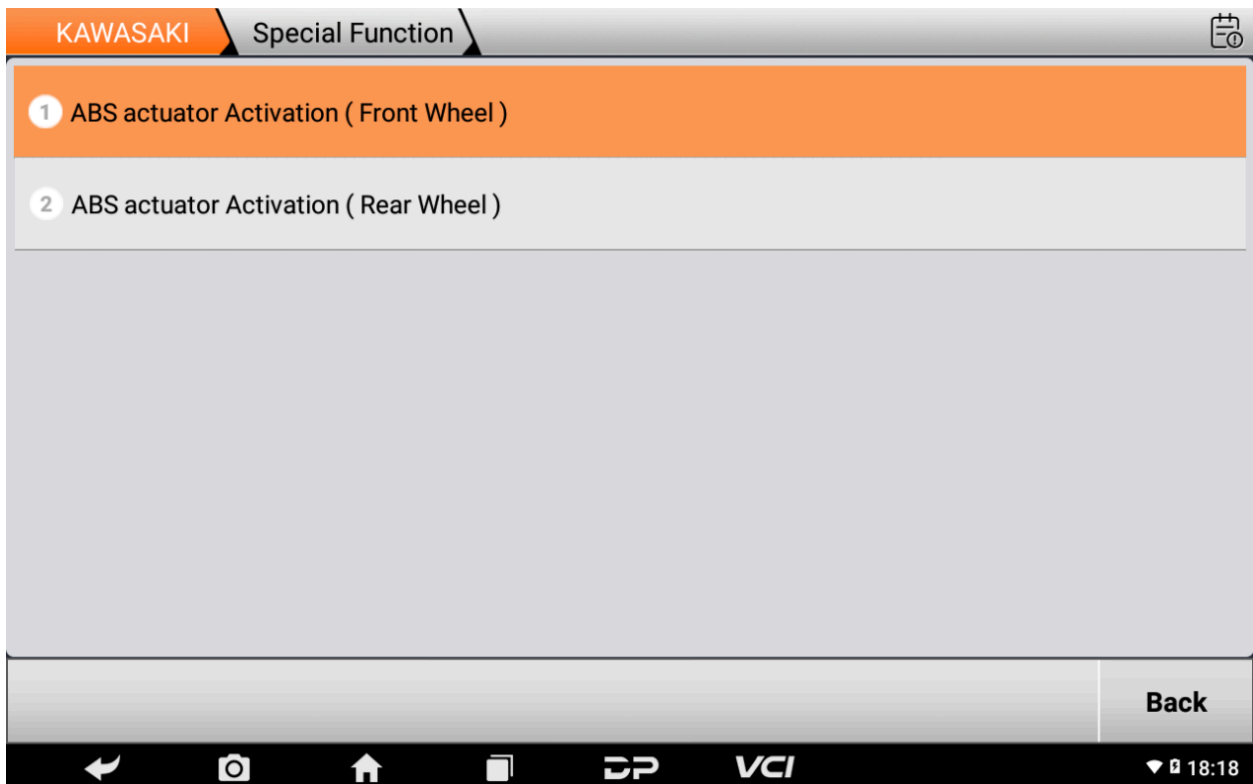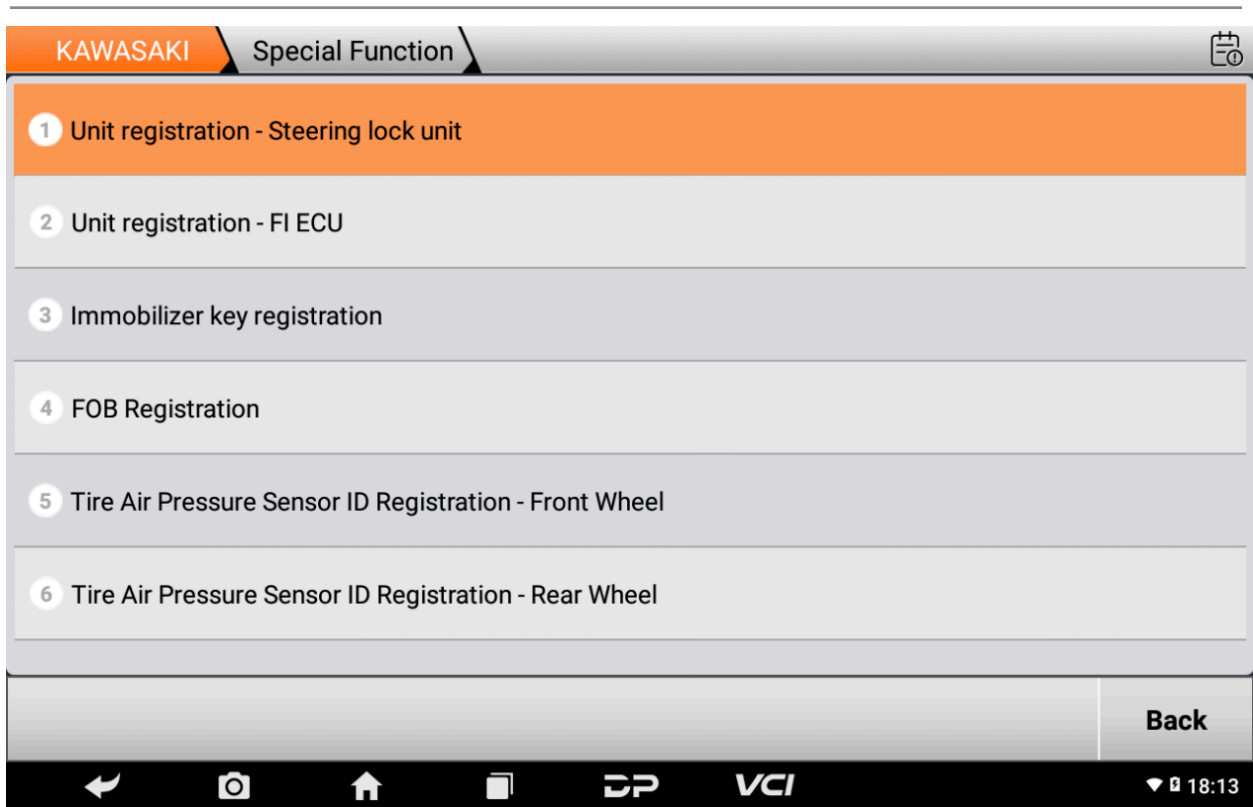



1 ABS actuator Activation (Front & Rear Wheel)

Back



18:12



1 Clock setting

2 Maintenance indicator display setting - Indicator function

3 Maintenance indicator display setting - Change setting value

Back



18:13



1 VIN Writing

Back



18:15



38 Radiator Fan Test

39 ETV Operating

40 Air Intake Solenoid Valve test

41 Evaporative Purge Solenoid Valve test

42 Grip Warmer Relay test

43 ABV(Air Bypass Valve) test

Back



18:09