

SERVICE BULLETIN

Date: June 04, 2015
Update Number: 2015-13
Subject: Revised Programming Instructions
Products Affected: 890MAX, 893MAX, 895MAX, and 877MAX

In an effort to simplify the programming of the MAX Remote Controls and Keyless Entry we are revising the programming instructions. The revised programming method ensures the MAX Remote Control or MAX Keyless Entry is configured to transmit the correct code based on the type of garage door opener.

Programming the MAX Remote Control (890MAX, 893MAX, and 895MAX):

1. Press and hold the program button on the remote control until the LED on the front of the remote control turns on.
2. Press and release the remote control button you wish to use the number of times that corresponds with the garage door opener type:

# of Presses	Garage Door Opener Type
1	Security+ 2.0™ (Yellow Learn Button)
2	315 MHz Security+® (Purple Learn Button)
3	390 MHz Security+® (Red/Orange Learn Button)
4	390 MHz Billion Code (Green Learn Button)

3. To exit programming, press and release any remote control button except the button that was just programmed.
4. Press and release the Learn button on the garage door opener or door control.
5. Press the remote control button programmed in step 2 until the garage door opener lights flash or two clicks are heard.

Programming the MAX Keyless Entry (877MAX):

1. Press and hold the * and # buttons until the lights on the keypad stop blinking.
2. Enter the four digit personal identification number (PIN) and then press the # button.
3. Press the Enter button the number of times that corresponds with your garage door opener type:

# of Presses	Garage Door Opener Type
1	Security+ 2.0™ (Yellow Learn Button)
2	315 MHz Security+® (Purple Learn Button)
3	390 MHz Security+® (Red/Orange Learn Button)
4	390 MHz Billion Code (Green Learn Button)

4. To exit programming, press and release the "0" button.
5. Press and release the learn button on the garage door opener or door control.
6. Enter the four digit personal identification number (PIN) programmed in step 2 then press and release the Enter button until the garage door opener lights flash or two clicks are heard.

Thank you for your continued support of LiftMaster Garage Door Openers. For additional programming information, refer to the LiftMaster programming card (part number LMACDC0001). If you have any questions, please contact your Sales Representative or our Technical Support Center at 800.528.6563.



LiftMaster®

3-BUTTON REMOTE CONTROLS MODELS 890MAX, 893MAX, AND 895MAX

Can be used as a replacement remote control for 80 Series, 970 Series, and 370 Series LiftMaster remote controls.

Compatible with 315 MHz or 390 MHz garage door openers manufactured after January 1, 1993. Make sure the garage door opener has a working light bulb because it is a programming indicator.

For use with gate operators, commercial door operators, or other products that are 315 MHz or 390 MHz and have a Learn button. Refer to your product manual for the location of the Learn button.

MODEL 895MAX



MODEL 893MAX



MODEL 890MAX

 
 


⚠ WARNING

To prevent possible **SERIOUS INJURY** or **DEATH** from a moving gate or garage door:

- ALWAYS keep remote controls out of reach of children. NEVER permit children to operate or play with remote controls.
- Activate gate or door ONLY when it can be seen clearly, is properly adjusted and there are no obstructions to door travel.
- ALWAYS keep gate or garage door in sight until completely closed. NEVER permit anyone to cross path of moving gate or door.

PREPARE

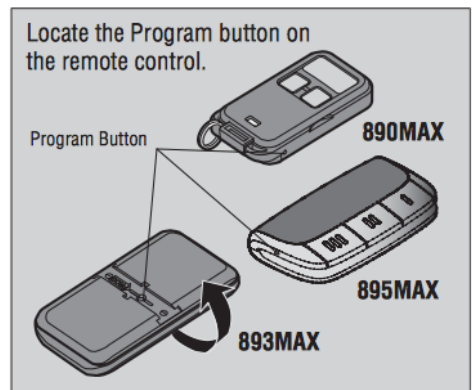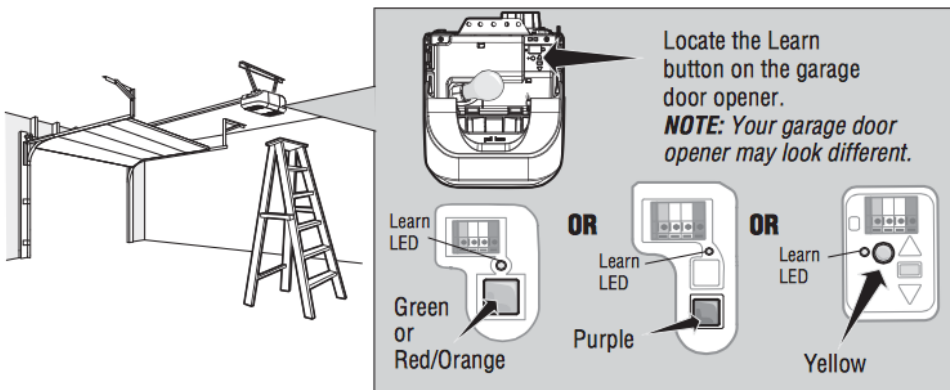

PROGRAMMING THE REMOTE CONTROL

1 Press and hold the program button the remote control until the LED on the front of the remote control turns on.

893MAX **890MAX**

Visor Clip

Safety Pin or Paper Clip

895MAX

2 Press and release the remote control button you wish to use the number of times that corresponds with the garage door opener type:

# of Presses	Garage Door Opener Type
1	Security+ 2.0™ (Yellow Learn Button)
2	315 MHz Security+® (Purple Learn Button)
3	390 MHz Security+® (Red/Orange Learn Button)
4	390 MHz Billion Code (Green Learn Button)

3 To exit programming mode, press any remote control button **except** the button that was just programmed.

4 Press and release the Learn button on the garage door opener.

Learn Button

The Learn LED will light. Within 30 seconds...

5 Press the remote control button programmed in step 2 until the garage door opener lights flash or two clicks are heard.

Click
Click

6 To test, press the programmed button on the remote control...

The garage door opener will activate.

7 Install the visor clip (not applicable for Model 890MAX).