



1 Unlock Clamp Arms

Use the tool provided **A** and turn the Central Bolt **B** anti-clockwise for about one and a half turns, to loosen the clamping arms **C** ready for adjustment.

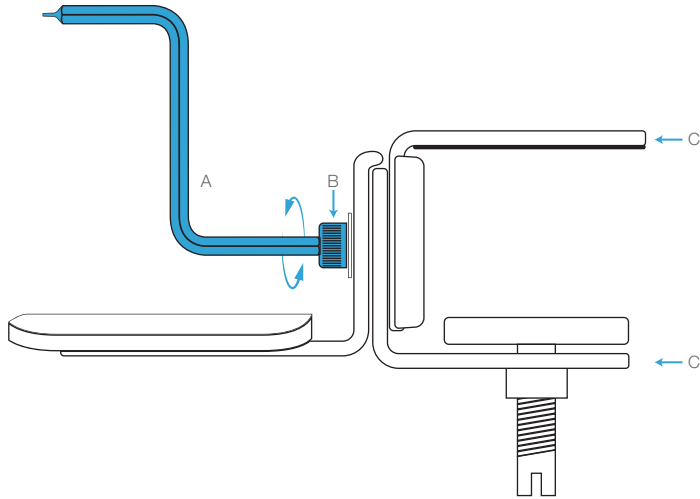


2 Adjust Clamp Size

Move the Clamp Arms **C** up or down until desired gap is reached. The gap should be wide enough to fit onto the desired location (shelf, desk etc) with enough space for the Locking Bolt so it can be tightened and lock the clamp into place.

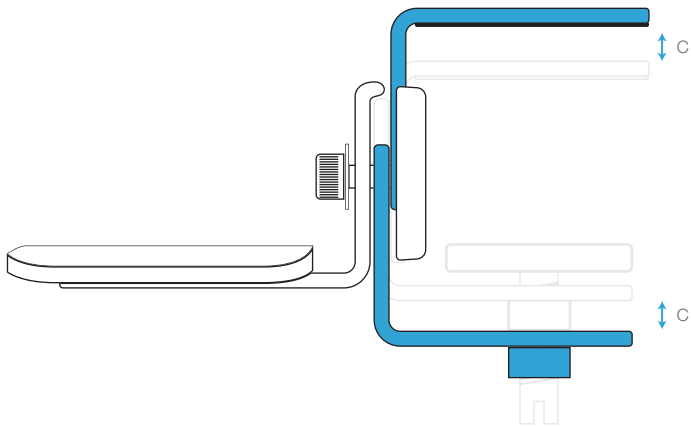

3 Tighten and Position the Clamp

Use the tool provided **A** and tighten the Clamp Arms **C** into position by turning the Central Bolt **B** clockwise until tight.

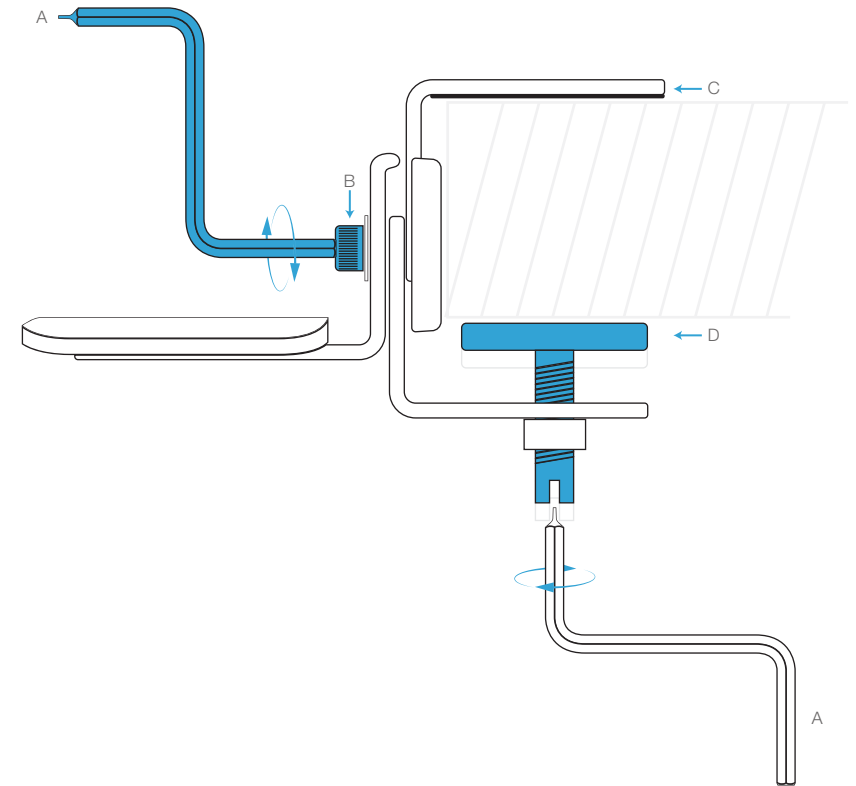

Now place the clamp onto desired surface and use the tool provided **A** and turn the Locking Bolt **D** clockwise until tight.

Tool (supplied)
Combined 4mm Allen/Hex Key
and flat head screwdriver

4mm Allen/Hex Key



Flat head screwdriver



BRAINWAVZ
HENGJA

BRAINWAVZ (Hong Kong) Unit B, 4/F Jumbo Industrial Building 189 Wai Yip Street, Kwun Tong, Hong Kong
support : help@yourbrainwavz.com

QUICK GUIDE **CLAMP SIZE ADJUSTMENT**

