

## Changing the batteries in the floor pressure mat transmitter

1. Use a screwdriver to remove the four screws on the back of the transmitter



2. Gently open the front cover (the front cover is attached to the main unit by a wire, so they will not completely come apart).




3. Remove the two batteries




4. Replace the batteries with two new Alkaline AAA batteries.

The flat surface of the battery (negative end) is pushed into the spring

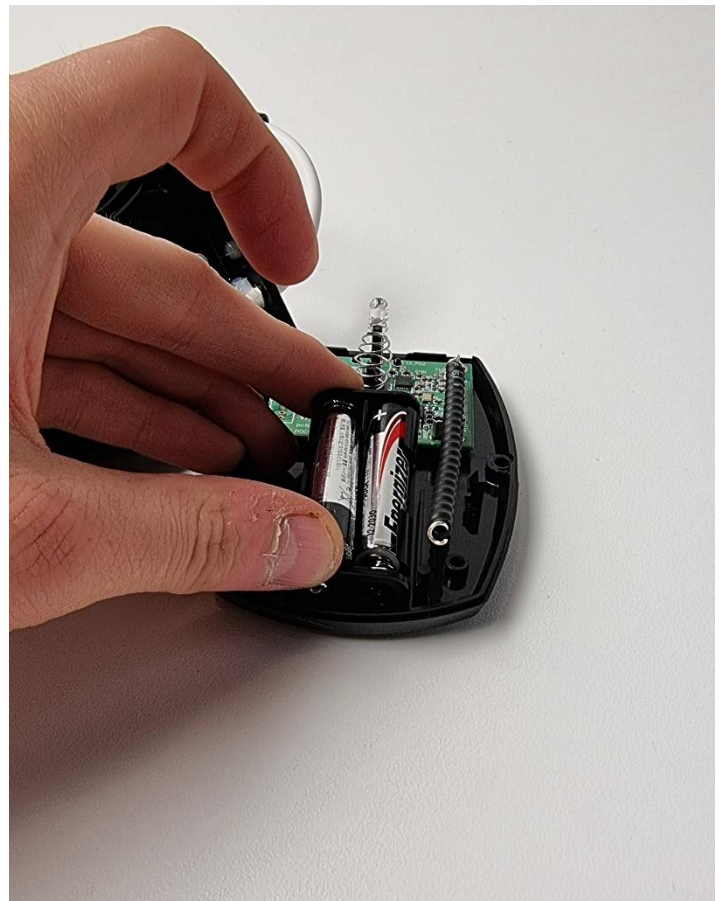


5. Replace the front cover:



a) Ensure that the spring is in place as shown by the red arrow:

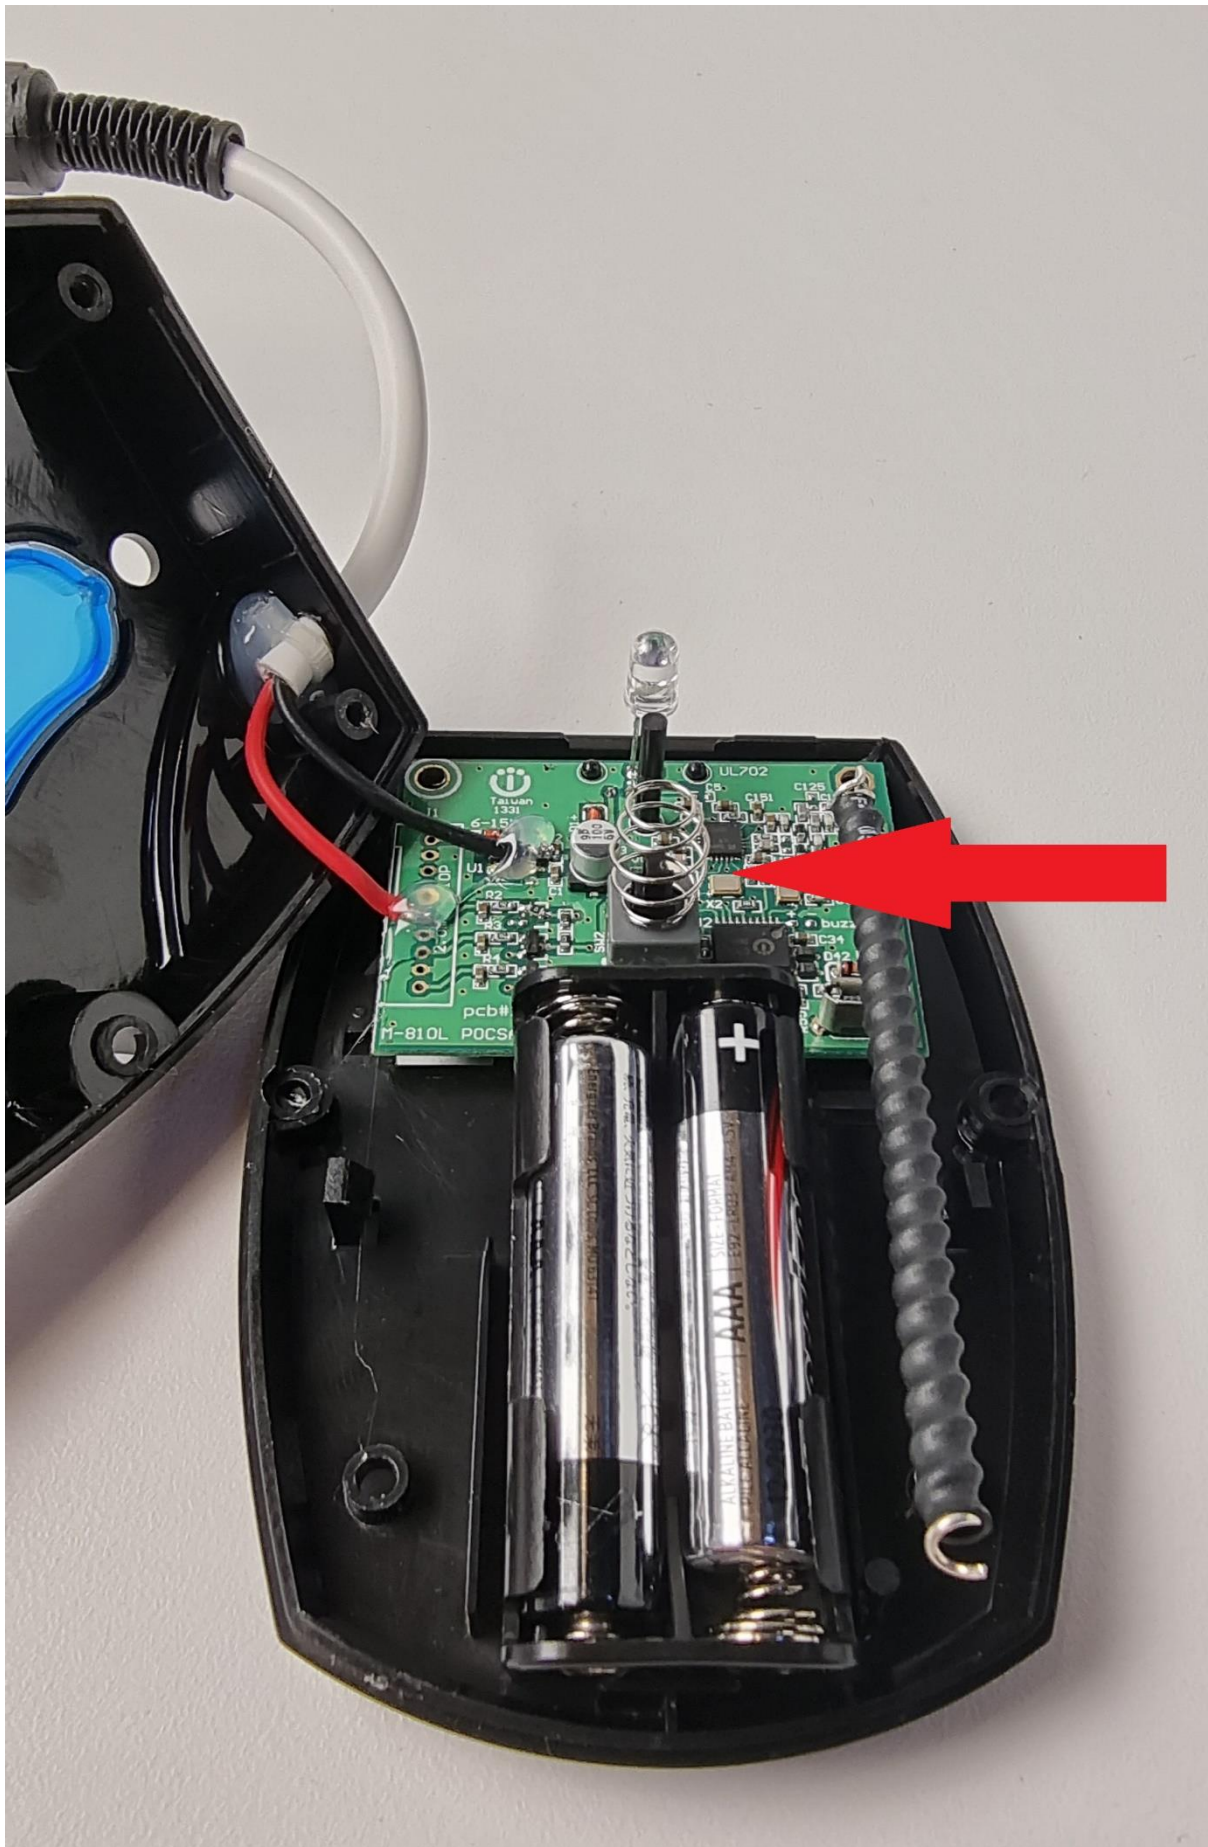

b) Hold the cover with one hand to keep the blue button in place:

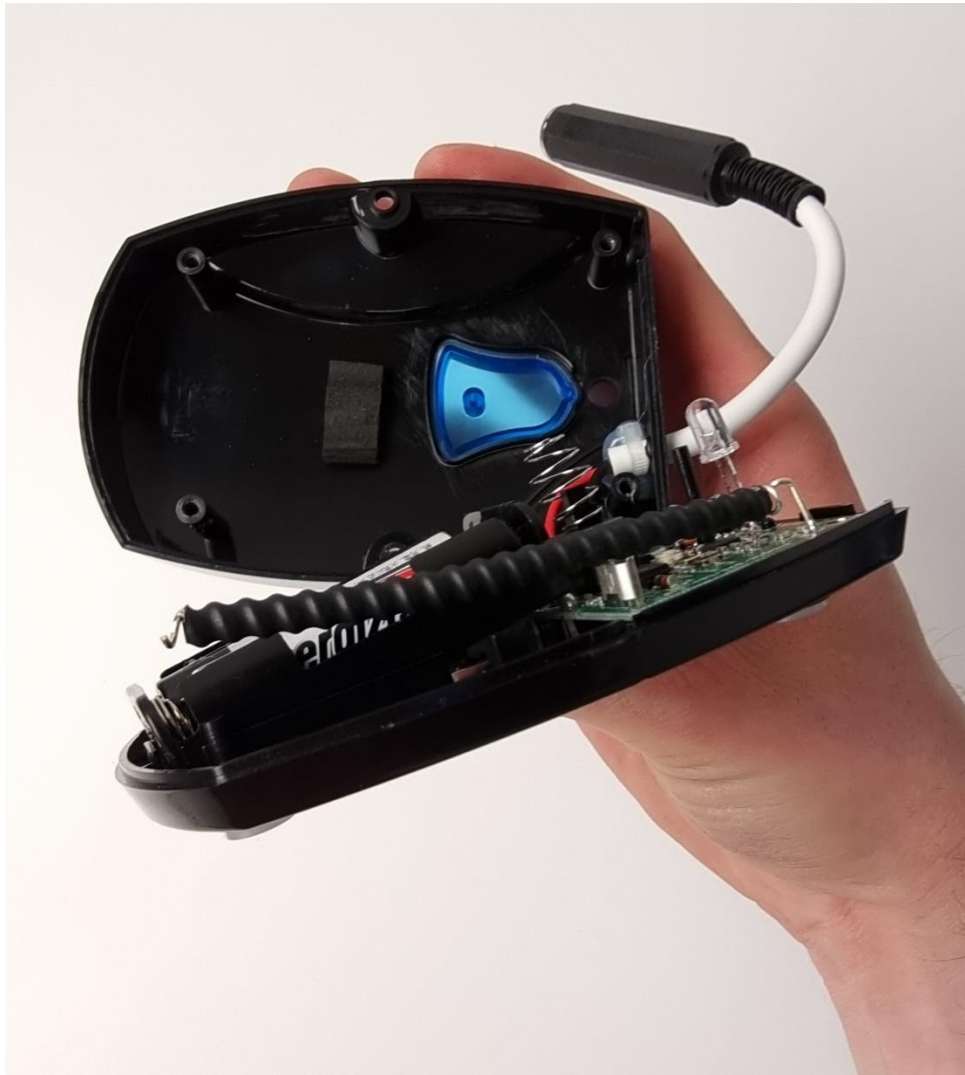

c) Place the base on top of the cover, ensuring the spring fits over the raised pillar on the back of the blue button:

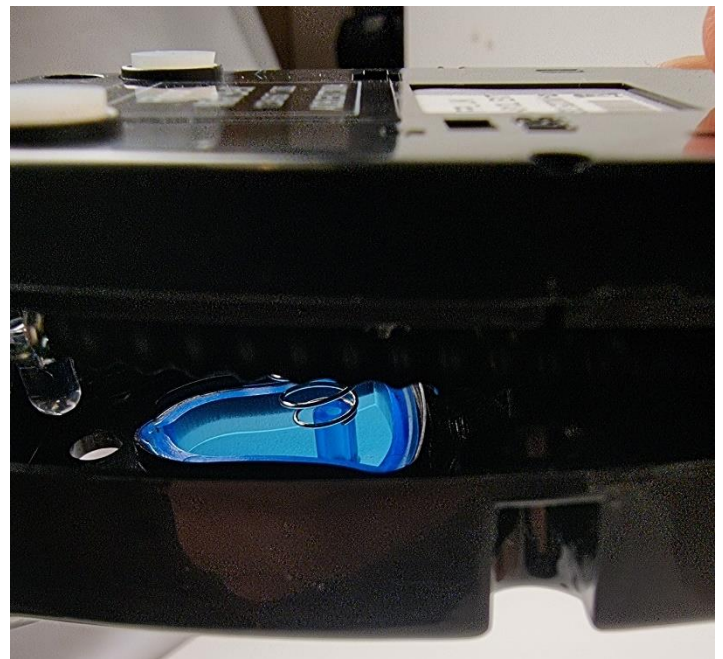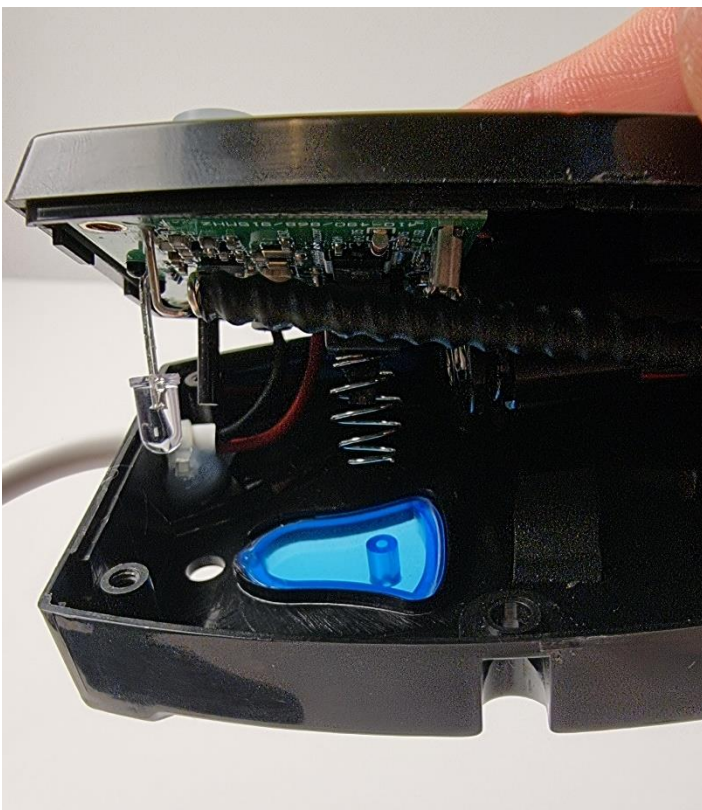

6. Replace the screws:

