

PG04 Sprinkler Operation Instruction Manual

ARC ADJUSTMENT

Adjustable heads are preset to approximately 180 degrees. Sprinklers may be adjusted with water on or off. It is recommended that initial adjustments be made before installation.

1. Using the palm of your hand, rotate the turret counterclockwise to the left stop to complete any interrupted rotation cycle.
2. Rotate the nozzle turret clockwise to the right stop, this is the fixed side of the arc. The nozzle turret must be held in this position for arc adjustments.

Note: The right stop does not change.

TO INCREASE THE ARC

1. Insert the plastic key end of the Pop Up wrench into the adjustment socket .
2. While holding the nozzle turret at the right stop, turn the wrench clockwise. Each full 360° turn of the wrench will increase the arc 90°.
3. Adjust to any arc between 40° and 360°.
4. The wrench will stop turning, or there will be a ratcheting noise, when the maximum arc of 360° (full circle) has been reached.

TO DECREASE THE ARC

1. Insert the plastic key end of the Pop Up wrench into the adjustment socket
2. While holding the nozzle turret at the right stop, turn the wrench counterclockwise. Each full 360° turn of the wrench will decrease the arc 90°.
3. Adjust to any arc between 40° and 360°
4. The wrench will stop turning, or there will be a ratcheting noise, when the minimum arc of 40° has been reached.

RADIUS / DISTANCE OF THROW

Insert the steel hex end of the Pop Up wrench into the radius adjustment screw. Turn the screw clockwise (into the stream of water) to decrease the radius, or counterclockwise to increase the radius. Radius can be reduced up to 25%.

Caution: Turning the adjustment screw clockwise more than five full turns may result in a lost radius adjustment screw

- K-Line System & Parts • Filters • Valves • Controllers
- Drippers • Sprinklers • Fertilizer Injectors • Fittings

PG04 Sprinkler Operation Instruction Manual

NOZZLE INSTALLATION

1. Insert the plastic key end of the Pop Up wrench into the lifting socket of the sprinkler and turn 90°. Pull the riser up to gain access to the nozzle socket.
2. Using the steel hex key of the Pop Up wrench, turn the radius adjustment screw counterclockwise to be sure it is not blocking the nozzle socket opening. If a nozzle is already installed, it can be removed by backing out the adjustment screw and turning on the water, or by pulling outward on the nozzle “ears” with a pair of needle-nosed pliers.
3. Slip the desired nozzle into the nozzle socket. Note that the socket is angled up 25°. The “ears” should be adjusted so that the nozzle range screw threads directly down between them. Then tighten the nozzle range screw. The raised bump with an arrow on the rubber cover will always indicate the location of the nozzle and direction of water flow when the sprinkler is retracted.

ALIGNING THE RIGHT (FIXED) SIDE OF ARC

If the right side of the arc is not properly aligned, the results may be a wet walkway or a dry turf area. The right side arc can easily be realigned. One way to realign the right stop is to turn the whole sprinkler body assembly and the fitting below it, left or right to the desired position. This may require temporary removal of the soil around the sprinkler to allow you to grip the sprinkler housing.

Another way to reset the right arc is to unscrew the body cap counterclockwise and remove the internal assembly from the body. Once removed, rotate the nozzle turret to the right stop, screw the internal assembly back into the body with the nozzle aligned to the right side of the area you want irrigated. At this point you have realigned the right arc stop, and you can adjust the left arc to an appropriate setting.

Note: It is not necessary to dig up and remove the whole sprinkler to realign the right arc.

- K-Line System & Parts • Filters • Valves • Controllers
- Drippers • Sprinklers • Fertilizer Injectors • Fittings

www.twss.co.nz

sales@twss.co.nz 0800 277 594