SAFARI SUKKAH INSTRUCTIONS

Opening Instructions

Remove the Sukkah from the bag, open it gently into a standing wall.



Open the 2 walls away from each other and pull the 4rth corner outwards.





Insert the 3 support bars around the 3 walls. Attach the Sukkah's back to a firm support with the strap provided.

Insert the 2 shorter support bars in the inner eyelids by the ceiling, place the Schach on top of the web.

Closing Instructions

Remove the Schach and the support bars.

PUSH 1 corner inward and fold the other 2 walls like a book.

Push the top end down towards the bottom end.



You now fold the Sukkah in 3 loops and pack it in its bag.



