

°cinder^{TV}

Information

Copyright © 2014 Home Inc. 0214

Precision Grill Info

Legal definitions

Desora INC ("Desora INC", "Desora", "we", "us," "the company", "Cinder"), a Delaware corporation, is the manufacturer of the Cinder Precision Grill. The company main offices are located in Massachusetts and the final assembly location is China. You ("user", "customer", "cook") accept all information contained in this document. If you disagree with any part, the Cinder should not be used and user takes responsibility for any damage or injury from use

The Cinder name and logo is a registered trademark of Desora INC

IMPORTANT SAFETY PRECAUTIONS

Thank you for your purchase of a Cinder Sensing Cooker. For your safety, and the safety of others, carefully read all instructions before use and save this document for future reference. Please exercise caution during cooking as high temperatures, oils, smoke, etc. can lead to injury. Cinder is a powerful, high-voltage appliance and care should be taken to avoid spills of water or other liquids, and the appliance should not be used if there is damaged or if there is any concern or evidence of possible damage.

Read all instructions.

Proper setup of the appliance:

- Remove and safely dispose of any packaging material and promotional labels before using the appliance for the first time.

Do not place the cooker near the edge of a bench or table during operation. Ensure the surface is level, clean, and free of water and other substances.

- Do not use the cooker on a sink drain board.
- Do not place the cooker on or near a hot gas or electric burner, or where it could touch a heated oven. Do not use inside a heated oven.
- Position the cooker at a minimum distance of 8 inches (20cm) away from walls, curtains, cloths, and other heat sensitive materials.
- Always operate the cooker on a stable and heat resistant surface. Do not use on a cloth-covered surface, near curtains, or other flammable materials.
- Always ensure the cooker is properly assembled before use. Follow the instructions provided in this instruction manual.

The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

Electrical safety:

- To protect against electric shock, do not immerse or partially immerse the cord, plugs, or appliance in water or any other liquid.
- Do not operate the cooker with a damaged cord or plug, after the appliance malfunctions, or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or adjustment.
- Do not let the cord hang over the edge of a bench or table, touch hot surfaces, or become knotted.
- Check that the electrical installation is compatible with the wattage and voltage stated on the bottom of the appliance.
- To ensure continued protection against risk of electric shock, connect to properly grounded outlets only.

Operational Safety:

- The lid and outer surfaces may be hot when the appliance is operating. Do not touch hot surfaces. Always operate the appliance using the handles or knobs.
- Do not place anything on top of the cooker when the lid is closed, when in use, and when stored.
- Always set the appliance to the off state, then unplug the power cord and cool completely if the appliance is not in use, before cleaning, before moving the appliance, before disassembling or assembling the appliance, or when storing the appliance.
- Keep the cooker clean. Follow the cleaning instructions provided in this instruction manual.

- When using the appliance on surfaces where heat may cause a problem, an insulating mat is recommended.
- Do not operate the cooker without the drip tray in place and sufficiently empty.
- Do not leave the appliance unattended when in use (at temperatures above 100 °C?)
- Do not place a hot cook plate in contact with water or on a fragile surface.
- Not intended for use by children. Close supervision is necessary when the appliance is use by or near children.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- For any maintenance other than cleaning, visit www.CinderCooks.com or call Cinder Customer Care.
- This appliance is intended for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system (other than the official Cinder mobile application).

Short Cord Instructions

This appliance is fitted with a short power supply cord to reduce the risk of personal injury or property damage resulting from pulling, tripping, or becoming entangled with a longer cord.

If an extension cord is used:

1. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
2. The cord should be arranged so that it will not drape over the countertop or table-top where it can be pulled on by children or tripped over unintentionally.
3. The extension cord must include a 3-prong grounding plug.

SAVE THESE INSTRUCTIONS

THIS APPLIANCE IS INTENDED FOR HOUSEHOLD USE ONLY

Any commercial use, inappropriate use, or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.

For your safety, this product conforms to all applicable standards and regulations.

Our company has a policy of ongoing research and development, and may modify the product without prior notice. For the most current version of instructions, visit our website.

Other instructions:

- Do not consume food that comes into contact with the parts marked with logo of an X. (For example, the plastic drip tray.)
- Only use parts or accessories provided with the appliance or bought from Cinder or a Cinder approved partner. Do not use any parts with other appliances or for other purposes.
- When using the appliance for the first time, wash the cook plate(s), pour a small amount of cooking oil on the plate and then wipe it with an absorbent kitchen towel.
- To avoid damaging the non-stick coating of the cooking plates, always use plastic or wooden utensils.
- Do not use aluminum foil or other objects between the cooking plates and the food being cooked.
- Do not place cooking utensils on the cooking surfaces of the appliance.
- Do not cook food in aluminum foil.
- Do not remove the drip tray while cooking. If the drip tray becomes full when cooking, let the appliance cool before emptying.
- On first use, there may be a slight odor and small amount of smoke during the first few minutes of heating. In these cases, ensure adequate ventilation and wait until there is no more smoke or odor before cooking.
- Cooking fumes may be dangerous for animals which have particularly sensitive respiratory systems, such as birds. We advise bird owners to keep them away from the cooking area.

Food Safety:

Food handling

Follow safe steps in food handling, cooking, and storage to prevent foodborne illness. In every step of food preparation, follow the four guidelines to keep food safe:

- **Clean** - Wash hands and surfaces often.
- **Separate** - Separate raw meat from other foods.
- **Cook** - Cook to the right temperature.
- **Chill** - Refrigerate food promptly.

Internal Temperature

The USDA has provided guidelines for internal cooking temperatures for a wide variety of foods, and these should be followed to prevent foodborne illness. You can't see, smell, or taste harmful bacteria that may cause illness.

The Cinder Precision Grill allows the cooking of food to a wide range of temperatures and various sources may provide recipes or temperatures which are below the USDA recommended guidelines - Cinder itself may be the provider of such information. However, Cinder does not endorse cooking at these temperatures. If the user wishes to cook to temperatures below the USDA guidelines, they assume all risks and responsibility of ensure their food is safe for con-

sumption. Care and precaution should be taken and user should read and understand food-borne illness and bacteria and pathogens, how temperature and time affects different bacteria and illness, and come to their own conclusion and acceptance before cooking this way.

The USDA recommends cooking to the following minimum internal temperatures as measured with a food thermometer before removing from heat source:

Food	Temperature
Beef, Pork, Veal, Lamb	145 °F (62.8 °C) and allow to rest for at least 3 minutes
Ground meats	160° F (71.1 °C)
Ham, fresh or smoked (uncooked)	145 °F (62.8 °C) and allow to rest for at least 3 minutes
Fully Cooked Ham (to reheat)	165 °F (73.9 °C)
All Poultry	165 °F (73.9 °C)
Eggs	160 °F (71.1 °C)
Fish & Shellfish	145 °F (62.8 °C)
Leftovers	165 °F (73.9 °C)

This information is dated Jan 15, 2015 and accessed via fsis.usda.gov. Please check the USDA website for more recent information.

Assembly and operation

Before First Use:

- Remove and safely discard any packaging material and promotional labels from the cooker.
- Wipe the cooking plates and drip tray with a soft damp sponge or wash with mild soap and water. Dry all parts thoroughly.
- Ensure the drip tray is properly installed in the appliance.
- Ensure the cooking plates are correctly installed and securely latched into position.
- Place the cooker on a flat, dry surface. Ensure there is a minimum of 8 inches (20cm) of space on all sides of the appliance.
- Unwind the power cord and insert the power plug into a grounded wall outlet.

NOTES:

* If the cooking plates are not properly installed, the LCD screen will display "Plate Removed". Remove the cooking plates from the appliance and re-install them so they securely lock into position. Always ensure the appliance is completely cool before releasing and removing the cooking plates.

- When the cooker is heating for the first time, it may emit a small amount of smoke. This is due to protective substances used for manufacturing and shipping. It is safe and not detrimental to the performance of the grill, but we recommend providing ample ventilation during the first heating cycle.

Removable cooking plates

The Cinder has two plate release buttons. These allow the user to independently unlatch and remove the cooking plates for easier cleaning or to install interchangeable cooking plates.

To use the plate release:

- Always ensure the appliance is completely cool before attempting to remove the cooking plates.
- Lift the handle and open the cooker to the fully open position.
- To remove the lower cooking plate, press the Lower Cook Plate Release Button (G). Carefully slide the plate off the appliance body.
- To remove the upper cooking plate, maintain grip of the upper edge of the cooking plate, press the Upper Cook Plate Release Button (H). Carefully remove the plate from the appliance.

WARNING: Failure to hold the upper plate when releasing the latch mechanism may result in the cooking plate falling off the grill in an uncontrolled manner.

Before cooking:

- Ensure the drip tray is properly installed in the appliance.
- Ensure the cooking plates are correctly installed and securely latched into position.
- Place the cooker on a flat, dry surface. Ensure there is a minimum of 8 inches (20cm) of space on all sides of the appliance.
- Unwind the power cord and insert the power plug into a grounded wall outlet.
Press the Power/Standby button to begin cooking.

Temperature warning

Cinder is capable of producing very high temperatures during normal operation. Extreme care should be taken to prevent burns, especially when searing. Both cooking plates can become extremely hot and capable of causing burns in extremely short time durations. Other parts of the Cinder may be hot as well, use common sense.

To protect certain components and long-term reliability of the system, Cinder will maintain the plates at searing temperature for 15 minutes at a time. Upon nearing the time limit of 15 minutes, the device will prompt the user to continue holding sear temperature by pressing the knob button. If the system does not receive any user input, it will automatically begin cooling down to 265°F (130°C).

Care & Cleaning

Ensure the appliance is off by pressing the Power/Standby button, and removing the power plug from the wall outlet. Allow the Cinder to completely cool before disassembling or cleaning. Always clean outer body, drip tray, and cooking plates clean after each use to prevent a build-up of food residue or particles.

Water may damage the electronics and cooking plate and is not covered under warranty.

NOTE: Do not use abrasive cleansers or metal scouring pads on any surface of the appliance, including the cooking surface. These will scratch the surfaces and damage the coatings on the parts and such damage is not covered under warranty. Palate Home reserves the right to make ultimate judgement on whether an item is entitled to warranty repair, and may substitute a refurbished item if it wishes.

WARNING: Do not immerse the body, power cord, or power plug in water or any other liquid as this may cause electrocution or other harm and may damage the unit and is not covered under warranty.

Cleaning the outer body

Wipe the outer body with a soft, damp cloth or sponge. A non-abrasive liquid cleanser or mild soap solution may be used to clean stains or grease. Apply the cleanser to the sponge, and not the appliance surfaces directly. Rinse away any cleaning solutions with a slightly damp clean sponge. Let all surfaces dry thoroughly prior to inserting the power plug into a wall outlet. Do not use bleach, as it may cause corrosion or discoloration to certain components.

Cleaning the drip tray

After each use, remove the drip tray and discard content. Wash the tray in warm soapy water with a soft sponge or kitchen brush. A non-abrasive liquid cleanser may be used to clean stains or grease. Rinse and dry thoroughly. Always ensure the drip tray is re-installed in the appliance after cleaning and prior to inserting the power plug into a wall outlet.

WARNING: Extreme caution must be used when handling the drip tray containing hot fats and juices. These may cause burns or other bodily damage.

Cleaning the cooking plates

Wipe the cooking plates with a soft damp cloth or disposable kitchen towels to remove food residue.

Alternatively, release and remove the cooking plates:

Always ensure the appliance is completely cool before attempting to remove the cooking plates.

Lift the handle and open the cooker to the fully open position.

To remove the lower cooking plate, press the Lower Cook Plate Release Button. Carefully slide the plate off the appliance body.

To remove the upper cooking plate, maintain grip of the upper edge of the cooking plate, press the Upper Cook Plate Release Button (#xx). Carefully remove the plate from the appliance.

NOTE: failure to hold the upper plate when releasing the latch mechanism may result in the cooking plate falling off the grill in an uncontrolled manner.

WARNING: Extreme caution must be used when handling cooking plate(s). They may be extremely hot and may cause burns or other bodily damage upon contact.

Wash the cooking plate in warm soapy water with a soft sponge or kitchen brush. Rinse and dry thoroughly.

WARNING: Always dry the cooking plate immediately after washing or rinsing. Do not soak or immerse or clean the cooking plate(s) in a dishwasher appliance. Doing this will void the warranty.

Do not use bleach or other corrosive/caustic cleaning agents, as it may cause corrosion or discoloration to components and is not covered by warranty. This would void the warranty.

Warranty

Desora INC stands behind their products for normal usage and cooking. Warranty does not apply to any damage from abuse, water damage, dropping the unit. The warranty is only valid to the original purchaser with all original documentation and packaging. Warranty may not cover shipping and handling or other fees. Palate Home reserves the right to determine, in its sole discretion, whether damage is covered by warranty and whether to replace with a new, re-furbished, or similar product and what charges or fees may be appropriate. The website will contain the most up to date version of the warranty, and in the case of discrepancy, super-sedes this manual.

Regulatory Information

United States

Cinder Model CSC1NR-1K8-2-12

FCC compliance statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important: Changes or modifications to this product not authorized by Palate could void the electromagnetic compatibility (EMC) and wireless compliance and negate your authority to operate the product. This product has demonstrated EMC compliance under conditions that included the use of compliant peripheral devices and shielded cables between system compo-

nents. It is important that you use compliant peripheral devices and shielded cables between system components to reduce the possibility of causing interference to radios, televisions, and other electronic devices.

FCC ID: 2AHJ8CINDER001

To contact the responsible party for Cinder, please write to:

Desora INC
877 Main St
No. 154N
Cambridge, MA 02139

Disposal/Recycling

Please dispose of this product properly, according to local disposal/recycling guidelines. Recyclable parts are marked with the proper symbols.

Copyright 2017 Desora INC