






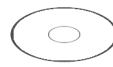






PART	PART NO.	QTY
	<b>A</b>	<b>1</b>
	<b>B</b>	<b>2</b>
	<b>CA</b>	<b>1</b>
	<b>D</b>	<b>1</b>
	<b>E</b>	<b>2</b>

PART	PART NO.	QTY
	<b>H</b>	<b>2</b>
	<b>I</b>	<b>4</b>
	<b>J</b>	<b>4</b>
	<b>K</b>	<b>6</b>
	<b>L</b>	<b>2</b>
	<b>M</b>	<b>2</b>


## Step 1

Take the axle (CA) and wheel (B) and slide the axle through the centre hole. Add a washer (M) and then insert the locking pin (L) into the hole in the axle.

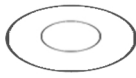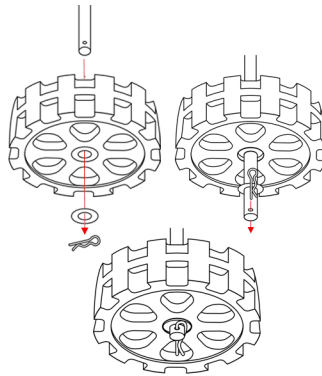


## Step 2

Take the axle with the wheel and insert the other end of the axle through the holes at the bottom of the cart ensuring to insert all the way through to the holes at the other side of the cart.

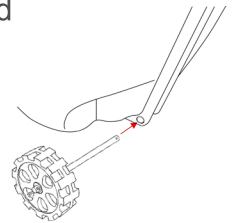

## Step 3

As in step 1, take the wheel (B) and slide the axle through the centre hole. Add a washer (M) and then insert the locking pin (L).

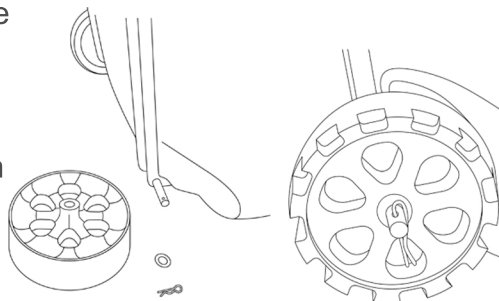


## Step 4

Take the bent handle (D) and insert both rods (E) into the handle. Then insert the shorter bolts (H) into the hole and close with the wing nuts (K).



## Step 5

Finally insert the assembled handle into the tub and secure the 4 long bolts (I) with the washers (J) and the wing nuts (K).

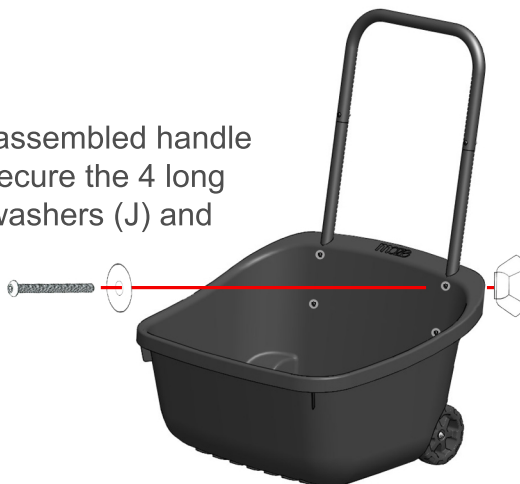

If you encounter missing or broken parts please visit our website and click on the spare parts link (under PRODUCTS heading) to order the part