

Front Seat Cover Installation Manual

1 Install the required plastic round discs and hooks as shown.



2 Open the seat cover and put it on the seat.



3 Pull the zipper on both sides to the appropriate position and stick on Velcro.



4 Insert the plastic round discs into the seat gap, push it through the gap and rotate it 90° to fix.



5 First wrap the edge of the seat cover, then extend the two hooks under the seat to hook the railing.



6 Fasten the buckle of the headrest cover, then adjust the position and finished.



Rear Seat Cover Installation Manual

The rear seat can be installed in order from cushion to backrest.

1 Install the required plastic round discs as shown (The middle part of the backrest and the two sides are connected by zipper, and the cushions are connected by Velcro).



2 Slip the cushion over the chair and tuck the elastic into the seat gap to the back of the seat.




3 Lift the bench up and connect the two elastics with buckle and the side elastics as shown (The right seat cover is the same).



4 Attach the elastic to the plastic round discs, put down the bench and the cushion is finished.



5 Install the backrest, fasten the buckles of headrest cover.

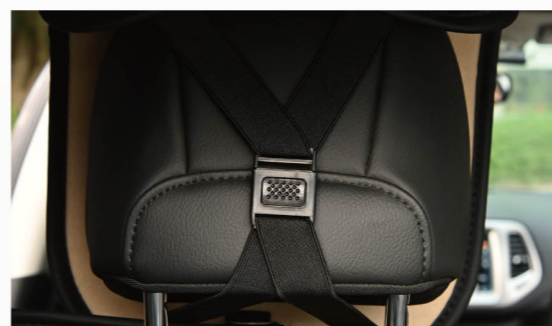

6 Push the plastic round discs into the gap (The right seat cover is the same) and the rear seat cover is finished.



Note:

1. When the seat cover is installed, the heated seats and ventilated seats of the original car will not work.
2. There are airbags on the side of the front seats, and there may be a potential safety hazard when the seat cover is installed.
3. Seat cover installation affects the function of the rear seat armrest box. If you need to use the armrest box, you can unzip the two sides of the middle part and remove it.