


# Krista High Beam and Horn Options:

## To Install Without The High Beam or Horn:

Simply tuck unused white wire away in a neat fashion that does not create an electrical hazard.


## How To Add Horn To A High Beam Only Harness:

Connect two diodes as shown below to the white wire from the pot to two diodes as shown below. We recommend using rectifier diode 1N4004, available from your local Radio Shack. If you have trouble finding that diode, any rectifier diode capable of handling 12V should work. An adapter piece containing these diodes is available for purchase from us if you'd rather buy a pre-made harness.

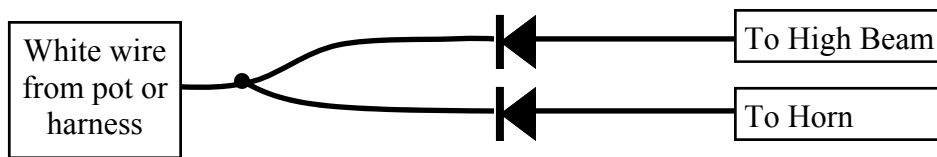

## How To Add An Enable/Disable Switch To The High Beam/Horn Feature:

Splice the white wire(s) and add switch(es) as shown below. Warning: do not connect the two white wires together unless adding diodes as shown above. If adding switches to BOTH high beam and horn, you will need 2 switches or a double pole double throw switch.

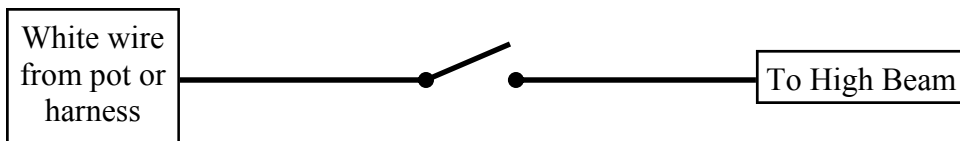

## How To Add A Manual High Beam Activation Switch:

Install a switch between the white wire and any switched 12V+ source. Note: if installing in conjunction with the automatic high beam option, diodes must be used as shown above if using the same white wire for both.

