




Jackery Giant+

User Guide

Product Overview

Product Layout

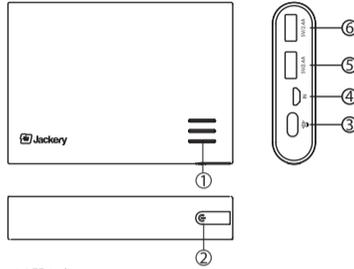

1. LED indicator
2. Power button
3. LED Flashlight
4. Micro USB input port
5. USB output port
6. USB output port

Technical Specification

Capacity: 12000mAh
Dimensions: 4.3 x 3.1 x 0.8 inch
Weight: 10.4 oz
Input: Micro USB 5V / 2A
Output 1: USB 5V / 2.4A
Output 2: USB 5V / 2.4A
Power indication: 3 LED indicators


Instruction

Package Content

- Jackery Giant+ Battery Pack
- Micro USB Charging Cable
- User Guide & Warranty
- Thank You Card

Charging Jackery Giant+


To charge the Jackery Giant+, use the micro USB charging cable to connect the Giant+ to a USB AC adapter or computer USB port. The LED indicator will show on or start blinking. When all three LEDs are on solid, charging is complete. It takes about 6 hours to fully charge the Giant+.

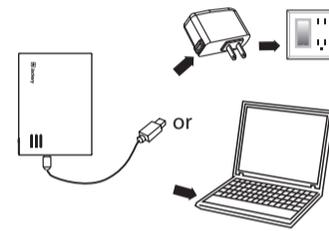

Instruction

Charging Your Device

To charge your device, use a USB charging cable to connect the Giant+ to your device. It will automatically recharge your devices and stop charging once it complete.

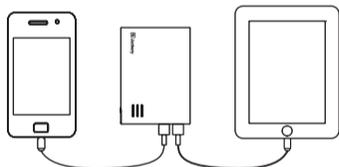

Check the Remaining Battery

Press the power button once to check the remaining battery by reading the LED indicators from right to left.

- 1 LED blinking: < 10%
- 1 LED on : 10%-33%
- 2 LEDs on: 33%-66%
- 3 LEDs on: 66%-100%

LED Flashlight Function

Long press the power button to turn on the LED flashlight. Long press to turn it off as well.

Instruction

To keep you never out of power, it's time to recharge the battery when there is one LED light blinking. We highly recommend you to recharge the battery at least once a month.

Follow @jackeryinc on Twitter & Facebook
www.facebook.com/jackeryinc for the latest Jackery news, tips and updates! You can also visit www.jackery.com for more info.



Warning

Read all instructions and warnings prior to using this product. Failure to read and follow these safety instructions could result in fire, explosion, electrical shock or other hazard, causing serious and/or fatal injury and/or property damage.

1. Do not modify, disassemble, open, drop, crush, puncture or shred the product.
2. Do not expose the product to rain or water.
3. Keep away from open flame or sunlight to prevent heat build-up.
4. Keep away from high voltage devices.
5. This product is not a toy, keep away from children. Ensure that all persons who use the product read and follow these warnings and instructions.

Warranty

This product is covered by a limited warranty from Jackery for the original purchaser that covers the product from defects in workmanship and materials for 24 months from the date of purchase (damages through normal wear and tear, alteration, misuse, neglect, accident, service by anyone other than the authorized service center, or act of God are not included).

During the warranty period and upon verification of defects, this product will be replaced when returned with proper proof of purchase.

Contacts us

For any inquiries or comments concerning our products, please send an email to hello@jackery.com, and we will respond to you as soon as possible. If there is any quality-related issue with the product, you may request a REPLACEMENT or REFUND by submitting a request form at www.jackery.com/support/.