

DIGITAL DRUMS

INSTRUCTION MANUAL

Congratulations on your new drum pad!
Please read this guide carefully before you begin playing.

BEFORE YOU PLAY

INSTALL BATTERIES

Always ask an adult to install the batteries for you. This drum pad uses 4 size AA (1.5 V) batteries (not included). The battery compartment is located on the bottom panel of the drum pad.

Loosen the screw on the battery compartment door with a Phillips head screwdriver. Open the door and refer to the image inside to install the batteries.

Be sure to install the negative (-) and positive (+) ends of each battery correctly. Incorrect installation can damage the drum pad or cause an electrical hazard. Close the compartment door and tighten the screw.

Note: If the batteries start to wear out, the drum pad's sound may deteriorate. If this happens, install a new set of batteries. If you are not going to play for a long time, remove the batteries from the drum pad. Do not mix old and new batteries. Do not mix alkaline standard (carbon-zinc) and rechargeable (nickel-cadmium) batteries.

IMPORTANT

This unit is programmed to power on when you press any key except the five drum pads.

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ THIS SECTION CAREFULLY.

1. Read and follow these instructions.
2. Do not use this device near water.
3. Clean only with a dry cloth.
4. Do not use near any heat sources such as radiators, heaters, stoves, or other heat producing machinery.
5. Refer all servicing to qualified service personnel. Servicing is required when the drums have been damaged in any way, such as when liquid has been spilled on the drum, they have been exposed to rain or moisture, they do not operate normally, or they have been dropped.
6. To reduce the risk of fire and electric shock, do not expose this apparatus to rain or moisture.

WARNINGS

1. Do not change the parts without professional instructions. Any change may cause malfunctions.
2. Keep the wrapping bag out of the reach of children to avoid a choking hazard.
3. Always move the drum pad carefully to avoid damage to outer covering and inner components.
4. The drum pad should not come in contact with acid or alkali. It should not be operated where there is corrosive or excessively moist air around to avoid corrosion of the electrical contacts.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. There is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet or a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CUSTOMER ASSISTANCE

PHONE: 888.551.1115
EMAIL: INFO@FIRSTACT.COM
FIRSTACT.COM

FIRST ACT INC.
745 BOYLSTON STREET
BOSTON, MA 02116

No part of this publication may be reproduced in any form or by any means without the prior written permission of First Act Inc. First Act and the First Act logo are trademarks of First Act Inc. © 2015 First Act Inc. All rights reserved.

1. ON/OFF

Press ON and OFF buttons to turn power ON and OFF.

2. RHYTHM VOLUME

Press the RHYTHM VOLUME UP/DOWN buttons to adjust the rhythm volume. There are 5 volume levels.

3. DRUM VOLUME

Press the DRUM VOLUME UP/DOWN buttons to adjust the drum volume. There are 5 volume levels.

4. DEMO

Press the DEMO button, and the drum pad will play a rhythm and a pre-recorded drum pattern for you to learn.

There are 3 demo songs to play, just hit the DEMO button to cycle through the songs.

Press STOP to exit the DEMO.

5. STOP

Press stop to end the recording function or to stop a rhythm.

6. RECORD AND PLAY (UP TO 16 NOTES)

Press RECORD to begin the recording function.

You will hear a metronome keeping the beat. Play some beats, and they will be recorded.

Press PLAY to play back the recorded notes. Press STOP to end the recording function.

7. SOUND EFFECTS

Push the SCRATCH 1 & 2 buttons to make cool sound effects.

8. TEMPO

Press TEMPO to speed up or slow down the tempo. There are 5 tempo levels.

9. DRUM MODE

Press any of the DRUM buttons to select a drum style for the drumpads. There are 6 different styles.

10. RHYTHM

Press any of the RHYTHM buttons to select a rhythm. Each key has 2 rhythm styles. Press the key to switch between the 2 styles.

11. DRUM PADS

Tap drum pads to play the drums.

12. MASTER VOLUME

Turn knob to adjust the master volume.

13. HEADPHONES

To use headphones (included), insert a 1/8" headphone plug into the jack labeled PHONE on the rear of the drum pad.

14. MP3 INPUT

The 1/8-inch input jack lets you plug in your MP3 player and play along with your favorite tunes.

15. FOOT PEDAL

Plug the foot pedal into the jack labeled PEDAL on the rear of the drum pad. This pedal functions like one of the drum pads, with a kick drum sound. On an acoustic drum kit, a kick drum is placed on the floor and played with a pedal.

