

Digital Keyboard

Instruction Manual

Congratulations on your new digital keyboard!

Please read this guide carefully before you begin playing.

Before You Play

Install Batteries

Always ask an adult to install the batteries for you. This keyboard uses 3 size AA (1.5 V) batteries (not included). The battery compartment is located on the bottom panel of the keyboard.



Loosen the screw on the battery compartment door with a Phillips head screwdriver. Open the door and refer to the image inside to install the batteries.

Be sure to install the negative (-) and positive (+) ends of each battery correctly. Incorrect installation can damage the keyboard or cause an electrical hazard. Close the compartment door and tighten the screw.

Note: If the batteries start to wear out, the keyboard's sound may deteriorate. If this happens, install a new set of batteries. If you are not going to play for a long time, remove the batteries from the keyboard. Do not mix old and new batteries. Do not mix alkaline standard (carbon-zinc) and rechargeable (nickel-cadmium) batteries.

Automatic Power Off

If no keys are pressed for 1 minute, the keyboard will power off. Press any key to power back on.

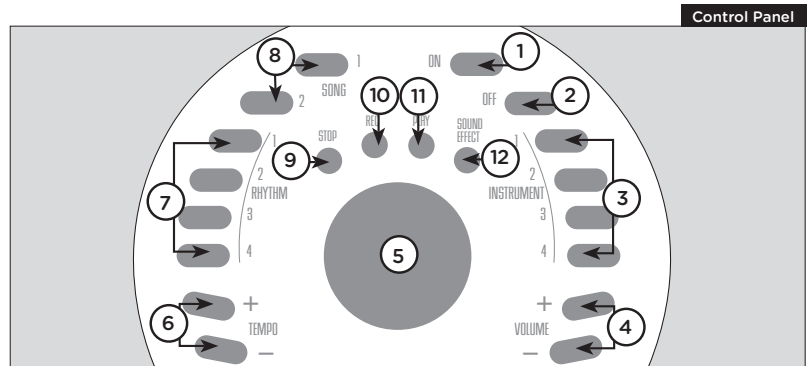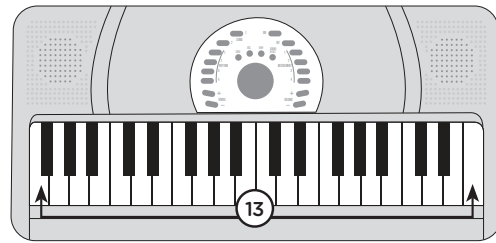

- | | | |
|-------------------------|---------------------|------------------|
| 1. On | 6. Tempo | 11. Play |
| 2. Off | 7. Rhythm Selection | 12. Sound Effect |
| 3. Instrument Selection | 8. Song Selection | 13. Keys |
| 4. Volume | 9. Stop | |
| 5. Power On Light | 10. Record | |

Playing the Digital Keyboard

On

To play, press the ON button. You will hear a starting sound when the keyboard turns on and the POWER ON LIGHT will illuminate.

Off

To power down, press the OFF button.

Instrument Selection

To select an instrument sound, press one of the 4 INSTRUMENT buttons.

Each button has 4 instrument sounds. Press the button repeatedly to scroll through the 4 sounds.

Volume

Press the VOLUME +/- buttons to make the sound louder or softer.

Tempo

Press the TEMPO +/- buttons to speed up or slow down any selected rhythm.

Rhythm Selection

To select a rhythm, press one of the 4 RHYTHM buttons. Each button has 5 rhythms. Press the button repeatedly to scroll through the 5 rhythms.

Song Selection

To select a demo song, press one of the 2 SONG buttons. Each button has 12 songs. Press the button repeatedly to scroll through the 12 songs.

Record & Play

Press the RECORD button. You will hear a beep. You can now record a tune by pressing the keys. You can record up to 24 notes. When you reach 58 notes, you will hear 2 beeps.

To play back what you recorded, press the PLAY button.

Sound Effect

To add an echo effect to the keys, press the SOUND EFFECT button.

Stop

Press STOP to exit any mode.

Important Safety Instructions

Please read this section carefully.

- Read and follow these instructions.
- Do not use this device near water.
- Clean only with a dry cloth.
- Do not use near any heat sources such as radiators, heaters, stoves, or other heat producing machinery.
- Refer all servicing to qualified service personnel. Servicing is required when the product has been damaged in any way, such as when liquid has been spilled on it, it has been exposed to rain or moisture, it does not operate normally, or it has been dropped.
- To reduce the risk of fire and electric shock, do not expose this apparatus to rain or moisture.

Warnings

Do not change the parts without professional instructions. Any change may cause malfunctions.

Keep the wrapping bag out of the reach of children to avoid a choking hazard.

Always move the product carefully to avoid damage to outer covering and inner components.

The product should not come in contact with acid or alkali. It should not be operated where there is corrosive or excessively moist air around to avoid corrosion of the electrical contacts.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Customer Assistance

Phone/888.551.1115

Email/info@firstact.com

Colors and specifications depicted on this guide may vary slightly from your product.

First Act Inc.

745 Boylston Street

Boston, MA 02116 USA

No part of this publication may be reproduced in any form or by any means without the prior written permission of First Act Inc.

First Act, First Act Discovery, and the First Act Discovery logo are trademarks of First Act Inc.

© 2010 First Act Inc. All rights reserved.

F11267.M.01