



MICKEY MOUSE MICROPHONE INSTRUCTION MANUAL

Congratulations on your new Mickey Mouse microphone!
Please read this guide carefully before you begin playing.

BEFORE YOU PLAY

INSTALL BATTERIES

When batteries begin to wear out, they should be replaced.

Always ask an adult to install batteries. This product uses 3 size AAA (1.5 V) batteries (included).

The battery compartment is located on the back of the product.

Use a Phillips head screwdriver to open the compartment door.

Install batteries according to image inside of compartment.

Negative (-) and positive (+) ends of each battery must be installed correctly, or an electrical hazard and/or damage to the product could result.

Close compartment door and tighten screw to secure.

Note: If the batteries wear out, the product's sound may deteriorate. If you are not going to play for a long time, remove the batteries from the product. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

IMPORTANT: DEMO/PLAY switch is located on back panel. Switch to PLAY before use.

MICROPHONE

1. BUTTON 1

Press BUTTON 1 for a cheering sound effect!


2. BUTTON 2

Press BUTTON 2 to make your voice sound like Mickey!

3. ON/OFF

Press this button to turn the mic on and off.

4. SPEAKER

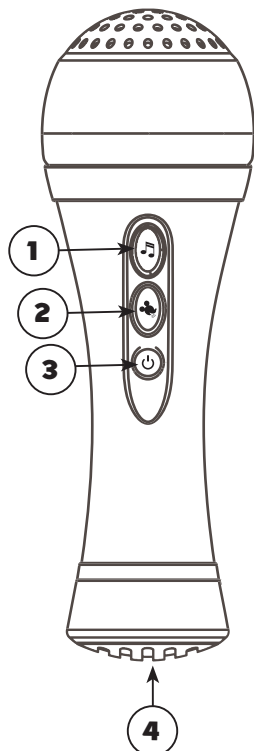

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ THIS SECTION CAREFULLY.

Read and follow these instructions.

- Do not use this device near water.
- Clean only with a dry cloth.
- Do not use near any heat sources such as radiators, heaters, stoves, or other heat producing machinery.
- Refer all servicing to qualified service personnel. Servicing is required when the product has been damaged in any way, such as when liquid has been spilled on it, it has been exposed to rain or moisture, it does not operate normally, or it has been dropped.
- To reduce the risk of fire and electric shock, do not expose this apparatus to rain or moisture.

WARNINGS

Do not change the parts without professional instructions. Any change may cause malfunctions.

Keep the wrapping bag out of the reach of children to avoid a choking hazard.

Always move the product carefully to avoid damage to outer covering and inner components.

The product should not come in contact with acid or alkali. It should not be operated where there is corrosive or excessively moist air around to avoid corrosion of the electrical contacts.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CUSTOMER ASSISTANCE

Phone: 888.551.1115
Email: info@firstact.com

First Act Inc.
745 Boylston Street
Boston, MA 02116 USA
firstact.com

© Disney
Visit the Disney website at www.disneyjunior.com

No part of this publication may be reproduced in any form or by any means without the prior written permission of First Act Inc.

Colors and specifications depicted on this guide may vary slightly from your product.

© 2012 First Act Inc.
All Rights Reserved.
MO855.M.01