

Industrial Air Circulator Instructions

For All Utility Fan Models

READ AND SAVE THESE IMPORTANT INSTRUCTIONS

It is important that the following safety precautions be followed when using this product:

- ALWAYS unplug unit for cleaning or maintenance.
- ALWAYS unplug unit when not in use.
- ALWAYS unplug when moving unit from one location to the next.
- DO NOT use an extension cord. Plug fan into a properly rated electrical outlet.
- DO NOT place foreign objects through guards into blades.
- DO NOT allow unit to become wet or damp.
- DO NOT use this fan with any solid state speed control device.

WARNING: To reduce the risk of fire, electrical shock, or injury to persons, observe the following:

- Use this unit only in the manner intended by the manufacturer. If you have questions, contact the manufacturer.
- Before servicing or cleaning unit, switch power off at service panel and lock service panel to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag to the service panel.

INSTALLATION INSTRUCTIONS

For installation on wood structures, use a 1/2" lag screw of appropriate length for the application.

For installation on steel structures, use a 1/2" bolt of the appropriate length for the application, in combination with a flat washer, a lock washer and a 1/2" nut.

For installation on masonry structures, use a 1/2" lag screw, in combination with a lag shield, of appropriate length for the application.

In all cases, it is recommended that a flat washer be placed on both sides of the fan yoke to assist in smooth rotation.

OPERATING INSTRUCTIONS

This unit is equipped with a three (3) speed selector switch, which allows you to select a desired amount of air delivery. During normal operation it is not uncommon for the motor to be warm to the touch. The motor is equipped with a thermo-protector, and will automatically de-energize the fan if it were to over heat for any reason. If this should happen immediately disconnect unit from power outlet.

CLEANING/MAINTENANCE INSTRUCTIONS

All maintenance should be done by either TPI Corporation or a qualified electrician. The motor bearings are lubricated at the factory and should not require any additional lubrication. However, if bearing lubrication is required, apply a small amount of a synthetic oil to the motor bearing.


Use a screwdriver to pry the hooks of the front guard away from the serial wires of the rear guard. The front guard will then separate from the rear guard with no trouble. Use a mild detergent to clean the blade and guards, using the same prying method to snap front guard hooks on rear guards. Allow fan to completely dry before next use.

Reference assembly drawing and parts list on the reverse side of this instruction sheet. Save these important instructions. Your TPI Air Circulator carries a one year warranty.

For additional information on TPI Products or replacement parts, call TPI Customer Service Department at 1-800-251-0382 or write the address below.

PO. Box 4973 • Johnson City, Tennessee 37602-4973 • 423-477-4131 • FAX 423-477-0683

P/N: 9890
ECO 1-4726

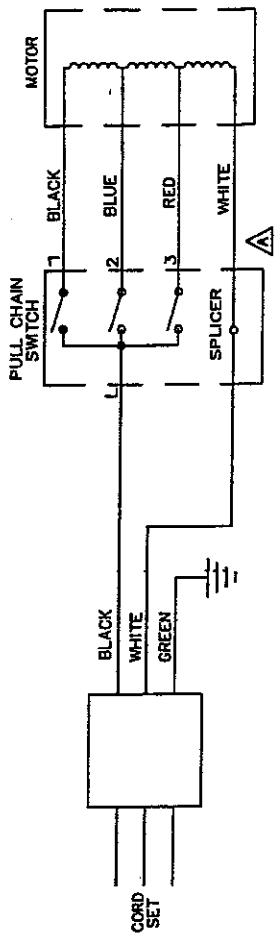


SWITCH WIRING
 1 = CORD, BLACK
 2 = MOTOR, BLACK
 3 = MOTOR, BLUE
 SPICER FOR MOTOR/CORD, WHITE
 TAB ON SWITCH PLATE ATTACH WITH ITEM #15.

WIRING DIAGRAM

ITEM NO.	VARIATION					QTY	TPI P/N	DESCRIPTION
	-001	-002	-003	-004	-005			
1						1	58056-001	YOKE
1						1	58056-002	YOKE
1						1	58056-003	YOKE
2						1	63754-001	FRONT GUARD
2						1	63755-001	FRONT GUARD
2						1	63761-001	FRONT GUARD
3						1	63753-001	REAR GUARD
3						1	63758-001	REAR GUARD
3						1	63870-001	REAR GUARD
4						1	58061-001	MOTOR
4						1	58043-001	MOTOR
4						1	58158-001	MOTOR, TOTALLY ENCLOSED
4						1	58181-001	MOTOR, TOTALLY ENCLOSED
4						1	58188-001	MOTOR, TOTALLY ENCLOSED, 277V
5						1	58049-004	DATA LABEL
5						1	58049-004	DATA LABEL
5						1	58049-036	DATA LABEL
5						1	58049-065	DATA LABEL
5						1	58049-129	DATA LABEL
5						1	58049-084	DATA LABEL - NON UL
6						1	29904-006	FAN BLADE ASSEMBLY
6						1	29904-007	FAN BLADE ASSEMBLY
6						1	29904-017	FAN BLADE ASSEMBLY
7						1	43886-001	CENTER LOGO PLATE
7						1	43901-001	CENTER LOGO PLATE
8						1	43887-001	CENTER LOGO LABEL
8						1	43902-001	CENTER LOGO LABEL
9						1	43883-001	SWITCH PLATE LABEL
10						1	58071-001	SWITCH
11						1	58047-001	CORD SET ASSEMBLY
12						1	43882-001	STRAIN RELIEF
13						2	42502-001	BOLT, 1/4" - 20 X 1.250 CARRAGE
14						2	43884-001	RUBBER BUSHING
15						2	4901	NUT, 1/4" - 20 HI-CROWN NYLOCK
16						4	3904	NUT, #8-32 NYLOCK
16						2	3377	NYLON TY-RAP
18						1	3159	#6 x 1/4 TYPE A SCREW
FOLLOWING ITEMS ARE NOT SHOWN:								
19						1	58044-001	CARTON
19						1	58044-002	CARTON
19						1	58213-001	CARTON
20						2	58108-001	CARTON INSERT
20						2	58108-002	CARTON INSERT
20						2	58215-001	CARTON INSERT
20						2	58048-004	CARTON LABEL
20						1	58048-005	CARTON LABEL
20						1	58048-045	CARTON LABEL
20						1	58048-075	CARTON LABEL
20						1	58048-171	CARTON LABEL
20						1	58048-074	CARTON LABEL - NON UL
20						1	1198	TAPE, CARTON
20						1	9890	INSTRUCTION SHEET
20						1	1204	NYLON TY-RAP

VARIATION -001 SHOWN

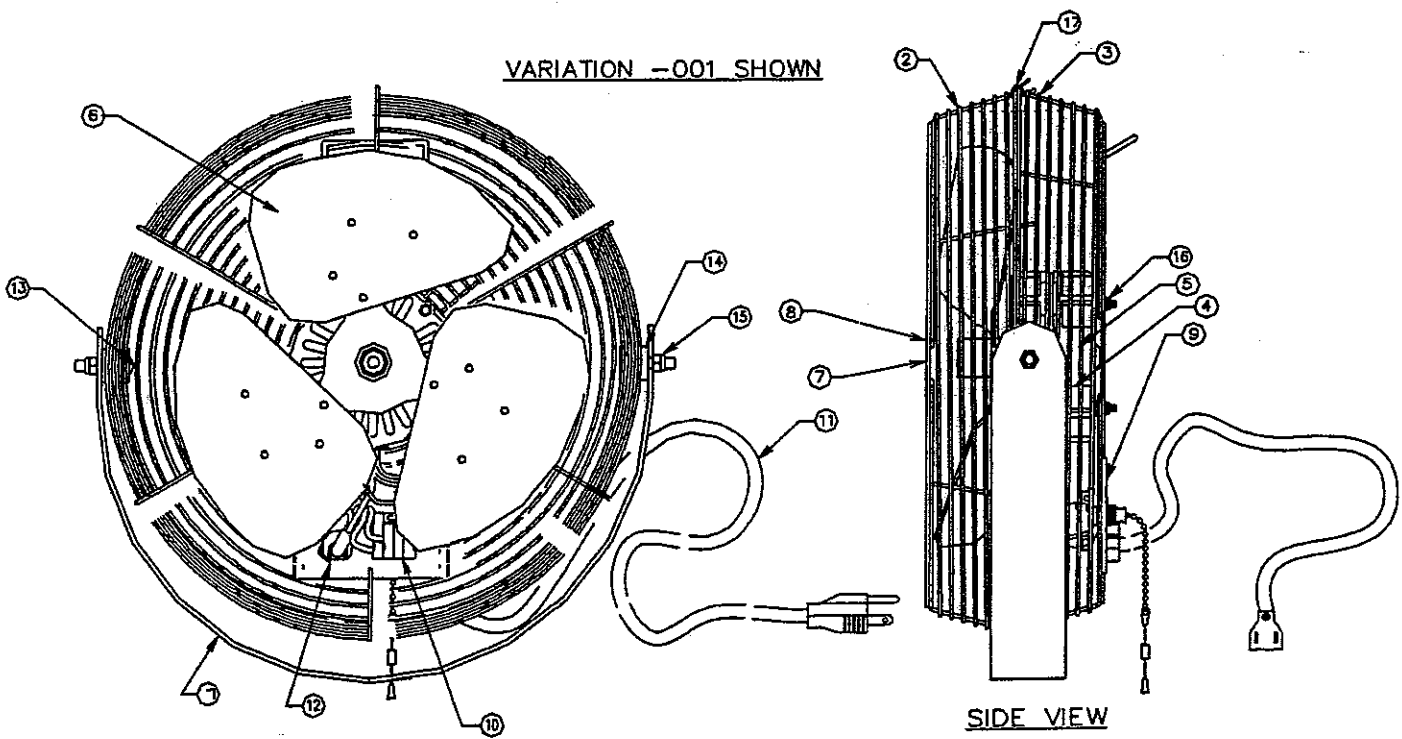

FRONT VIEW

SIDE VIEW

FRONT GUARD REMOVED FOR CLARITY