


Installation Instructions / Rough-in Opening for Shutter Fans

1. Cut rough-in opening in wall for appropriate size shutter fan.
(see chart below)
2. Place fan in opening.
3. Drill holes through the frame face at desired locations.
4. Fasten fan in opening using appropriate fasteners.
(not furnished)
5. Wiring should be done by a licensed electrician.
(refer to local electrical codes)

Model	Fan size	Rough-in opening
SFT-1200	12"	12 ⁵ / ₈ " x 12 ⁵ / ₈ "
SFT-1600	16"	16 ⁵ / ₈ " x 16 ⁵ / ₈ "
SFT-2000	20"	20 ⁵ / ₈ " x 20 ⁵ / ₈ "

Note: All shutter fans are variable speed. Variable speed controls and mechanical thermostats are available for these shutter fans as an option.

Motor view

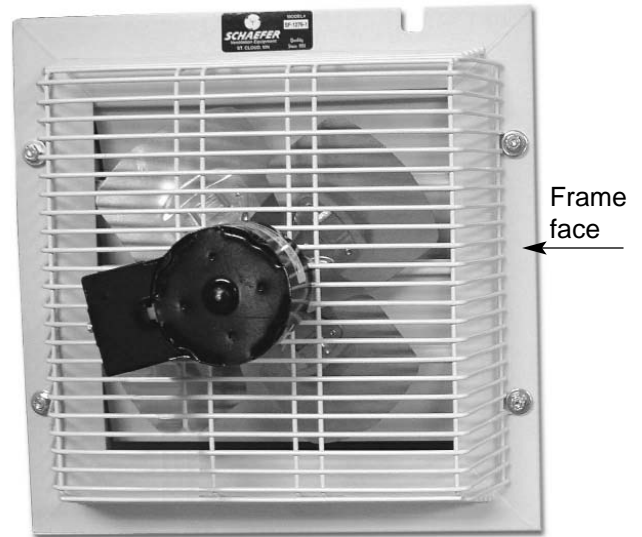

800-779-3267

sales@schaefervent.com • www.schaefervent.com

©2007 Schaefer Ventilation Equipment I-SFT 2007


Installation Instructions / Rough-in Opening for Shutter Fans

1. Cut rough-in opening in wall for appropriate size shutter fan.
(see chart below)
2. Place fan in opening.
3. Drill holes through the frame face at desired locations.
4. Fasten fan in opening using appropriate fasteners.
(not furnished)
5. Wiring should be done by a licensed electrician.
(refer to local electrical codes)

Model	Fan size	Rough-in opening
SFT-1200	12"	12 ⁵ / ₈ " x 12 ⁵ / ₈ "
SFT-1600	16"	16 ⁵ / ₈ " x 16 ⁵ / ₈ "
SFT-2000	20"	20 ⁵ / ₈ " x 20 ⁵ / ₈ "

Note: All shutter fans are variable speed. Variable speed controls and mechanical thermostats are available for these shutter fans as an option.

Motor view

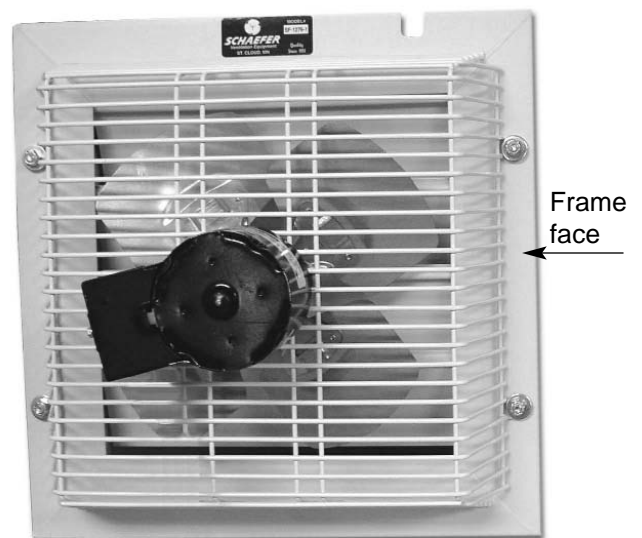

800-779-3267

sales@schaefervent.com • www.schaefervent.com

©2007 Schaefer Ventilation Equipment I-SFT 2007