



Activity Rack Cover Assembly Instructions

The Garageflex activity rack cover is used with the following products

FX2000/FX2000a/FX2000b/FX2000c	Stick Rack
FX2001 and FX2001a	Tennis Rack
FX2002	Skate Rack
FX2003 and FX2003a	Lawn & Garden Rack
FX2004 and FX2004a	Double Golf Rack
FX2005 and FX2005a	Horizontal Bike Rack
FX2015 and FX2015a	Vertical Bike Rack
FX2016 and FX2016a	Handyman Rack
FX2018	Large Basket
FX2020 and FX2020a	Multi-tool Holder

Tools Required: Phillips Screwdriver

Step 1: Place the activity rack cover on the face of the activity rack itself and align the four screws holes on both rack and cover together.

Step 2: Fasten the four screws in place using a screwdriver

If you have any questions or need some advice, please do call us on 01491 579975 or email us at info@garageflex.co.uk and we will do our best to help.