

E2/E3 Error Message Adjust Current/Pressure

The E2 and E3 error messages indicate a change in the amount of pressure detected between the pads and the disc. This is a normal occurrence that happens as the pads age.

As a first course of action, you may wish to wash your existing pads or replace them.

If you still see an E2 or E3 error message, you can perform the adjustment below:

Locate the pressure adjustment screw as shown in the photo. You can find it on the top of the machine by the front lid.

If you turn the screw **counterclockwise** it will **increase** the pressure. If you turn this screw **clockwise** it will **decrease** the pressure.

E2 = turn counterclockwise

E3 = turn clockwise

Depending on which error message you're dealing with, try giving the screw one turn and see if the error message disappears when you attempt to run it. If it does not, continue to give it another half-turn until the message goes away.

If, after the error message goes away, your Hybrid still does not perform properly, please contact tech support.

