

Comfort, Quality & Style since 1998



YAKATORI PORTABLE CERAMIC GRILL

ITM./ART. 60450

ASSEMBLY / CARE & USE INSTRUCTIONS

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY



! IMPORTANT NOTE

The heat retention properties of this diatomite clay grill are due to its unfired clay construction. Do NOT leave the grill outdoors uncovered after use. Rain, dew, high humidity, or other significant moisture exposure WILL damage the grill. Damage due to moisture exposure is NOT covered under warranty.



ATTACH YOUR RECEIPT

Keep a copy of your proof of purchase/order confirmation. You will need it for warranty claims and replacement part assistance.

PURCHASE DATE: _____



Questions, problems, missing parts?

Before returning your item, our Florida-based customer service team can help. *Hablamos español.*

Call toll-free

(866) 985-7877

9 a.m. – 9 p.m., EST

Email

cservice@welltraveled.net

Chat support

www.balkenehome.com

9 a.m. – 6 p.m., EST, Mon-Fri

! WARNING

This product can expose you to chemicals including Carbon Monoxide, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

! WARNING FOR YOUR SAFETY

1. Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage.
2. Read the installation, operation, and maintenance instructions thoroughly before installing or servicing this equipment.
3. Failure to follow these instructions could result in fire or explosion, which could cause property damage, personal injury, or death.

! WARNING

FOR OUTDOOR USE ONLY.

SAFETY INFORMATION



WARNING

WARNING indicates a hazardous situation that, if not avoided, can cause death or serious injury.

FOR YOUR SAFETY:

DANGER:

FOR OUTDOOR USE ONLY

CARBON MONOXIDE HAZARD

- This appliance can produce carbon monoxide, which has no odor. Using it in an enclosed space can kill you. Never use this appliance in an enclosed space such as a camper, tent, or home.



- This portable grill is a combustion appliance. All combustion appliances produce carbon monoxide (CO) during the combustion process. Carbon monoxide (CO) poisoning produces flu-like symptoms, watery eyes, headaches, dizziness, fatigue, and possibly death by asphyxiation. You can't see it and you can't smell it. If any of these symptoms are present during operation of this product, get fresh air immediately!
- For outdoor use only.
- Never use inside a house or other unventilated or enclosed area. Do NOT use this grill for indoor heating.
- This grill consumes air (oxygen). Do not use in unventilated or enclosed areas to avoid endangering your life.
- **BURN HAZARD:** Never leave this portable grill unattended when hot or in use, especially around children and/or pets.
- Keep out of reach of children. Do NOT allow children to operate this grill.
- All surfaces of this grill are hot while in operation. To avoid burns, do NOT touch the grill until it has completely cooled unless you wear protective gear (Potholders, gloves, BBQ mitts, etc. Never touch ashes or coals to see if they are hot).
- Do NOT lean over the grill when lighting or grilling.
- Do NOT wear loose or flammable clothing while operating this grill.
- Do NOT use gasoline, kerosene, diesel fuel, or alcohol to light or relight fuel.
- Do NOT add lighter fluid to burning fuel.

- When using this portable grill, exercise the same precautions you would with any open fire.
- Avoid breathing smoke from the fire and avoid getting it in your eyes.
- Do NOT use this grill without reading the entire user manual.
- Do NOT use this grill until it is completely assembled and all parts are securely installed.
- Always use in accordance with all applicable local, state, and national codes. Contact your local fire department for current information on outdoor burning.
- The use of alcohol, over-the-counter or prescription drugs, or other substances may impair the user's ability to properly assemble or safely operate this grill.
- This grill is for use with charcoal briquettes.
- Do NOT alter this grill in any manner.
- This grill is NOT to be used in or on boats or recreational vehicles.
- Do NOT use this grill near automobiles, trucks, vans, or recreational vehicles.
- Do NOT use this grill under any overhead roof or near any unprotected combustible constructions. Avoid using near or under overhanging trees/shrubs.
- Always use this grill on a hard, level, non-combustible surface such as concrete, stone, or metal. An asphalt or blacktop surface may not be acceptable for this purpose. Do NOT use directly on wooden or plastic surfaces.
- Do NOT burn hardwood, softwood, lump charcoal, manufactured logs, driftwood, trash, leaves, paper, cardboard, plywood, or painted, stained, or pressure-treated wood.
- Do NOT store or use gasoline, lighter fluid, or other flammable vapors or liquids in the vicinity of this or any other appliance.
- Do NOT store/use an LP gas cylinder within 10 ft (3m) of this portable grill while it is in operation.
- Do NOT use in windy conditions.
- Do NOT use this grill without grates securely in place.
- Keep all electrical cords well away from the portable grill while hot.
- Do NOT attempt to move the grill after charcoal briquettes have been lit.
- Use heat-resistant gloves or potholders when contacting surfaces.
- Use long, sturdy portable grill tools when adding or removing briquettes.
- Do NOT place hot grill tools on combustible surfaces such as grass, wooden deck, or furniture, or on heat-damagable surfaces such as a plastic table.
- Do NOT overload the portable grill. Do NOT add additional fuel until the fire burns down. NOTE: if any portion of the metal grates of this grill are glowing red, it is overloaded.
- Do NOT attempt to move or store this grill until all ashes and coals are completely extinguished, cooled, and removed.
- Do NOT remove ashes/coals until they are completely extinguished and cooled.
- Always empty this portable grill before each use.
- Thoroughly inspect and clean the grill on a regular basis.
- After a period of storage and/or disuse, check for signs of damage and creosote buildup. Do NOT use until necessary repairs and/or cleaning are complete.
- This portable grill is NOT for commercial use.
- It is NOT recommended to use this grill on a wooden deck or other combustible surface that is not entirely resistant to high heat. However, if you intend to use this grill on such a surface, you must use a non-flammable and heat-resistant material such as concrete pavers, brick, or stone between the grill and the surface.
- Death, serious injury, or damage to property may occur if the above is not followed exactly.



PREPARATION

Before use, be sure to empty contents of carton and make sure all parts are present. If any parts are missing, please contact Customer Service.

NOTE: Before first use, follow the below instructions for lighting charcoal, but allow the fuel to burn for 30 minutes, then cool down.

NOTE: The heat retention properties of this diatomite grill are due to its unfired clay construction. Do NOT leave the grill outdoors uncovered after use. Rain, dew, prolonged humidity, or other moisture will damage the grill. Damage due to moisture exposure is NOT covered under warranty. Storage suggestions: Under awning/porch WITH waterproof cover, in garage/shed, or in airtight or waterproof plastic bin.

- 1 Remove all packaging and padding from the Yakatori grill and parts.
- 2 Locate the 2 square metal perforated fuel trays and place one in each chamber of the grill.
NOTE: The fuel trays will become discolored and may warp slightly after use. This is normal.
- 3 Place the cooking grate across the top of the grill. Metal tabs that fit over the edges prevent it from shifting.



GRILLING

- 1 Open the air vent(s) fully. Remove the cooking grate and set aside.
- 2 Stack charcoal briquettes in a pyramid shape inside the grill. Fill to no more than 70% of the volume of the grill. Add lighter fluid if desired. Do not use gasoline, kerosene, or alcohol.
- 3 Once lighter fluid soaks in, immediately light the charcoal briquettes in several places by using a long match or stick lighter.
- 4 Flames will die down in 5-10 minutes. Wait until the charcoal completely ashes over (up to 25-30 minutes). Then use a grilling tool to spread the briquettes evenly and begin cooking. Do not begin cooking until the fuel has a coating of ash to avoid contamination of food with lighter fluid.



TIPS & CARE

- Store charcoal briquettes in a dry location. If storing outdoors, seal in a waterproof container.
- A diatomite clay grill is fragile. Be careful when attempting to move or store it.
- When cleaning your grill, DO NOT use abrasive cleaners as they may damage parts of this product.
 - Remove cooled ash and dispose properly.
 - Clean metal grates and plates with mild detergent and rinse with water. Do not place in dishwasher. Allow to dry before replacing.
 - Do NOT use any wet cleaning agents on clay surfaces. Remove grease by wiping or gently scraping if necessary.



by

BALKENE
— HOME —



LIMITED WARRANTY

Customers in the Contiguous US

With proof of purchase from an authorized retailer, this product is warranted for a period of 1 year from original purchase date against defects in materials and workmanship under normal use. This warranty does NOT cover normal wear/weathering, exposure to water, freezing temperatures, oils, fluids, or chemicals OR use in a commercial context if the unit is not designated as a commercial model. At Well Traveled Living's sole discretion, products under warranty will be repaired and/or replaced at no charge to the customer. Returns sent back to Well Traveled Living must be sent via prepaid freight in the original retail packaging.

For warranty service, contact Balkene Home/Well Traveled Living at the address, phone numbers or website and email listed in this owner's manual. Be sure to have your sales receipt, date of purchase and catalogue/model numbers available when calling. All warranty service will be coordinated by Well Traveled Living's Amelia Island, Florida service center. This warranty is extended only to the original owner. Proof of purchase will be required before warranty service is rendered. The sales receipt is the only valid proof of purchase. This warranty only covers failures due to defects in materials or workmanship which occur during normal use. Failures and/or damage which result from accident, negligence, misuse, abuse, neglect, mishandling, alteration or modification, failure to maintain, improper assembly or maintenance, service by unauthorized agency or use of unauthorized components or damage that is attributable to acts of God are NOT covered.

This limited warranty gives you specific legal rights and you may also have other rights which vary from jurisdiction to jurisdiction. The provisions of the United Nations Convention on Contracts for the Sales of Goods shall not apply to this limited warranty or the sale of products covered by this limited warranty.

- THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED.
- PURCHASER ASSUMES ALL RISKS IN THE ASSEMBLY AND OPERATION OF THIS UNIT.
- FAILURE TO FOLLOW WARNINGS AND OPERATIONAL INSTRUCTIONS CONTAINED IN THIS MANUAL CAN RESULT IN SEVERE PROPERTY DAMAGE AND/OR PERSONAL INJURY.
- IN NO EVENT WILL WELL TRAVELED LIVING, OR ITS DIRECTORS, OFFICERS OR AGENTS BE LIABLE TO THE PURCHASER OR ANY THIRD PARTY, WHETHER IN CONTRACT, IN TORT, OR ON ANY OTHER BASIS, FOR ANY INDIRECT, SPECIAL, PUNITIVE, EXEMPLARY, CONSEQUENTIAL, OR INCIDENTAL LOSS, COST, OR DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE SALE, MAINTENANCE, USE, OR INABILITY TO USE THE PRODUCT, EVEN IF WELL TRAVELED LIVING OR ITS DIRECTORS, OFFICERS OR AGENTS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH LOSSES, COSTS OR DAMAGES, OR IF SUCH LOSSES, COSTS, OR DAMAGES ARE FORESEEABLE. IN NO EVENT WILL WELL TRAVELED LIVING, OR ITS OFFICERS, DIRECTORS, OR AGENTS BE LIABLE FOR ANY DIRECT LOSSES, COSTS OR DAMAGES THAT EXCEED THE PURCHASE PRICE OF THE PRODUCT.
- SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO THE PURCHASER.

EXTEND YOUR WARRANTY

When you purchase a Fire Sense or Balkene Home product from any authorized retailer, you'll have peace of mind in knowing that it comes with a one-year warranty. Extend your warranty for *an additional year* when you review your item at balkenehome.com within 365 days of purchase.



Important Notice

Before returning to place of purchase—for customer service and warranty issues:

Call toll-free	(866) 985-7877	9 a.m. – 9 p.m., EST
Email	cservice@welltraveled.net	
Live chat	balkenehome.com	9 a.m. – 6 p.m., EST, Mon – Fri

Distributed by:
Well Traveled Living
716 S 8th Street, Amelia Island, FL 32034
balkenehome.com
cservice@welltraveled.net
(866) 985-7877