


Steps to replace the Thermocouple




1

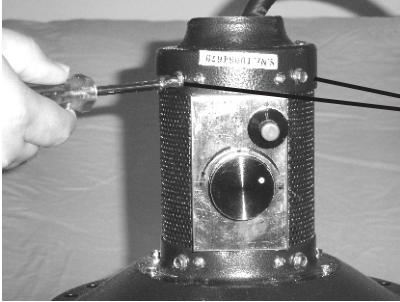


Unscrew the four self tapping screws from the neck of the Head Assembly.

2

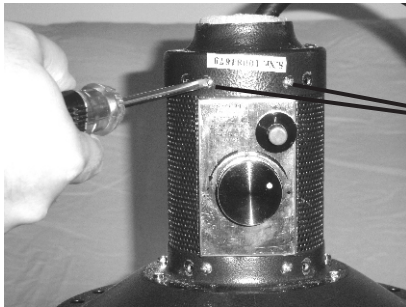


Unscrew the two Phillips Head screws from the control box.

3

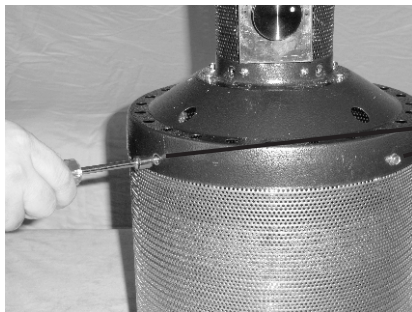

Unscrew the four self tapping screws that hold the emitter screen

4

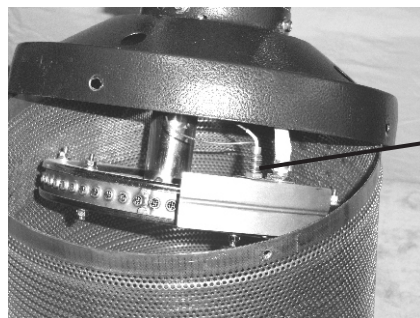

Remove the Thermocouple from the bracket. (The one on the left)

5



Unplug the Thermocouple wire from the tilt switch

Reverse process to install the new Thermocouple

FOR A VIDEO GO TO www.wtliving.com

