


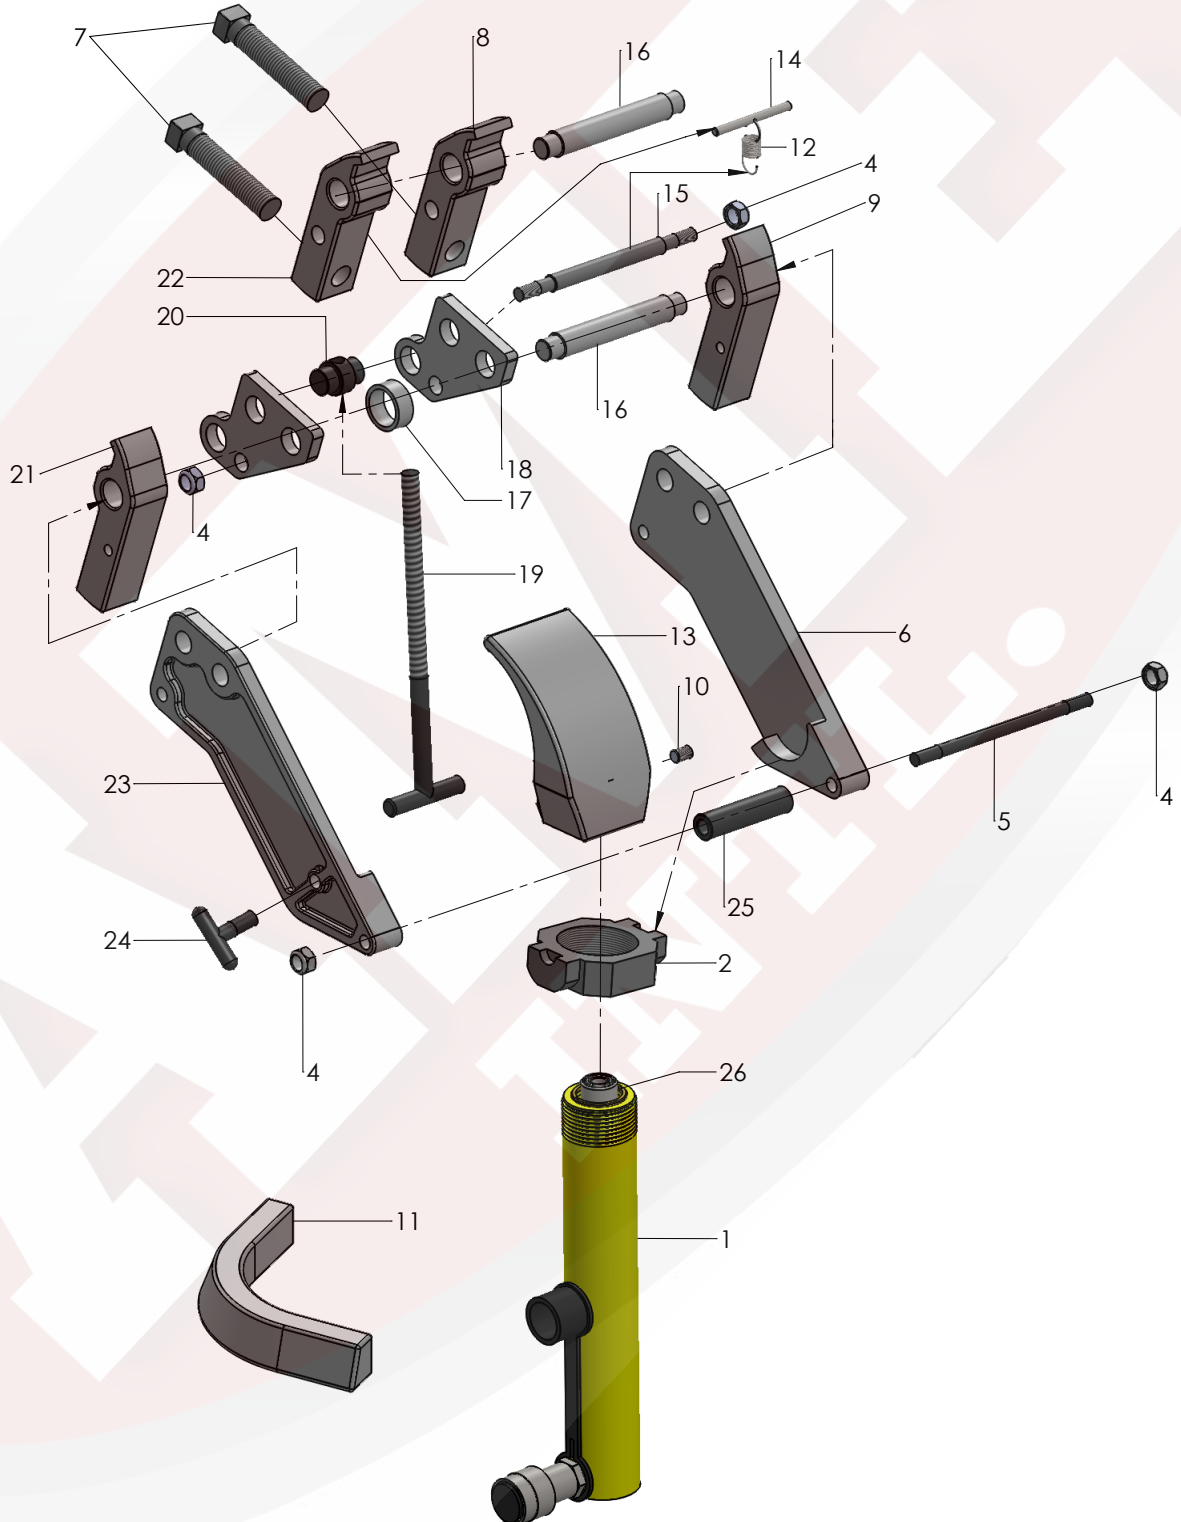

PARTS BREAKDOWN

Parts List For OTR Tire Bead Breaker

11040





PARTS BREAKDOWN

Parts List For OTR Tire Bead Breaker 11040

Item	Part No.	Stock No.	Qty	Description
1	11040-001	TO-100-RA		Ram Assembly
2	11040-002	TO-100-18	1	Trunion
3	11040-003	TO-100-17	4	Washer
4	11040-004	TO-100-16	4	Nut
5	11040-005	TO-100-9	1	Tie Bolt
6	11040-006	TO-100-6R	1	Side Plate Right
7	11040-007	TO-100-15	2	Square Set Screw
8	11040-008	TO-100-1R	1	Bottom Clamp Right
9	11040-009	TO-100-2R	1	Top Clamp Right
10	11040-010	TO-100-20	1	Set Screw
11	11040-011	TO-100-23	6	Wedges
12	11040-012	TO-100-10	1	Spring
13	11040-013	TO-100-19	1	Spade
14	11040-014	TO-100-11	1	Spring Pin
15	11040-015	TO-100-8	1	Clamp Pin
16	11040-016	TO-100-7	2	Hinge Pin
17	11040-017	TO-100-5	2	Spacer
18	11040-018	TO-100-3	2	Center Link
19	11040-019	TO-100-14	1	Hand Screw
20	11040-020	TO-100-4	1	Swivel Nut
21	11040-021	TO-100-2L	1	Top Clamp Left
22	11040-022	TO-100-1L	1	Bottom Clamp Left
23	11040-023	TO-100-6L	1	Side Plate Left
24	11040-024	TO-100-12	1	Stop Screw
25	11040-025	TO-100-13	1	Spacer
26	11040-026	TO-100-44	1	Adapter
	RC102K		Repair Kit	

2347 Circuit Way, Brooksville, Florida, USA 34604
Phone: (+1) 352-799-1111 Toll Phone: (+1) 877-775-4AME (4263)
Fax: (+1) 352-799-1112 E-mail: sales@ameintl.net www.ameintl.net