





- Select speed (moving modes) or 🧧 brightness (solid color modes)

Add or remove from "Favorites"

Solid color select

RF Wireless

GLOF X





- When you first receive your Pixel Pro. the battery pack may need to be charged. Plug in with the included charger and let the battery charge for several hours
- Getting started is easy! Just plug your glasses into the USB port of the battery pack, point your remote at the glasses, and press (1)
- To automatically scroll through modes, press
- To manually scroll through all modes, press 🥯 🚳

- See a mode you like? Add it to your favorites with You can remove a favorite with
- Scroll through your favorites by pressing (*)
- Control a moving mode's speed by pressing To adjust brightness, go to a solid color mode and press 💏 💏
- To access solid color modes, press (w) 📵 👩 🕫

Enjoy your Pixel Pro!

GLOF X

Need help? Contact us at: Support@GloFX.com 844-GO-GLOFX (U.S.) +1-850-559-6404 (International)