

# **AK Weaver Base Side Mount USER MANUAL**

#### **FEATURES:**

- Can be used with AK and SVD-type rifles
- · Quick and easy to install
- · Durable construction
- Can be used with any Weaver-based scope or accessory

## **SPECIFICATIONS:**

Length	(in)	5.75
Width	(in)	1.5
Height	(in)	4.25
Weight	(oz)	8.8

#### **DIAGRAM:**

- 1. Latch
- 2. Locking plate
- 3. Lock
- 4. Weaver rail
- 5. Spring
- 6. Locking nut

## **WARNING / CAUTION:**

Always unload your firearm before attempting to mount this, or any other, scope or accessory. Be sure to visually inspect your firearm to ensure it is UNLOADED.

## **ABOUT THE AK WEAVER BASE SIDE MOUNT:**

The Firefield AK Weaver Base Side Mount allows you to mount scopes and accessories with Weaver mounts onto firearms that have side-fastening lugs on their receiver. This mount is easy to install, detaches quickly, and is able to maintain 1 MOA zero after multiple re-attachments.

#### **INSTALLATION:**

- 1. Make sure the latch (1) is in the "open" position, which means it will be pointing toward the back of the mount.
- 2. With the locking plate (2) open, slide the mount onto the side of your firearm.
- 3. Turn the latch (1) toward the front of the mount until it is in the "locked" position. There will be an audible 'click' when the latch (1) and lock (3) are in place.

It may be necessary to adjust the locking plate before the mount can be installed onto your firearm. If you are unable to slide the mount onto your firearm's rail, or if the mount is not tightly secure on the firearm's rail after the latch has been locked, then adjustment is needed. To adjust the locking plate:

- 1. Press the locking plate (2) against the tension spring (5) to create a gap between it and the locking nut (6).
- 2. Hold the locking plate (2) in this position while adjusting the locking nut (6).
- 3. If the mount is too loose on the rail, tighten the locking nut (6) by turning it clockwise.
- 4. If, when in the "open" position, the locking plate (2) sticks out and prevents the mount from sliding onto the rail, loosen the locking nut (6) by turning it counterclockwise.
- 5. After you have adjusted the locking nut (6), release the locking plate (2) to return it to its original position, and attach the mount to the rail again.
- 6. Repeat adjustments until the mount is secured tightly to your firearm's rail.

## **FIREFIELD 1 YEAR LIMITED WARRANTY**

This Firefield product is warranted to be free of defects in materials and workmanship for 1 year. In the event of a defect under this warranty, we will, at our option, repair or replace the product. This warranty does not cover damages caused by misuse or improper handling. Also, this warranty is null and void if modification or maintenance is provided by someone other than Firefield. This warranty is non-transferable and is only valid if the product is registered within 30 days after the product has been purchased.

## **FOR WARRANTY SUPPORT, CONTACT:**

Firefield info@firefieldtactical.com

