 

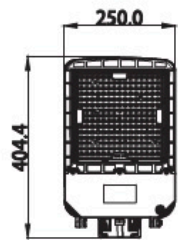




Product Features

1. High Surge protection: 6KV. High efficiency LED Driver, the wide range input voltage AC100-277V, AC120-347V, AC277-480V,
2. Lumileds LED high luminous efficiency and long life.
3. Cast aluminium design, better cooling and easy replacement, light quality, LEDTj<185
4. Excellent optical design, greatly improve the light utilization and evenness.
5. Special designed rotatable lens, suitable for more applications.
6. Photocell Control, Motion sensor, PIR sensor Available (Option).

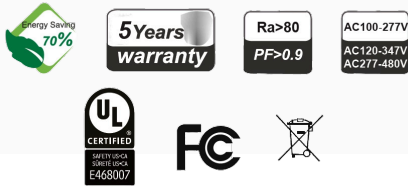


150w

TS-SL0715-150W-X-MW-XXK(XXX)

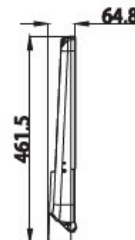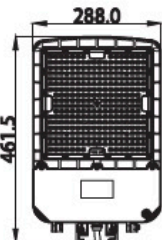

200w

TS-XX0820-200W-X-MV-XXK(XXX)

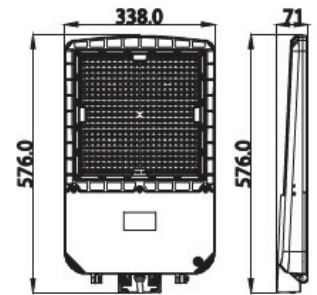


300w









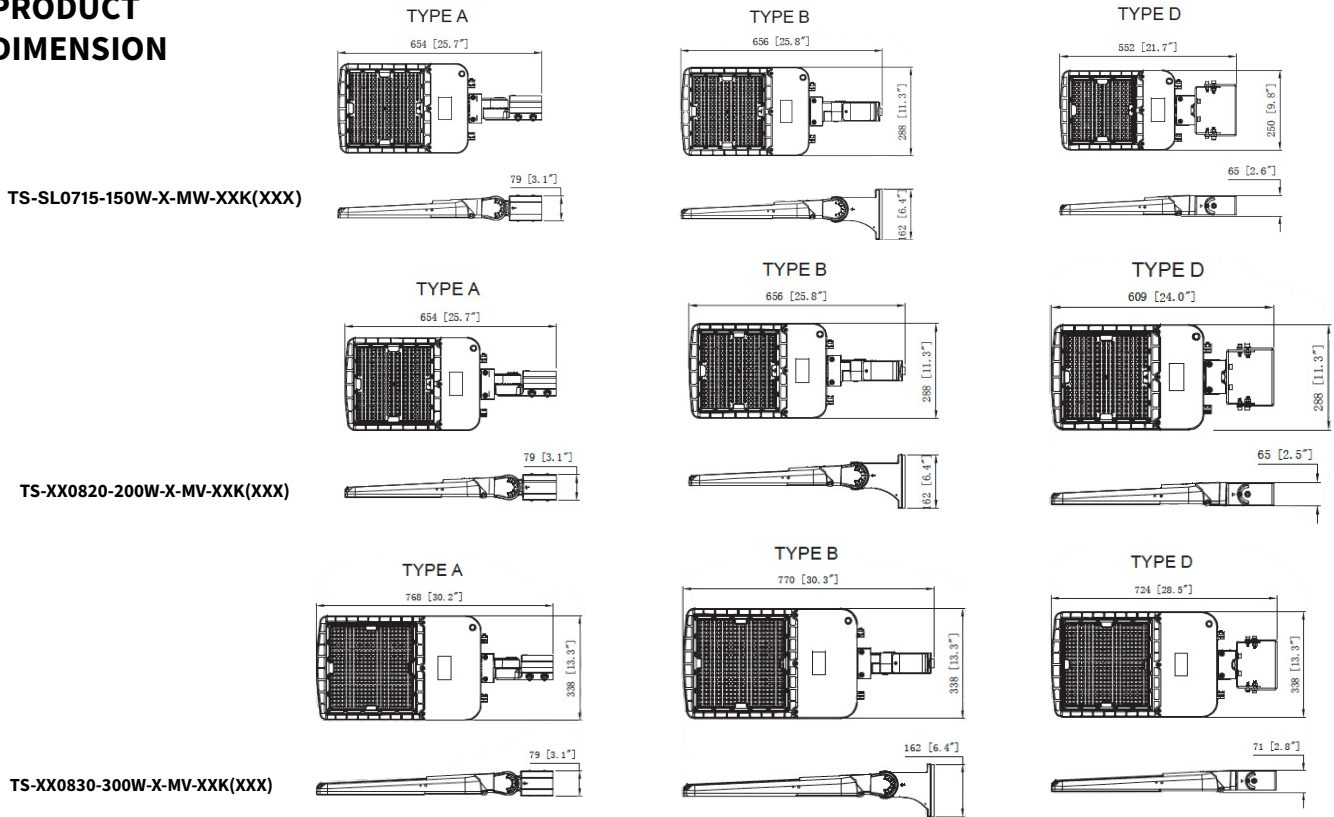

TS-XX0830-300W-X-MV-XXK(XXX)

where XX can be "SL" or "FL"; X can be "H", "L" or "HY" (Y=number);
 XXX can be any number for color temperature: 40K, 50K, 57K, 65K, Or TCP, which means
 adjusting power and color temperature;
 (XXX) can be blank = no sensor function, PIR = PIR sensor, PTC = Photocontrol,
 MS = Microwave sensor, PIP = PIR sensor and Photocontrol, MSP = Microwave sensor
 and Photocontrol, PR = PR Motion Sensor, PSC = Photocontrol socket and shorting cap,
 BT = Bluetooth Motion Sensor. BTP=Bluetooth motion sensor and Photocontrol

LED SHOEBOX LIGHT


PRODUCT DIMENSION




Lamp Bead Model	LUMILEDS			
Certificates	UL, CUL			
Lighting Angle	TYPE III-M / TYPE IV-S / TYPE V			
Lighting Efficiency	130/140 Lm/W			
Color Rendering Index	Ra>80			
Working Temperature	-40°F ~+113°F / -40°C ~ +45°C			
Storage Temperature	-40 °F ~+158 °F / -40°C ~ +70°C			
Environment Location	WET LOCATIONS (IP65)			
Life span	>50000H			
Lamp shell	BROWN / BLACK			
Accessories options	Photocell; Shorting cap; Surge protector			
	PIR sensor; Motion sensor			
	Waterproof cover plate of photocell hole			
Accessories mounting brackets	TYPE A (Slip-fitter) 	TYPE A2 (Slip-fitter) 	TYPE B (Square/Round pole mount with slip-fitter function) 	
	TYPE B2 (Square/Round pole mount with slip-fitter function) 	TYPE C (Square/Round pole mount) 	TYPE D (Trunion) 	
	TYPE E (Yoke) 	TYPE F 	TYPE G 	TYPE H 

Operation Instruction of Rotating Optical Lens

Step 1. First loosen the screws on the lens screws (total 24PCS), as shown in the figure;

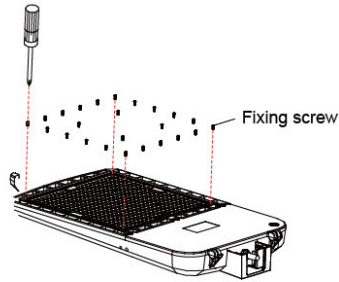

Step 2. Remove the optical lens, rotate it clockwise or counterclockwise to a desired angle, as shown in the figure;

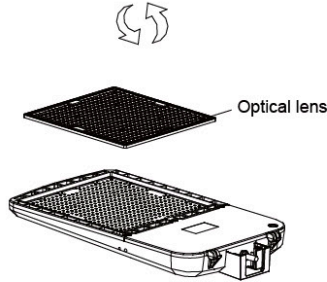

Step 3. Put back the adjusted optical lens, lock screws back, as shown in the figure.



(Cover plate, Photocell, Shorting cap)





(Surge, lighting arrester)



(Respirator)



(Motion sensor, PIR sensor)

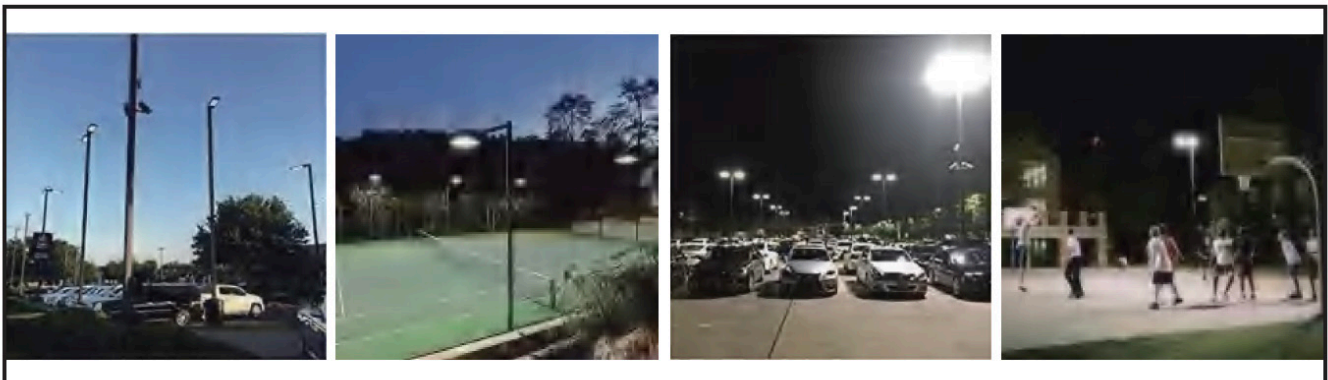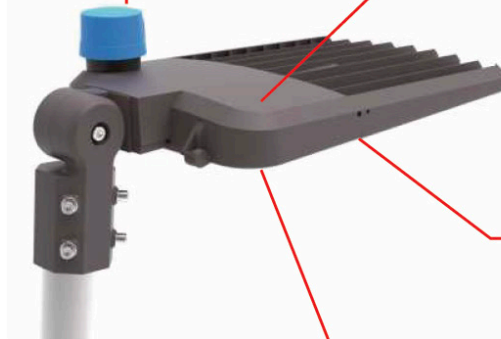

The fixture and bracket will be packed separately.

Fixture	Outer box (L*W*H)	Qty/Ctn (pcs)	N.W/pcs (lbs/Kg)	G.W/pcs (lbs/Kg)	Remarks
100W	17.99"*11.81"*4.72" 457*300*120mm	1	6.28/2.85	8.29/3.76	1.0M cable
150W		1	6.48/2.94	8.50/3.86	
200W	20.24"*13.31"*4.72" 514*338*120mm	1	6.96/3.16	8.86/4.02	
240W	24.92"*15.28"*5.04" 633*388*128mm	1	10.31/4.68	12.56/5.70	
300W		1	10.75/4.88	13.00/5.90	

Bracket	Outer box (L*W*H)	Qty/Ctn (pcs)	N.W/pcs (lbs/kg)	G.W/Ctn (lbs/kg)
TYPE A	15.0"*9.3"*10.0" 380*236*255mm	8	2.9/1.3	25.1/11.4
TYPE B	17.3"*13.9"*10.2" 440*352*260mm	8	4.0/1.8	34.0/15.4
TYPE C	16.5"*13.9"*7.7" 420*352*196mm	8	2.6/1.2	23.1/10.5
TYPE D	14.8"*11.8"*7.9" 376*300*200mm	8	2.9/1.3	24.9/11.3
TYPE E	15.59"*14.33"*8.66" 396*364*220mm	8	2.02/0.92	2.42/1.10
TYPE F	15.1"*14.3"*8.9" 383*364*225mm	8	4.9/2.2	41.9/19.0
TYPE G	16.7"*10.0"*16.7" 425*253*425mm	8	4.2/1.9	36.6/ 16.6
TYPE H	13.94"*10.24"*16.7" 354*260*425mm	8		

- 1、 Using the standard working voltage: AC100~277V/120-347V/277-480V, 50/60Hz, do not exceed.
- 2、 Be sure the power supply is turned off before installation.
- 3、 Switch off power of the mains supply or the connection lead respectively before doing any works.
- 4、 Please note waterproof, dustproof, electricity prevention and shockproof for the external power wires.
- 5、 Directly bolts on the installation stem through the hole on the mounting bracket.
- 6、 Be sure the connection between the wires is in good condition when install the lamps, beware of leakage.
- 7、 Please read the specification carefully before installation.
- 8、 The complete installation must be handled by an electrical expert.

The fixture and bracket will be packed separately.
 Installation must be handled by an electrical expert.