## ALZO CINEMA CAMERA TRANSFORMER RIG ASSEMBLY GUIDE

## Included in the kit:

- A. TOP BAR
- B. BASE BAR
- C. HANDLES
- D. SHOE MOUNT W/SCREWS
- E. SHOE MOUNT W/THUMB SCREW
- F. HEX FLAT HEAD SCREWS
- G. ALLEN WRENCH


Holding the TOP BAR insert one of the SHOE MOUNTS W/SCREWS into an end hole and thread on a HANDLE, rubber grip down.


Maintaining the proper front back position of the shoe mount, tighten up the HANDLE. Repeat for the second HANDLE as shown on the right ->

Position the BASE BAR as shown below. Using the supplied Allen wrench, install the 2 HEX FLAT HEAD SCREWS into the bottom of the HANDLES. Tighten firmly.

The SHOE MOUNT W/ THUMB SCREW can be installed in any of the holes in the TOP BAR. Supplied washers are installed as shown.

It is best to always use a rubber washer when installing devices on the TOP BAR. This will prevent rotation of the device.

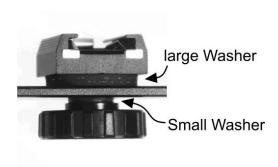

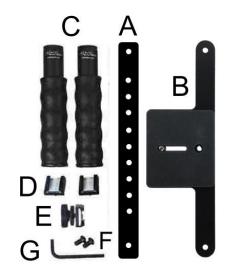





If you have additional questions regarding the application of this unit, we welcome you to contact us directly. csupport@alzodigital.com or 800-582-7009.