 


VAPESTIX™

MICRO

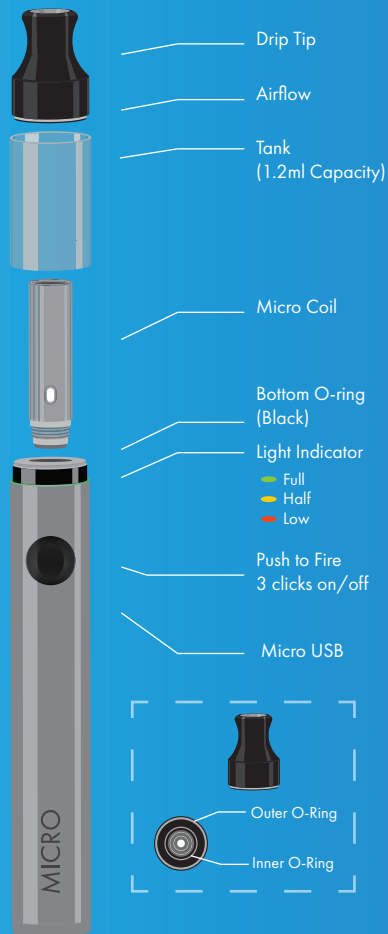


Filling with E-liquid



1. Make sure the device is turned off then unscrew the Tank Top.
2. Fill e-liquid into the tank. Do not overfill.
3. Reattach the Tank Top.
4. If this is the first time you have filled the tank or you have just installed a new coil, then you **must wait 5 minutes** before vaping.

Not waiting will burn the coil, which will cause a burnt flavour when vaping. If the coil is burnt then it will need to be replaced.

Changing the Coil

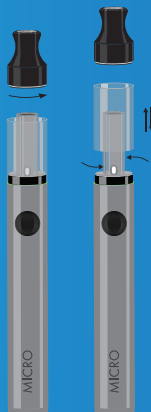

- You Should Change the coil if :
- a) the flavour starts to change or tastes bad
 - b) there is a burnt taste
 - c) drops of e-liquid are entering your mouth when inhaling.

1. Make sure the device is turned off then unscrew the Tank top.
2. Take off the glass tube and then unscrew the coil from the Tank bottom, discard the used coil and replace with a new coil. Make sure the bottom O-ring is placed correctly to avoid potential leaking. Reattach the glass tube then the Tank top.
3. Fill the tank using the Filling Instruction above.

 
For more information: www.vapestix.com.au
For support: support@vapestix.com.au

FLIP FOR MORE INFO ►


VAPESTIX™

MICRO

Pen

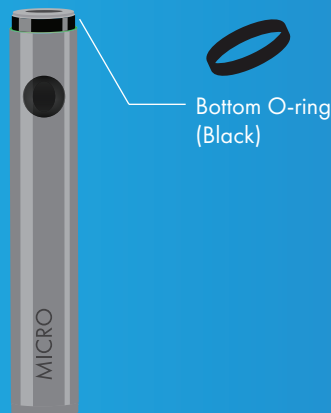

Drip Tip

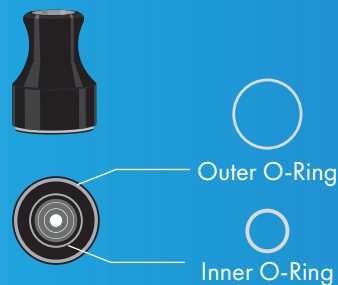 

For more information: www.vapestix.com.au
For support: support@vapestix.com.au

Checking O-Rings

Make sure all O-rings are clean and dry and fitted correctly. Otherwise it may cause leaking or spit back issues.

If you have already used your spare O-rings (in the Accessories pack) or need replacement glass. A replacement glass and O-ring pack is available from your retail store.

Bottom O-ring

The black bottom O-ring allows the glass to be fitted to the device and acts as a seal between the glass and device when fitted correctly. This O-ring prevents leaking when the tank is filled. If missing or damaged, please replace with the replacement black O-ring provided in the accessory pack.

Outer O-ring

The outer O-ring is attached to the drip tip and acts as a seal between the glass and drip tip. This O-ring prevents leaking when the tank is filled. If missing or damaged, please replace with the replacement Outer O-ring provided in the accessory pack.

Inner O-ring

The Inner O-ring is fitted inside the drip tip and acts as a seal between the Coil and Drip Tip. This O-ring prevents leaking when the tank is filled. If missing or damaged, please replace with the replacement Inner O-ring provided in the accessory pack. You will need a small pointed tool to properly fit this O-ring (e.g. needle, toothpick, etc.). This O-ring can may take several attempts to fit correctly, so please patience when attempting to fit the inner O-ring.

FLIP FOR MORE INFO ►