# **REEF DIVER**

## NH35 AUTOMATIC 3 HANDS DATE

#### SETTING THE TIME

- 1) Pull out the crown to the second click position.
- 2) Turn the crown clockwise to set the correct time.
- 3) Push the crown back into normal crown position

### SETTING THE DATE

- 1) Pull out the crown to the first click position.
- 2) Turn the crown anti clockwise to set the correct date.
- 3) Push the crown back into the normal crown position.

#### Important


-Kindly note that for long life of the Automatic movement, you have to rotate the hands Clockwise only.

-NEVER do any adjustment / setting between 9pm to 3 am

#### TO WIND UP THE MAINSPRING

- Manual winding > Rotate the crown clockwise at normal position. Wind turning the ratchet wheel screw 8 times. It will start to move naturally after shaking slightly.
- 2) To wind up with winding machine.
  - Full wind up conditions
  - . Rotary speed : 30 rpm
  - . Operating time : 60 minutes

\* This watch MUST be worn for at least 8 (Eight) hours each day to ensure it is fully wound. An automatic watch will only wind when the watch is on your wrist and your arm moves. Winding the watch by the crown will put power on the spring but not enough to allow the watch to function fully. If your watch stops overnight or loses time it means it is not being fully wound.

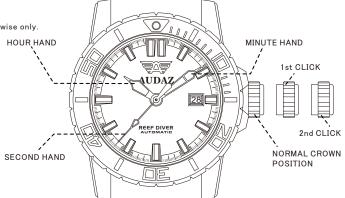

AUDAZ