


FLIEGER

RONDA QUARTZ CHRONOGRAPH



DESCRIPTION OF THE DISPLAY & CONTROL BUTTONS

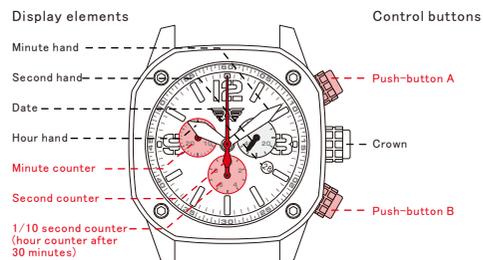

*Date position may be located at different position depends on models.

P.1

FLIEGER

RONDA QUARTZ CHRONOGRAPH




SETTING THE TIME

- 1 * Pull out the crown to position III (the watch stops).
- 2 Turn the crown until you reach the correct time 8:45.
- 3 * Push the crown back into position I.

Please note

* In order to set the time to the exact second, 1 must be pulled out when the second hand is in position << 60 >>. Once the hour and minute hands have been set, 3 must be pushed back into position I at the exact second.

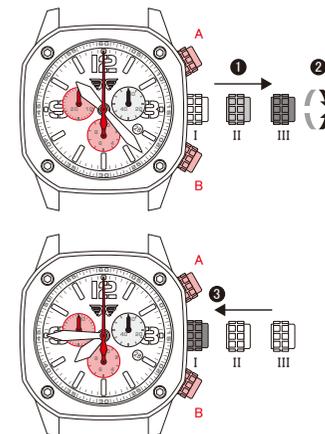

*Date position may be located at different position depends on models.

P.2

FLIEGER

RONDA QUARTZ CHRONOGRAPH




SETTING THE DATE (QUICK MODE)

- 1 Pull out the crown to position II (the watch continues to run).
- 2 Turn the crown until the correct date 1 appears.
- 3 Push the crown back into position I.

Please note

The date can be changed during the date changing phase between approx. 9:00 PM and 12:00 AM; please note that the date must be set to the date of the following day as in this case the automatic date changing does not occur at midnight.

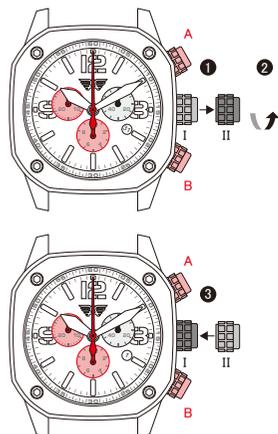

*Date position may be located at different position depends on models.

P.3

FLIEGER


RONDA QUARTZ CHRONOGRAPH



CHRONOGRAPH : BASIC FUNCTION (Start / Stop / Reset)

Example:

- 1 Start: Press push-button A.
- 2 Stop: to stop the timing, press push-button A once more and read the chronograph counters: 4 min / 38 sec / 7/10 sec
- 3 Zero positioning: Press push-button B. (The chronograph hands will be reset to their zero positions.)

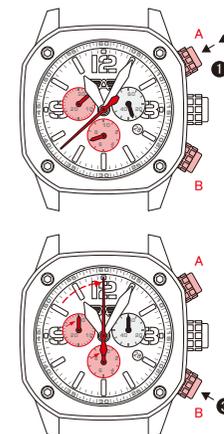

*Date position may be located at different position depends on models.

P.4

FLIEGER

RONDA QUARTZ CHRONOGRAPH

CHRONOGRAPH : ACCUMULATED TIMING

Example:

- 1 Start: (start timing)
- 2 Stop: (e.g. 15 min 5 sec following 1)
- 3 Restart: (timing is resumed)
- 4* Stop: (e.g. 5 min 12 sec following 3
= 20 min 17 sec.
(The accumulated measured time is shown))
- 5 Reset: (The chronograph hands are returned to their zero positions.)



Please note
* Following 4, the accumulation of the timing can be continued by pressing push-button A. (Restart / Stop, Restart / Stop, ...).

*Date position may be located at different position depends on models.



P.5


FLIEGER

RONDA QUARTZ CHRONOGRAPH

CHRONOGRAPH: INTERMEDIATE OR INTERVAL TIMING

Example:

- 1 Start: (start timing)
- 2 Display interval: (e.g. 20 minutes 17 seconds (timing continues in the background))
- 3 Making up the measured time: (The chronograph hands are quickly advanced to the ongoing measured time.)
- 4 Stop: (Final time is displayed)
- 5 Reset: (The chronograph hands are returned to their zero positions.)

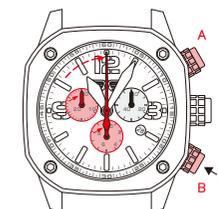

Please note
* Following 3, further intervals or intermediates can be displayed by pressing push-button B (display interval / make up measured time, ...).

*Date position may be located at different position depends on models.



P.6

FLIEGER



RONDA QUARTZ CHRONOGRAPH

ADJUSTING THE CHRONOGRAPH HANDS TO ZERO POSITION

Example:

One or several chronograph hands are not in their correct zero positions and have to be adjusted (e.g. following a battery change).

- 1 Pull out the crown to position III (all chronograph hands are in their correct or incorrect zero position).
- 2 Keep push-buttons A and B depressed simultaneously for at least 2 seconds (the second counter hand rotates by 360° → corrective mode is activated).

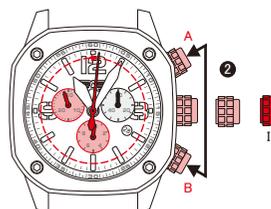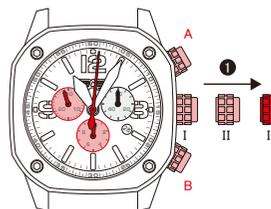

*Date position may be located at different position depends on models.



P.7


FLIEGER

RONDA QUARTZ CHRONOGRAPH

ADJUSTING THE CHRONOGRAPH HANDS TO ZERO POSITION

- 1 Adjusting the second counter hand
Single step ▲ [A] 1 x short
Continuous ▲ [A] long
Adjusting the next hand [B] ▼
- 2 Adjusting the 1/10 second counter hand (position 6h)
Single step ▲ [A] 1 x short
Continuous ▲ [A] long
Adjusting the next hand [B] ▼
- 3 Adjusting the minute counter hand (position 9h)
Single step ▲ [A] 1 x short
Continuous ▲ [A] long
- 4 Returning the crown to position I

Termination of the chronograph hands adjustment (can be carried out at any time).

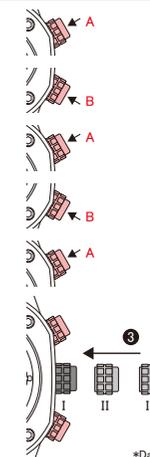

*Date position may be located at different position depends on models.



P.8