

Form 20332  
Rev. 1/50

INSTRUCTIONS  
FOR USING  
**SINGER**  
PORTABLE ELECTRIC  
SEWING MACHINE  
221-1

LOCK STITCH, FOR FAMILY USE  
WITH FOOT CONTROL

WHEN REQUIRING  
NEEDLES, OIL,  
PARTS OR  
REPAIRS FOR  
YOUR MACHINE



LOOK FOR THE  
RED "S"  
THERE ARE  
SINGER SHOPS IN  
EVERY CITY

THE SINGER MANUFACTURING CO.

Printed in U. S. A.

[www.Singer-Featherweight.com](http://www.Singer-Featherweight.com)

THE IMPORTANCE OF USING  
**SINGER\*** LUBRICANTS FOR YOUR  
ELECTRIC SEWING MACHINE

—  
"The Best is the Cheapest"  
—

Use **SINGER SEWING MACHINE**  
OIL on Machine

Knowing from many years' experience the great importance of using good oil, SINGER sells an extra quality sewing machine oil, in cans, especially prepared for sewing machines.


Use **SINGER MOTOR LUBRICANT**  
on Motors and Gears of Machine

The **SINGER MOTOR LUBRICANT** is especially prepared for lubricating the bearings of the electric motor and gears of the sewing machine. This is a pure non-flowing compound which retains its consistency and possesses high lubricating qualities.

Copyright, U. S. A., 1915, 1920, 1921, 1923, 1924, 1926, 1928,  
1931, 1932, 1933, 1935, 1936, 1937, 1938,  
1940 and 1941 by The Singer Manufacturing Company  
All Rights Reserved for all Countries

INSTRUCTIONS  
FOR USING  
**SINGER\***  
PORTABLE ELECTRIC  
SEWING MACHINE  
221-1

ROTARY HOOK, FOR FAMILY USE

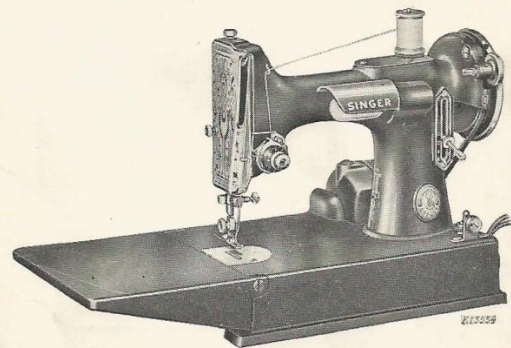

—  
\*A Trade-Mark of  
THE SINGER MANUFACTURING CO.

[www.Singer-Featherweight.com](http://www.Singer-Featherweight.com)

To all whom it may concern:

The placing or renewal of the name "Singer" (Reg. U. S. Pat. Off.) or any of the trade marks of the Singer Manufacturing Company on any machine that has been repaired, rebuilt, reconditioned, or altered in any way whatsoever outside a Singer factory or an authorized Singer agency is forbidden.

Genuine Singer Needles should be used  
in Singer Machines  
These Needles and their Containers  
are marked with the  
Company's Trade Mark "SIMANCO." 1

Needles in Containers marked  
"For Singer Machines"  
are not Singer made needles. 2

[www.Singer-Featherweight.com](http://www.Singer-Featherweight.com)

## DESCRIPTION

Machine 221-1, for family use, has a rotary sewing hook and makes the lock stitch.

It has reverse feeding mechanism by means of which the machine stitches as readily in a reverse direction as it does in a forward direction.

It is especially designed for operation by electricity, having an electric motor attached to the rear part of its bed. The motor drives the machine through a belt and the speed is regulated by a foot controller.

It is also equipped with an electric Singerlight.

## SINGER SERVICE

Now that you have purchased your new Singer, we do not want you to feel that your relations with us have come to an end. You are cordially invited to visit your Singer Shop at any time for assistance in your sewing problems. You will be most welcome.

We hope, too, that you will make the Singer Shop your headquarters for sewing supplies and service. Only there or through authorized, bonded Singer representatives can you secure genuine Singer oil, needles, belts, parts, etc., so important in getting the best results from your machine. And remember, only an authorized Singer representative should be allowed to touch your machine when repairs or adjustments are required.

World-wide Singer Service has no equal. Use it!

### Motor Can be Operated on Either Alternating Current or Direct Current

The electric motor, which is located at the back of the machine, can be operated on either alternating current or direct current, as desired. The standard windings of the motor are for 110 volts, and motors can be furnished for any voltage between 100 and 250.

Special motors for 32 volts direct current, and for 50 volts alternating current and direct current, have also been developed and are available.

### Points to Determine Before Connecting Motor to Electric Service Line

Obtain the following information from the Electric Light Company which supplies the electric current for the circuit to which the motor is to be connected:

1. If current is direct, what is the voltage? The voltage must be within the range stamped on the name plate of the motor.
2. If current is alternating, in addition to the voltage, what is the number of cycles? The number of cycles must be within the range stamped on the name plate of the motor.

The voltage of any circuit and, if alternating current, the number of cycles, can be verified by looking at the name plate on service watt meter installed by the local Electric Light Company.

### To Connect the Machine to Electric Service Line

Unwind the long electric cord furnished with the machine. Push the terminal plug at one end

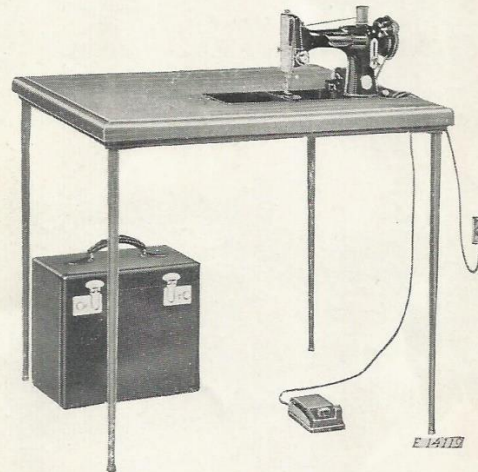


FIG. 2. MACHINE 221-1 ON TABLE 308

of the electric cord as far as it will go on the three-pin terminal block at the right of the machine. Attach the plug at the other end of the cord to the nearest electric outlet.

Place the foot controller in a convenient position on the floor and the machine is ready for operation.

### CAUTION

When you have finished your sewing, always disconnect the plug from the electric outlet.

### SINGERLIGHT

To turn the SINGERLIGHT "on" or "off," a switch is conveniently located at the front of the machine as shown at D, Fig. 7.

#### To Remove and Replace the Bulb

Do not attempt to unscrew the bulb. It is of the bayonet and socket type and does not unscrew.

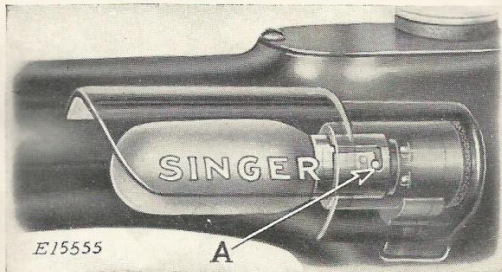


FIG. 3. REPLACING THE BULB

To remove the bulb. Press the bulb into the socket and at the same time turn the bulb over from you as far as it will go, then withdraw the bulb.

To insert a new bulb. Press the bulb into the socket and turn it over toward you until the bulb pin (A) enters the notch in the socket, as shown in Fig. 3.

#### To Insure Perfect Action of the Machine

Do not run the machine with the presser foot resting on the feed without cloth under the presser foot.

Do not run the machine when both bobbin case and needle are threaded, unless there is material under the presser foot.

Do not try to help the machine by pulling the fabric, lest you bend the needle. The machine feeds the work without assistance.

#### To Pack Up the Outfit

When placing the machine in its case, have balance wheel at the right hand side of case and see



FIG. 4. CARRYING CASE

that the base of the machine is at the right of the cleat at the bottom of the case.

### To Operate the Machine

Raise the presser foot (B) by means of the presser bar lifter (C) to prevent injury to the foot (B) and feed (A).

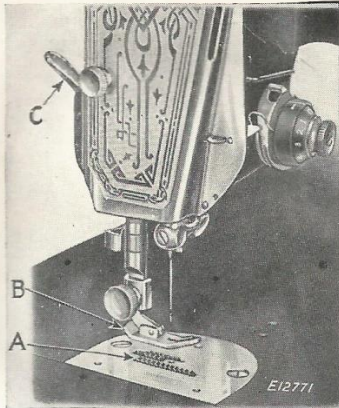


FIG. 5. FRONT VIEW OF THE MACHINE

Place a piece of cloth under the presser foot and let the foot down upon it.

Turn on the electric current and press the foot controller. As the pressure on the foot controller is increased, the speed of the machine is increased, the speed being controlled by the amount of pressure on the foot controller. Operate the machine in this way, without being threaded, until you have become accustomed to guiding the material and operating the foot controller.

### To Remove the Bobbin

Turn the balance wheel over toward you until the thread take-up lever (6, Fig. 13) is raised to

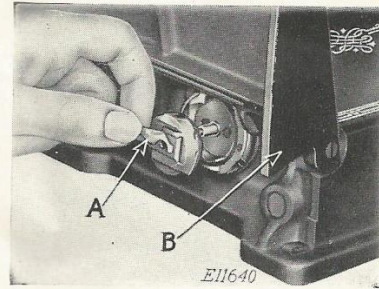


FIG. 6. REMOVING THE BOBBIN CASE

its highest position. Raise the bed extension (B, Fig. 6) as far as it will go and with the thumb and forefinger of the left hand open the bobbin case latch (A, Fig. 6) and lift out the bobbin case. While the latch remains open, the bobbin is retained in the bobbin case. Release the latch, turn the open end of the bobbin case downward and the bobbin will drop out.

### To Wind the Bobbin

It is necessary to understand the stop motion (B, Fig. 7) by which the balance wheel (A, Fig. 7) can be released when required, thus permitting the winding of bobbins without running the stitching mechanism.

Release the balance wheel by turning the stop motion screw (B, Fig. 7) over toward you. It is necessary to hold the balance wheel while loosening the stop motion screw.

Place the bobbin on the bobbin winder spindle and push it on as far as it will go. Put the spool of

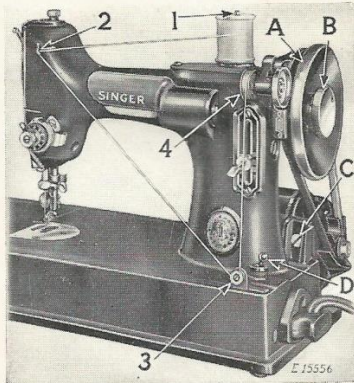


FIG. 7. WINDING THE BOBBIN

thread on the spool pin (1) and pass the thread from the spool into the thread guide (2), then under and between the tension discs (3) at the front of the bed and through one of the holes in the left side of the bobbin (4) from the inside. Press down the bobbin winder pulley against the belt. Then press the foot controller the same as for sewing.

The end of the thread must be held by hand until a few coils are wound and should then be broken off. When sufficient thread has been wound upon the bobbin, pull the bobbin winder pulley away from the belt and remove the bobbin from the spindle.

If the thread does not wind evenly on the bobbin, loosen the screw which holds the tension bracket (3) in position on the bed of the machine and slide the tension bracket to the right or left, as may be required, then tighten the screw.

[www.Singer-Featherweight.com](http://www.Singer-Featherweight.com)

### To Thread the Bobbin Case

Hold the bobbin between the thumb and forefinger of the right hand, with the thread on top drawing from right to left, as shown in Fig. 8.



FIG. 8

With the left hand hold the bobbin case as shown in Fig. 8, the slot in the edge being at the top, and place the bobbin into the bobbin case.

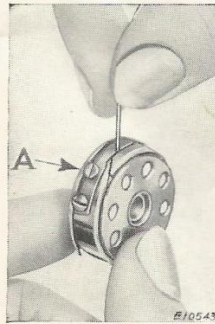


FIG. 9

Then pull the thread into the slot as shown in Fig. 9, and back under the tension spring into the slot at the end of the tension spring as shown in Fig. 10.

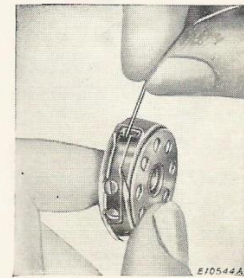


FIG. 10

### To Replace the Bobbin Case

After threading, take the bobbin case by the latch, holding it between the thumb and forefinger

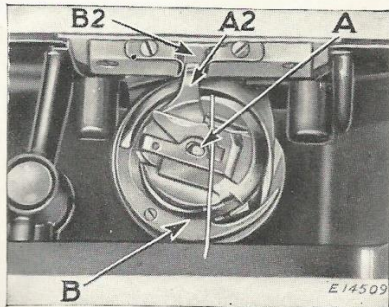


FIG. 11. BOBBIN CASE THREADED AND REPLACED

of the left hand. Place the bobbin case on the center stud (A, Fig. 11) of the bobbin case base with the thread drawing from the top of the bobbin case. Release the latch and press the bobbin case back until the latch catches the groove near the end of the stud. Allow about three inches of thread to hang free from the bobbin case and turn down the bed extension.

**CAUTION**—In case the throat plate is removed for cleaning the stitch-forming mechanism, etc., **make certain**, when replacing the throat plate, that the position finger (A2, Fig. 11) of the bobbin case base enters the notch (B2, Fig. 11) of the position plate attached to the underside of the throat plate.

### To Set the Needle

Turn the balance wheel over toward you until the needle bar is at its highest position, and loosen the thumb screw (A, Fig. 12) in the needle clamp.

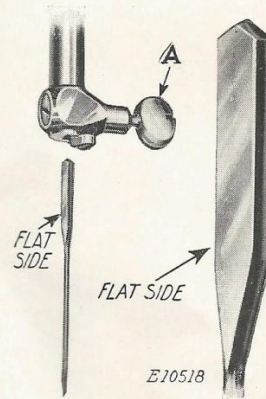


FIG. 12. POSITIONING OF NEEDLE IN NEEDLE CLAMP

Have the flat side of the shank of the needle toward the left as shown above and put the needle up into the clamp as far as it will go. Then tighten the thumb screw.

To select the correct needle see page 56.



### Upper Threading

Turn the balance wheel over toward you until the thread take-up lever (6) is raised to its highest position. Place the spool of thread on the spool pin

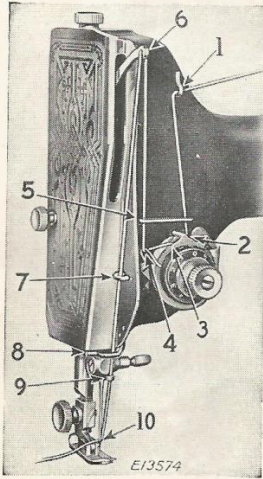


FIG. 13. UPPER THREADING

at the top of the machine; pass the thread into the thread guide (1) at the left, down, under and from right to left between the tension discs (2). Hold the spool tightly with the right hand and, with the left hand, pull the thread up under the thread take-up spring (4) until it enters the retaining fork (3), then pass the thread up and back of the wire thread guide (5) and from right to left through the hole (6) in the end of the thread take-up lever, down into the eyelet (7), at the side of the face plate, into the lower wire thread guide (8), into the guide (9) in the needle clamp, then from right to left through the eye of the needle (10). Draw about two inches of thread through the eye of the needle with which to commence sewing.

### To Prepare for Sewing

With the left hand, hold the end of the thread, leaving it slack from the hand to the needle. Turn

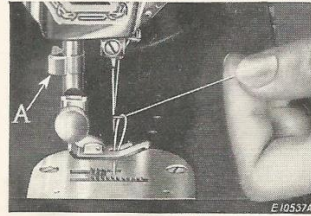


FIG. 14. DRAWING UP BOBBIN THREAD

the balance wheel over toward you until the needle moves down and up again to its highest point, thus catching the bobbin thread. Draw up the needle thread and the bobbin thread will come up with it through the hole in the throat plate, as shown in Fig. 14. Lay both threads back under the presser foot diagonally across the feed, as shown in Fig. 14A, to the right or left, depending upon which side of the needle the material is to be located, so that when the presser foot is lowered, the threads will be firmly held between the feed and the presser foot.

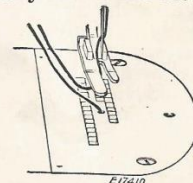


FIG. 14A. THREADS IN POSITION TO COMMENCE SEWING

### To Commence Sewing

Place the material beneath the presser foot, lower the presser foot and commence to sew.

When sewing thick material, it may be necessary to turn the balance wheel over toward you to start the machine. This should also be done if the machine stops when sewing across thick seams.

### To Remove the Work

Stop the machine with the thread take-up lever (6, Fig. 13) at its highest position, raise the presser foot and draw the fabric back and to the left, pass the threads over the thread cutter (A, Fig. 14) and pull down lightly to sever them. Leave the ends of the threads under the presser foot.

### To Turn a Corner

Stop the machine when the needle is commencing its upward stroke. Raise the presser foot and turn the work as desired, using the needle as a pivot, then lower the presser foot.

### To Regulate the Pressure on the Material

For ordinary family sewing, it is seldom necessary to change the pressure on the material. If sewing fine silk or flimsy material, lighten the pressure by turning the thumb screw (C, Fig. 25) on the top of the machine over to the left so that it screws up. To increase the pressure, turn this thumb screw over to the right so that it screws down. The pressure should be only heavy enough to prevent the material from rising with the needle and to enable the feed to move the work along evenly. The heavier the material, the heavier the pressure; the lighter the material, the lighter the pressure.

### To Regulate the Direction of Feed

To feed the goods **from you**, push down the stitch regulator lever (C, Fig. 15) as far as it will go.

To feed the goods **toward you**, raise the stitch regulator (C) as high as it will go.

The direction of the feed can be reversed at any point of a seam without removing the work from the machine.

Back tacking is therefore readily accomplished and the fastening of the ends of seams is made easy.

### To Regulate the Length of Stitch

The machine can be adjusted to make from 6 to 30 stitches to the inch, as indicated by the numerals on the stitch indicator plate (A, Fig. 15).

The number of stitches to the inch that the machine is set to make is indicated by the number which is in line with the stitch regulator lever (C, Fig. 15).

To change the length of stitch, screw the thumb nut (B, Fig. 15) away from the stitch indicator plate (A) as far as it will go. Then move the stitch regulator lever (C) until it is in line with the number designating the desired length of stitch and screw the thumb nut (B) inward until it touches the stitch indicator plate.

The machine will now make the indicated number of stitches to the inch in either a forward or reverse direction, depending on whether the lever (C) is at its lowest or highest position.

### Basting

The longest stitch made by the machine, No. 6 on the stitch indicator, is found satisfactory for basting, after loosening the tension on the needle thread so that the stitches may be easily pulled from the material.

Machine basting is firmer and more even than that done by hand, in addition to being much quicker.

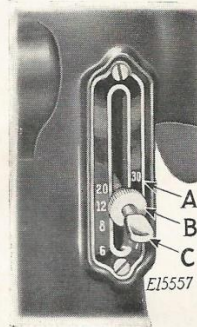


FIG. 15. SHOWING LEVER FOR REVERSING DIRECTION OF FEED AND REGULATING LENGTH OF STITCH

### To Sew Flannel or Bias Seams

Use a short stitch and as light a tension as possible on the needle thread so as to leave the thread loose enough in the seam to allow the goods to stretch if necessary.

#### Tensions

For ordinary stitching, the needle and bobbin threads should be locked in the center of the thickness of the material, thus:



FIG. 16. PERFECT STITCH

If the tension on the needle thread is too tight, or if that on the bobbin thread is too loose, the needle thread will lie straight along the upper surface of the material, thus:

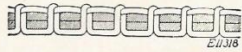


FIG. 17. TIGHT NEEDLE THREAD TENSION

If the tension on the bobbin thread is too tight, or if that on the needle thread is too loose, the bobbin thread will lie straight along the under side of the material, thus:



FIG. 18. LOOSE NEEDLE THREAD TENSION

**CAUTION**—It is important for the tension thumb nut (B, Fig. 19) to have a firm fit on tension stud (O, Fig. 20, page 20) to keep the numbered dial (D) in the position set for the required tension. To remedy a loose fit of the nut, remove parts B, D, E, F and G, Fig. 20, and slightly spread the stud, then re-assemble the parts as instructed on pages 20 to 23 inclusive.

### To Regulate the Needle Thread Tension

The tension on the needle thread can be regulated only when the presser foot is down.

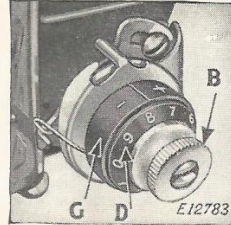


FIG. 19. NEEDLE THREAD TENSION

The numbered dial (D, Fig. 19) is marked with numbers ranging from 0 to 9 which indicate different degrees of tension that can be produced. The numbers do not denote a particular size of thread. By noting the number which is opposite the center line between the plus and minus signs, on the indicator (G) when set for a satisfactory tension on the work being stitched, the number can be readily reverted to when a change is made in the tension or size of thread.

**To increase the tension**, turn the thumb nut (B) over to the right until the desired number on the numbered dial (D) is opposite the center line, the highest numbers denoting increased tension.

**To decrease the tension**, turn the thumb nut (B) over to the left, the lower numbers indicating less tension.

The tension indicator (G) is marked with the signs + and —, which also indicate the direction in which to turn the thumb nut (B) for more or less tension.

#### To Regulate the Bobbin Thread Tension

The tension on the bobbin thread is regulated by the screw (A, Fig. 9) which is nearest the center of the tension spring on the outside of the bobbin case. To increase the tension, turn the screw (A) over to the right. To decrease the tension, turn this screw over to the left.

When the tension on the bobbin thread has been once properly adjusted, it is seldom necessary to change it, as a correct stitch can usually be obtained by varying the tension on the needle thread.

### To Disassemble the Needle Thread Tension

Turn the thumb nut (B, Fig. 20) to the left until it stops at "0" on the numbered dial, then press in

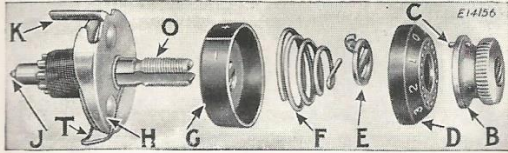


FIG. 20

the dial to disengage the pin (C) in the thumb nut from the dial, and remove the thumb nut and dial, stop washer (E), tension spring (F), indicator (G) and tension disc assembly (H) which includes the thread take-up spring, thread guard plate and two discs.

**Note.** It is not necessary to remove the stud (O, Fig. 20) from the machine arm in order to disassemble the thread tension. It is shown removed, in Fig. 20, only for the purpose of illustration.

### To Reassemble the Needle Thread Tension

First make sure that the tension releasing pin (J), only the end of which is shown in Fig. 20, is in place in the stud (O).

Place the two tension discs (L, Fig. 21) with the flat thread-bearing sides of the discs together in position on the thread guard (M). Then pass the eyelet

(N) of the thread take-up spring under the thread guard, having the coils of the spring above the tension discs as shown in Fig. 21.

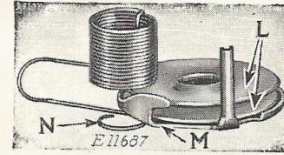


FIG. 21

Guide the tension disc assembly onto the stud so that the extension (K, Fig. 20) of the thread guard enters the hole in the machine arm, and the tail (inside the coil) of the thread take-up spring enters one of the grooves in the stud. Next replace the indicator with the large open side facing the end of

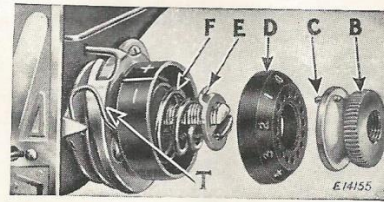


FIG. 22

the stud so that the plus and minus marks will be at the top (with the minus sign at the left) and hold the parts, thus assembled, against the shoulder of the stud. Then insert the tension spring (F, Fig. 20) in the indicator with the first (half) coil of the spring

straddling the lower half of the stud. Guide the stop washer (E) onto the stud so that the extension will be above the tension stud. If the spring and stop washer are in correct position, the extension (S) will clear the first (half) coil of the tension spring as shown in Fig. 23.



FIG. 23

Next place the numbered dial on the stud so that the numeral 2 is opposite the stop washer extension, then push the dial to compress the spring so that the thumb nut can be turned onto the stud, carefully guiding the pin in the thumb nut into one of the holes of the numbered dial. Then lower the presser bar and turn the thumb nut (B) to the left until it stops at "0." Thread the tension and pull the thread through the tension discs to test the amount of tension on the thread at the "0" position. At this point there should be a slight pull on the thread to indicate that there is a minimum tension, which gradually increases with the turn of the thumb nut to the right, providing a full range of tensions from light to heavy within one revolution of the thumb nut.

If the pull is too strong for a minimum tension, press in the numbered dial to disengage the pin in the thumb nut from the dial, and reset the pin in one of

the holes to the **left** of the previous setting. This resetting of the pin will produce less tension at zero. Repeat this process until the desired minimum tension is obtained.

On the other hand, should there be no tension at zero, press in the dial and reset the pin in one of the holes to the **right** of the previous setting, repeating this process until a slight tension is obtained.

The tension on the thread take-up spring (T, Fig. 22) should be just sufficient to take up the slack of the needle thread until the eye of the needle reaches the goods in its descent.

If the tension on the thread take-up spring requires adjustment, remove the tension disc assembly, disengage the end of the spring from the groove in the tension stud, revolve the spring and place its end in the groove which produces the correct tension.

#### **If Correct Stitching is Not Obtained:**

If the bobbin thread tension has been disturbed, or a correct stitch cannot be obtained without a very heavy or very light needle thread tension, then the following procedure is recommended:

Using No. 50 thread in the needle and on the bobbin, adjust the needle thread tension as instructed above and on page 22. Then turn the tension thumb nut to "3" and, with two thicknesses of thin material in the machine, adjust the bobbin thread tension, as instructed on page 19, until the stitch is correctly locked in the material as shown in Fig. 16.

A wide range of materials and threads can now be accommodated without further adjustment of the bobbin thread tension.

### To Oil the Machine

To insure easy running, the machine requires oiling and if used continuously it should be oiled each day. With moderate use, an occasional oiling

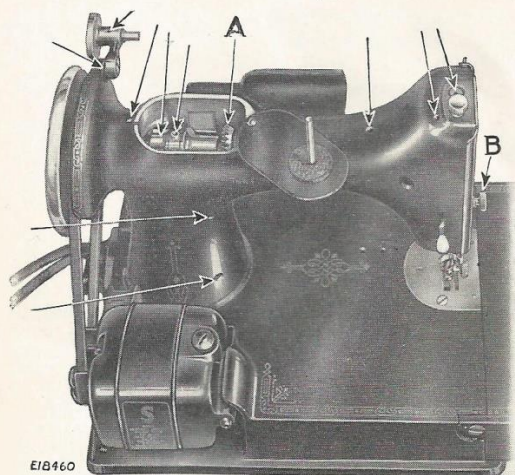


FIG. 24. REAR VIEW, SHOWING OILING POINTS

is sufficient. Oil should be applied at each of the places shown by unlettered arrows in Figs. 24, 25 and 26. One drop of oil at each point is sufficient. Oil holes are provided in the machine for bearings which cannot be directly reached

Turn back the cover at the back of the machine and oil the moving parts inside the arm as indicated in Fig. 24, and occasionally apply a small quantity of **SINGER MOTOR LUBRICANT** to the teeth of the gear (A, Fig. 24), then replace the cover.

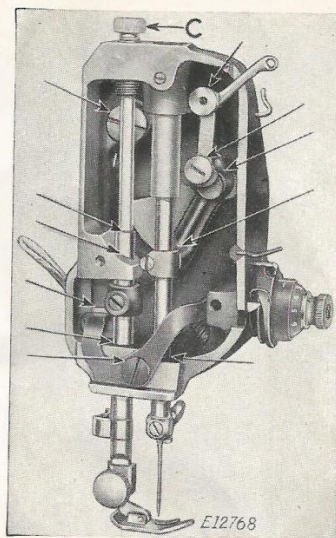


FIG. 25. END VIEW, SHOWING OILING POINTS

Take out the face plate thumb screw (B, Fig. 24) and remove the face plate. Put one drop of oil into each of the oil holes and joints thus uncovered, as indicated in Fig. 25, then replace the face plate and thumb screw.

**To oil the Hook Mechanism**, occasionally apply a drop of oil at the hook bearing indicated by B, in Fig. 11.

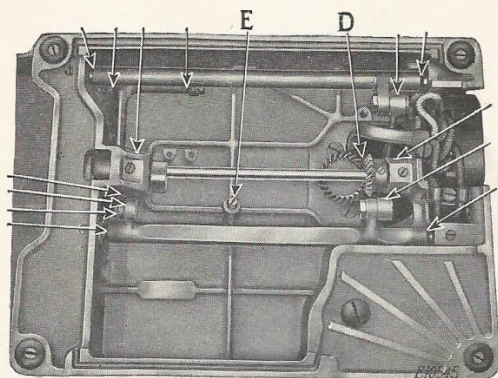


FIG. 26. OILING POINTS AT BASE OF MACHINE

To reach the parts underneath the bed of the machine, turn the machine over on its rear side. Remove the thumb nut from the screw (E, Fig. 26) at the center of the large cover plate underneath the bed of the machine and remove the cover plate. Apply oil to the oil holes and bearings indicated by the unlettered arrows in Fig. 26, and occasionally apply a small quantity of **SINGER MOTOR LUBRICANT** to the teeth of the gears (D, Fig. 26), then replace the bed cover plate and fasten it as before with the thumb nut, being careful not to turn the thumb nut too tightly.

#### To Lubricate the Motor

USE ONLY **SINGER MOTOR LUBRICANT** FOR LUBRICATING THE MOTOR. A tube of this lubricant is sent with the machine.

The **SINGER MOTOR LUBRICANT** is a specially prepared non-flowing compound which is not affected by varying temperatures. It is the only lubricant which will positively lubricate the motor. Other lubricants, including oil or ordinary grease must not be used for lubricating the motor as they are harmful for this purpose.

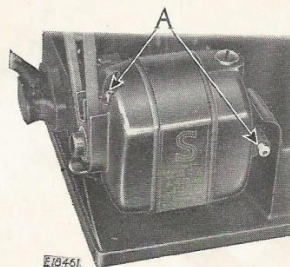


FIG. 27. MOTOR GREASE TUBES

When the machine is shipped from the factory, the two motor grease tubes (A, Fig. 27) are filled with sufficient **SINGER MOTOR LUBRICANT** for approximately six months use, under ordinary circumstances.

At least once every six months thereafter, these grease tubes should be refilled with the **SINGER MOTOR LUBRICANT**. To do this, insert the tip of the motor lubricant tube into the hole of each of the grease tubes and force the lubricant through each hole until both grease tubes are filled.

## HINTS

**Belts.** See that the belt has the correct tension. The tension should be only enough to keep the belt from slipping. If the belt tension is incorrect, loosen the screw (C, Fig. 7) about one turn and allow the motor to drop downward until the belt has the correct tension, then tighten the screw (C).

**Machine Working Heavily.** If the machine runs hard after standing idle for some time, use a little kerosene in the oiling places, run the machine rapidly, then wipe clean and oil.

**To Avoid Breaking the Needles.** See that the presser foot or attachments are securely fastened by the thumb screw. Do not sew heavy seams or very thick goods with too fine a needle. A large needle and thread to correspond should be used on heavy work (see page 56).

See that the needle is not bent, and avoid pulling the material when stitching.

**Breaking of Needle Thread.** If the needle thread breaks it may be caused by:

Improper threading.  
Tension being too tight.  
The thread being too coarse for size of needle.  
The needle being bent, having a blunt point,  
or being set incorrectly.

**Breaking of Bobbin Thread.** If the bobbin thread breaks it may be caused by:

Improper threading of bobbin case.  
Tension being too tight.

**Skipping of Stitches.** The needle may not be accurately set into the needle bar or the needle may be blunt or bent. The needle may be too small for the thread in use.

**Free Instruction** for using the machine is gladly given at any SINGER Shop.

## INSTRUCTIONS FOR USING THE ATTACHMENTS

## The Foot Hemmer

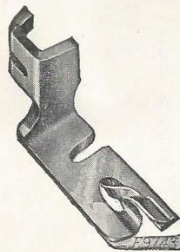


FIG. 28. THE FOOT HEMMER

The Foot Hemmer (Fig. 28) is attached to the machine in place of the presser foot. Raise the needle to its highest position, loosen the thumb screw which clamps the presser foot to the presser bar and remove the presser foot. Attach the Foot Hemmer to the bar, taking care to tighten the screw firmly so that the Hemmer will not become loose when the machine is running. Turn the balance wheel slowly to make sure that the needle goes through the center of the needle hole, and that the lower thread is properly pulled up.

**How to Start the Hem at the Very Edge**

How to start the hem at the very edge of the material is of great importance in learning to use the Hemmer. If the hem is not started at the edge and the material is pulled bias a perfect hem cannot be made.



There are several ways of starting the hem at the edge, but the most practical one is as follows:

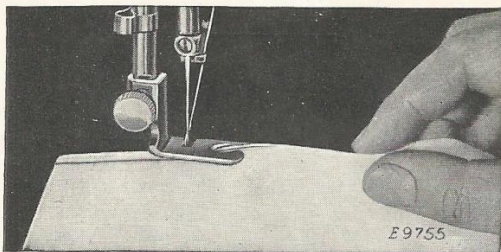


FIG. 29. STARTING A HEM AT THE EDGE

1. Fold over about  $\frac{1}{8}$ " of the edge of the material at the starting point for a distance of about one inch.
2. Place the material in the Hemmer at an angle leading to the right at a point just beyond the fold.
3. Draw the material toward you through the Hemmer, as shown in Fig. 29, at the same time making the second fold at the very edge. Continue to draw the material through the Hemmer until the edge is just under the needle. Place the upper and lower threads together under the Hemmer foot, and assist in starting of the hem by slightly pulling the threads from the back as the machine is run.

### Making a Hem with the Foot Hemmer

The same width of material must be kept in the Hemmer at all times. After placing the correct

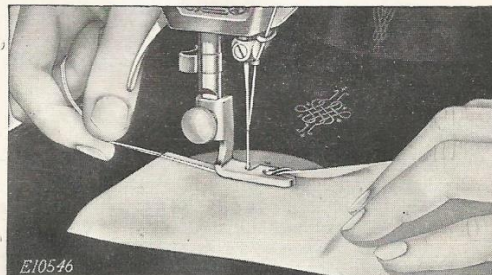


FIG. 30. MAKING A HEM WITH THE FOOT HEMMER

width of material in the Hemmer, hold it in a straight line and you will find it quite easy to make a perfect hem. See Fig. 30.

### Making a Hemmed Seam with the Foot Hemmer

The hemmed seam is very practical to use on underwear or, in fact, on any garment where a straight seam is used and where a small double seam would be suitable.

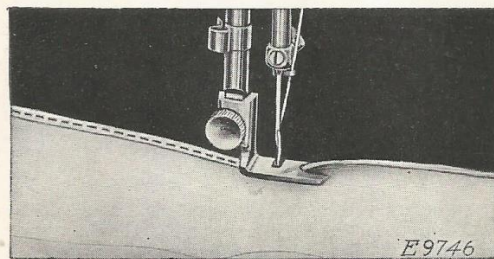


FIG. 31. MAKING A HEMMED SEAM

When using this seam, the garment must first be fitted and the edge of the material trimmed, allowing for about one-eighth inch seam. The two edges are placed together and inserted in the Hemmer in the same manner as a single hem. See Fig. 31. If the material is bulky, the edge of the upper piece of material may be placed about one-eighth inch in from the edge of the lower piece.

The free edge of a hemmed seam may be stitched flat to the garment if desired. First open the work out flat, then place the hem in the scroll of the Hemmer, which acts as a guide, holding the edge of the hem in position while it is being stitched.

If the seam is stitched flat to the garment, one row of stitching is visible on the right side.

The hemmed seam may be used on muslin, lawn, percale, organdie or other fine materials where a narrow seam is desirable.

#### Hemming and Sewing on Lace in One Operation

Start the hem in the regular way and, with the needle holding the hem in position, raise the presser

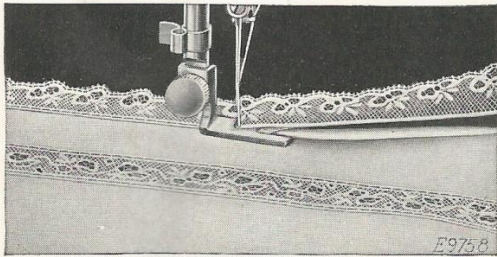


FIG. 32. HEMMING AND SEWING ON LACE

bar sufficiently to allow the edge of the lace to be slipped in under the Foot Hemmer, at the same time bringing it up through the slot at the right of the Hemmer. See Fig. 32. Lower the bar, turn the

balance wheel and catch the edge of the lace with the needle. Guide the hem with the right hand and the lace with the left. Care should be taken not to stretch the lace as it is being fed into the Hemmer.

It is not practical to sew gathered lace on with the Foot Hemmer, as the full lace catches in the Hemmer slot.

A very attractive way of applying lace so that the stitching of the hem is not visible, is to start the hem in the regular way, slipping the lace in from the left until the edge is caught in with the hem in the same manner as the upper piece of material when making a hemmed seam.

#### ADJUSTABLE HEMMER—Hemming

Remove the presser foot and attach the adjustable hemmer in its place, as shown in Fig. 33. This

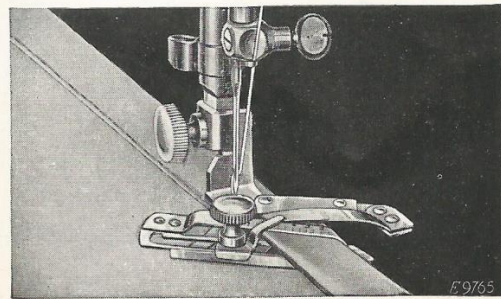


FIG. 33

hemmer will turn hems from  $\frac{3}{16}$  inch to  $\frac{1}{8}$  inch wide. The adjustment is made by loosening the thumb screw on the hemmer and moving the scale to the right or left until the hem turned is of the desired width. Place the cloth under the hemmer and draw the edge toward the left under the scale, as shown

in Fig. 33. Draw the edge of the cloth back and forth until the fold of the hem is formed, stopping with the end under the needle. Lower the presser bar and commence to sew, being careful to so guide the cloth as to keep the hemmer full.

#### ADJUSTABLE HEMMER—Wide Hemming

To make a hem more than  $\frac{1}{8}$  inch wide, loosen the thumb screw in the hemmer and move the scale

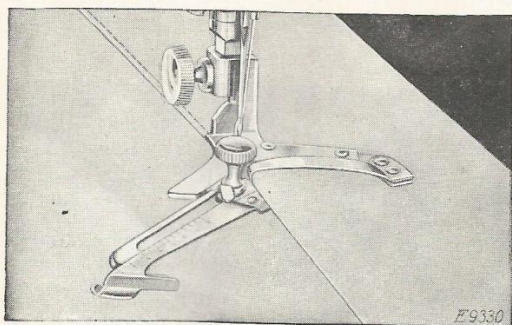


FIG. 34

to the right as far as it will go, then swing it toward you as shown in Fig. 34 and tighten the thumb screw. Fold and crease down a hem of the desired width; pass the fold under the extension at the right of the hemmer, and the edge into the folder as shown in Fig. 34, and proceed to stitch the hem.

#### Attaching the Binder to the Machine

Raise the needle to its highest position and remove the presser foot from the machine by loosening the

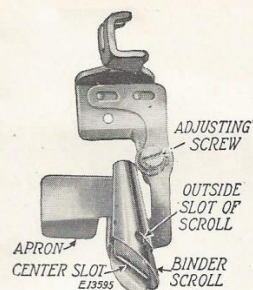


FIG. 35

thumb screw which holds it in place. Compare the foot of the Binder and the presser foot, and you will see that they are attached to the machine in the same manner. Attach the Binder to the presser bar. Turn the balance wheel slowly toward you to make sure that the Binder is properly attached to the bar and that the needle goes through the center of the needle hole.

#### Inserting the Binding in the Binder

Cut the binding to a long point to left, as shown. Insert the pointed end in the binder scroll (Fig. 37) until the pointed end comes through the lower end of the scroll.



FIG. 36  
CUTTING POINT  
ON BINDING

Pull the binding through under the presser foot before starting to sew. Note that as the binding passes through the scroll of the Binder the edges are turned in.

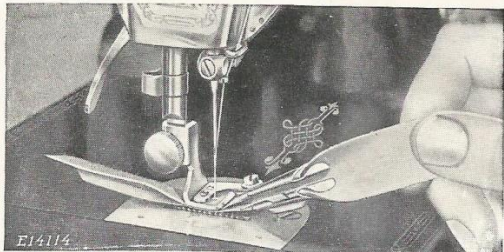


FIG. 37. INSERTING BINDING IN BINDER

#### Binding May be Purchased Cut and Folded for Use with the Binder

Folded bias binding may be purchased for use with the Binder. The binding comes in a variety of materials and colors. Folded bindings for use with the Binder must measure  $\frac{1}{2}$ " in width. The No. 5 width in standard brands usually measures  $\frac{1}{2}$ ", but it is always well to be sure of this before purchasing.

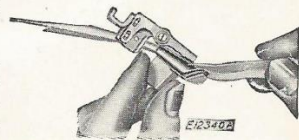


FIG. 38. INSERT FOLDED BINDING IN OUTSIDE SLOT

Folded binding is inserted in the outside slot of the Binder, as shown in Fig. 38. The Binder is adjusted and operated in the same manner as when using unfolded binding. One-half inch braid or ribbon may be used in the same manner.

A binding inserted in the outside slot of the Binder will be turned only once. It is therefore necessary to have finished edges when using binding in this slot.

#### The Adjustment and Operation of the Binder

The edge to be bound should be held well within the center slot of the scroll (A, Fig. 39). If the

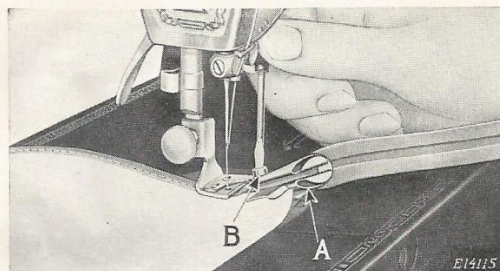


FIG. 39. ADJUSTING THE BINDER

material is allowed to slip away from the scroll when near the needle, the edge will not be caught in the binding. With a little practice it is quite easy to hold the edge in the scroll.

Various materials and conditions require different adjustments of the Binder to bring the stitching close to the edge. A wider adjustment of the Binder is required when binding curves than is necessary when binding a straight edge.

To adjust the Binder for stitching, loosen screw B, Fig. 39, and move scroll to the right for a narrower adjustment and to the left for a wider adjustment. Care should be taken to see that the screw is well tightened after making an adjustment. To become perfectly familiar with the adjustment of the Binder, practice is necessary.

### Binding Outside Curves

Practice is required to bind a curved edge properly. The edge to be bound must be allowed to pass freely

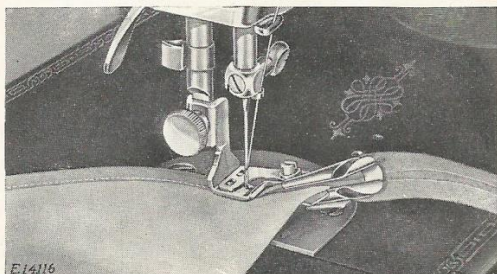


FIG. 40. BINDING AN OUTSIDE CURVE

through the scroll and should not be crowded against the wall of it. Guiding should be from the back

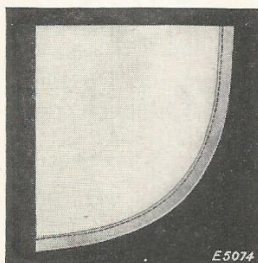


FIG. 41. SAMPLE OF  
OUTSIDE CURVE

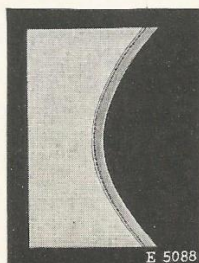


FIG. 42. SAMPLE OF  
INSIDE CURVE

of the Binder and to the left, allowing unfinished edges to swing naturally into the scroll of the Binder.

Never pull the binding as it feeds through the Binder, as bias material is very easily stretched and will be too narrow when it reaches the needle. When this occurs, the edges will not be turned.

When binding a curved edge (see Fig. 40), turn the material only as fast as the machine sews. It is not possible to hold the material in the entire length of the scroll when binding a small curve.

Do not push the material in too fast, as the edge will then become puckered, and do not stretch the material or the curve will not be the proper shape when finished. If the stitching does not catch the edge of the binding, the scroll should be adjusted a trifle to the left.

### Binding Inside Curves

It will be necessary to practice binding an inside curve on various kinds of material, as this curve is found on nearly all garments which may be finished with a bound edge.

When binding an inside curve with the Binder, straighten out the edge as it is being fed into the attachment. When doing this, care should be taken not to stretch the edge of the material.

If the material is soft, like batiste or crepe de chine, add a row of machine stitching close to the edge of the curve before binding.

### Applying a French Fold to a Curve

A French fold is applied by placing the material under the attachment and stitching the binding in

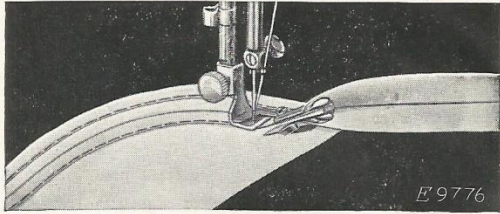


FIG. 43. APPLYING FRENCH FOLDS

position as shown in Fig. 43. A line made by basting or with chalk or pencil may be used as a guide in applying rows where wanted.

### THE EDGE-STITCHER

This useful attachment is fastened to the machine in place of the presser foot, and will be found an indispensable aid whenever stitching must be kept accurately on the extreme edge of a piece of material. The slots, numbered from 1 to 5 in Fig. 44, serve as guides for sewing together laces, insertions and embroideries, sewing in position hemmed or folded edges, piping or sewing flat braid to a garment.

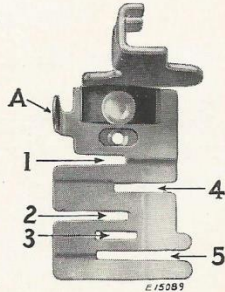


FIG. 44  
THE EDGE-STITCHER

### Adjusting the Edge-Stitcher

After attaching the Edge-Stitcher to the machine, turn the balance wheel slowly by hand to see that the needle goes through the center of the needle hole. The distance of the line of stitching from the edge of the material in the slots can be regulated by pushing the lug (A, Fig. 44) to the right or left. If it moves hard, put a drop of oil under the blue spring, then wipe it dry.

### Sewing Lace Together with the Edge-Stitcher

It is difficult to sew two lace edges together even after basting, but the Edge-Stitcher makes it possible to stitch on the very edge. Place one edge in

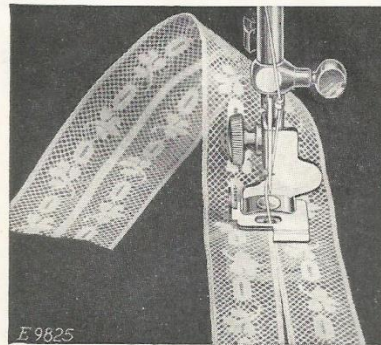


FIG. 45. SEWING LACE TOGETHER

slot 1 and the other in slot 4, and adjust lug (A, Fig. 44) until both edges are caught by the stitching. Hold the two pieces slightly overlapped to keep them against the ends of the slots. The thread tensions should be loose to avoid puckering of fine lace.

Lace and ribbon or other insertions can be set in by using the same slots (1 and 4, Fig. 44). The material may be folded over before placing it in the

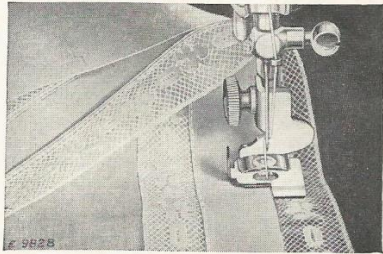


FIG. 46. SETTING IN LACE INSERTION

slot so that a double thickness is stitched and will not pull out. The surplus material is trimmed away close to the stitching as shown in Fig. 46.

#### Piping with the Edge-Stitcher

Piping is very attractive if the correct contrasting color is chosen for the piping material. Place the piping, with its finished edge to the left, in slot 3 (Fig. 44). Place the edge to be piped in slot 4, as shown in Fig. 47.

Piping should preferably be cut bias, and should be cut to twice the width of the slot (3, Fig. 44) in the Edge-Stitcher so that it can be folded once.

#### Applying Bias Folds with the Edge-Stitcher

Folded bias tape or military braid, used for neat and colorful trimming, may be sewn on by placing the garment under the Edge-Stitcher the same as under a presser foot, and placing the tape in slot 1 or 4 (Fig. 44). To make a square corner, sew until the turning point is reached, then remove the tape

from the attachment and form the corner by hand, replace it in the slot and continue stitching, as

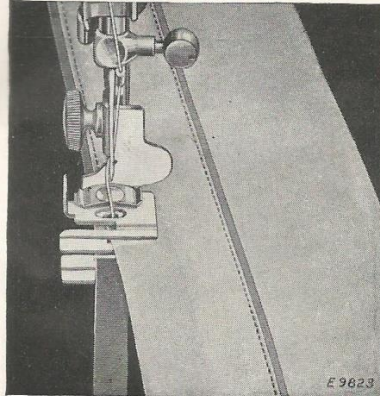


FIG. 47. PIPING WITH THE EDGE-STITCHER

shown in Fig. 48. To space two or more parallel rows, a guide line such as a crease, chalk mark or basting thread should be used.

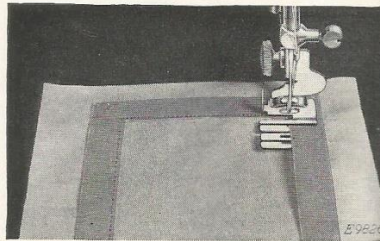


FIG. 48. APPLYING BIAS FOLDS WITH THE EDGE-STITCHER

### Stitching a Wide Hem with the Edge-Stitcher

A wide hem on sheets, pillow slips, etc., may be stitched evenly with the edge-stitcher after the hem

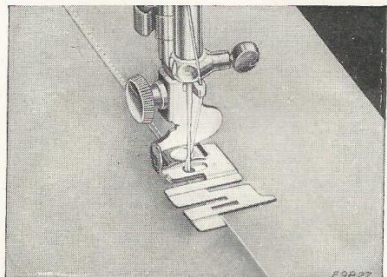


FIG. 49. MAKING A WIDE HEM

has been measured and the edge turned. Insert the edge in slot 5 as shown in Fig. 49 and adjust to stitch as close to the edge as desired.

### Making a French Seam

An even French seam may be made by inserting the two edges to be joined, wrong sides together, in slot 1 or 2 and stitching close to the edge; then folding both right sides together and inserting the back of the seam into slot 1 again and stitching with just enough margin to conceal the raw edges. See Fig. 50.

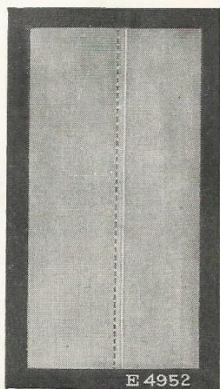


FIG. 50. A FRENCH SEAM

### Tucking with the Edge-Stitcher

Dainty narrow tucking may be produced on the Edge-Stitcher by inserting creased folds in slot 1 as shown in Fig. 51, and adjusting the Edge-Stitcher

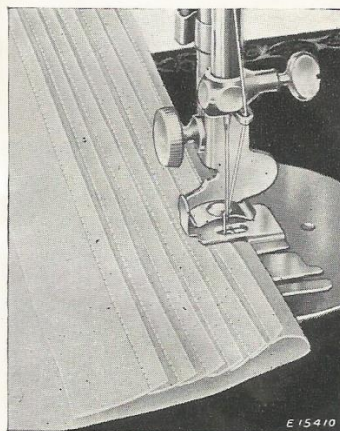


FIG. 51. TUCKING WITH THE EDGE-STITCHER

to right or left for the desired width of tuck, up to  $\frac{1}{8}$  inch. Successive tucks may be easily created by folding the material at the desired distance from the previous tuck, and then running the length of the fold over a straight edge such as the edge of the sewing machine cabinet. The secret of good tucking lies in a light tension, short stitch, and fine thread and needle.



### SHIRRING WITH THE GATHERER

The Gatherer is fastened to the machine in the same manner as the presser foot. Material placed under the Gatherer and stitched in the usual way will be slightly gathered. Any fabric that drapes well is especially suited for shirring with the Gatherer. Most shirring with the Gatherer is done with a long stitch and tight tension. To increase the fullness of the gathers, lengthen the stitch. To decrease the fullness, shorten the stitch.

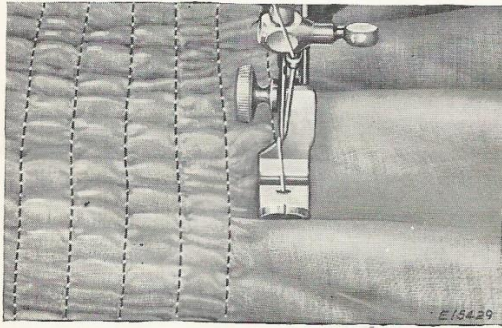


FIG. 52. THE GATHERER IN OPERATION

With the Gatherer, it is possible to shirr in narrow rows as shown in Fig. 52. The material may be guided as easily as when sewing with the presser foot. Fine materials, such as batiste, silk or net, may be very attractively shirred. Where only a slight fullness is required, as at the top of a sleeve or around the neck, the Gatherer will be found very convenient.

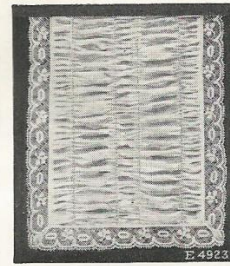


FIG. 53. SHIRRING

A very pleasing effect may be gained by using thread or embroidery silk of contrasting color on the bobbin. Fig. 54 shows a white organdie collar and cuff set with red and green smocking made with the Gatherer, using fine crochet cotton or tating thread on the top and white cotton on the bobbin.

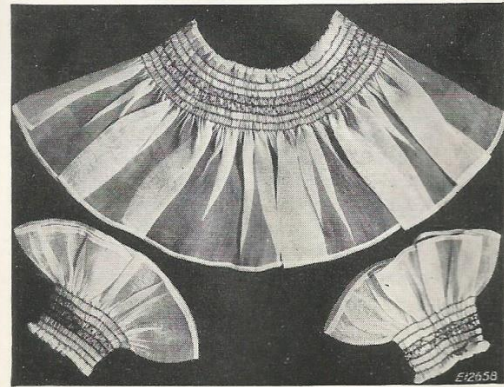


FIG. 54. SMOCKING

### RUFFLER

Lines 1, 2, 3, 4 and 5 shown in Fig. 55 indicate where the material is to be placed for various operations, as follows:

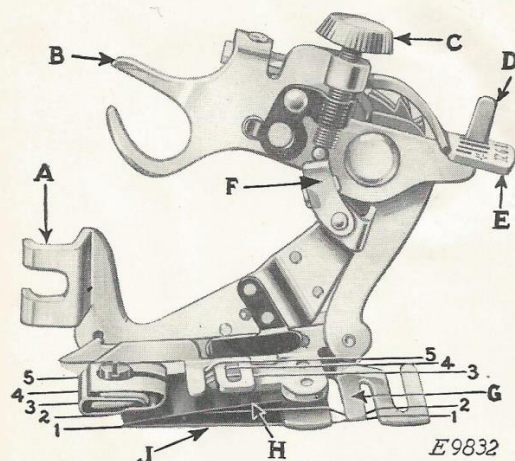


FIG. 55. THE RUFFLER AND ITS PARTS

- Line 1**—the correct position for the material to which the ruffled material is applied.  
**Line 2**—material to be ruffled.  
**Line 3**—the facing for the ruffle.  
**Line 4**—the strip of piping material.  
**Line 5**—the edge to be piped.

Refer to Fig. 55 when inserting the material in the ruffler.

The names and uses of the principal parts of the ruffler are as follows:

(SEE REFERENCES IN FIG. 55)

- A—FOOT**—the part by which the ruffler is attached to the presser bar.  
**B—FORK ARM**—the section that must be placed astride the needle clamp.  
**C—ADJUSTING SCREW**—the screw that regulates the fullness of the gather.  
**D—PROJECTION**—the part that projects through the slots in the adjusting lever.  
**E—ADJUSTING LEVER**—the lever that sets the ruffler for gathering or for making a plait once at every six stitches or once at every twelve stitches, as desired; also for disengaging the ruffler, when either plaiting or gathering is not desired.  
**F—ADJUSTING FINGER**—the part which regulates the width or size of the plaits.  
**G—SEPARATOR GUIDE**—the guide on the underside of the ruffler, containing slots into which the edge of the material is placed to keep the heading of the ruffle even; also for separating the material to be ruffled from the material to which the ruffle is to be attached.  
**H—RUFFLING BLADE**—the upper blue steel blade with the teeth at the end to push the material in plaits up to the needle.  
**J—SEPARATOR BLADE**—the lower blue steel blade without teeth, which prevents the teeth of the ruffling blade coming into contact with the feed of the machine or the material to which ruffle or plaiting is to be applied.

#### To Attach the Ruffler to the Machine

Raise the needle bar to its highest position and remove the presser foot. Attach the ruffler foot (A, Fig. 55) to the presser bar from the right and fasten by means of the thumb screw, at the same time placing the fork arm (B, Fig. 55) astride the needle clamp as shown in Fig. 56.

### To Adjust the Ruffler for Gathering

The adjusting finger (F, Fig. 56) is not intended for gathering and should be moved forward or away from the needle, as shown in Fig. 56.

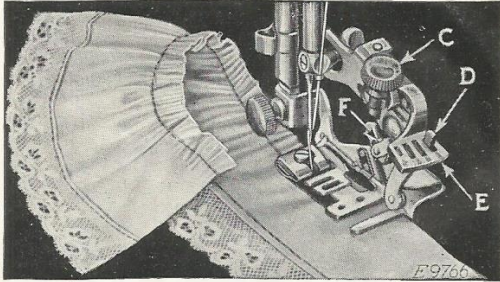


FIG. 56

Raise the adjusting lever (E, Fig. 56) and move it to the left so that the projection (D, Fig. 56) will enter the slot marked "1" in the adjusting lever (E) when the lever is released. The ruffling blade will then move forward and back once at every stitch. Insert the material to be ruffled between the two blue blades, following the line 2 in Fig. 55. Draw the material slightly back of the needle, lower the presser bar and commence to sew.

To make fine gathering, shorten the stroke of the ruffling blade by turning the adjusting screw (C, Fig. 56) upward; also shorten the stitch. To make full gathering, lengthen the stroke of the ruffling blade by turning the adjusting screw (C) downward; also lengthen the stitch. By varying these adjustments, many pleasing varieties of work can be accomplished.

### To Make a Ruffle and Sew it to a Garment in One Operation

Insert the material to be ruffled between the two blue blades, as shown in Fig. 57, following the line

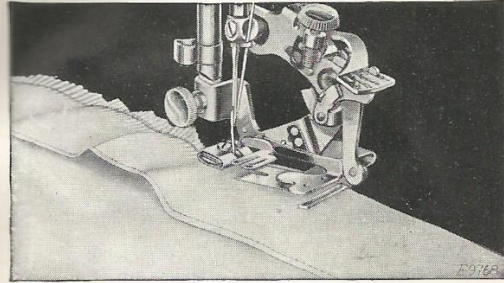


FIG. 57

2, in Fig. 55. Place the garment to which the ruffle is to be attached, under the separator blade, following the line 1, in Fig. 55. Proceed the same as for gathering.

The edge of the ruffled seam can later be bound by using the Binder.

### To Ruffle and Sew on a Facing in One Operation

Insert the material to be ruffled between the two blue blades, following the line 2, in Fig. 55. Place the garment to which the ruffle is to be attached under the separator blade, following the line 1, in Fig. 55. Place the material for the facing over the upper blue blade, as shown in Fig. 58, following the line 3, in Fig. 55. The facing may be straight or bias material. If the facing is to be on the right side of the garment, place the garment and

the ruffle so that the wrong sides are together. If the facing is to be on the wrong side, place the right sides of the garment and the ruffle together.

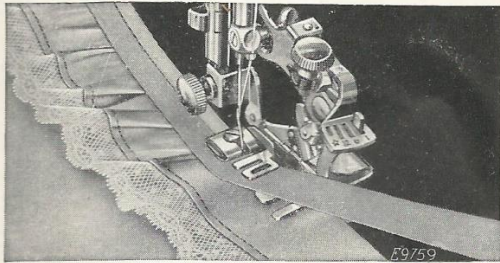


FIG. 58

### Piping a Ruffle

Insert the material to be ruffled between the two blue blades, following the line 2, in Fig. 55. This

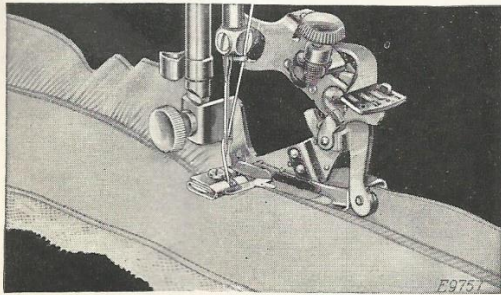


FIG. 59

material must not be over  $1\frac{1}{4}$  inches wide, as it is carried through the ruffler with the finished

edge of the ruffle to the right of the attachment as shown in Fig. 59.

The material for piping must measure about  $\frac{1}{4}$  inch wide when folded in the center and is usually cut on the bias. Place the piping material in the ruffler, following the line 4, in Fig. 55, with the folded edge of the piping to the right. The material to which the piping and ruffling are to be sewn should be folded on the edge and inserted in the ruffler, following the line 5, in Fig. 55.

### To Adjust the Ruffler for Plaiting

Raise the adjusting lever (E, Fig. 60) and move it to the right so that the projection (D, Fig. 60)

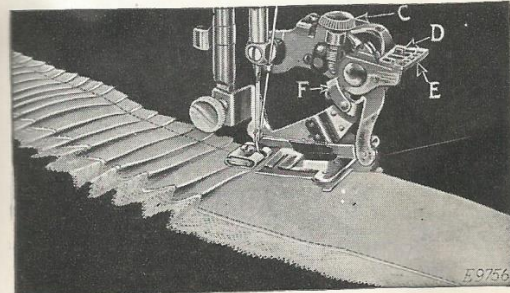


FIG. 60

will enter the slot marked "6" in the adjusting lever when the lever is released. The ruffling blade will then move forward and back once at every six stitches. To adjust the ruffling blade to make a plait once at every twelve stitches, place the adjusting lever (E, Fig. 60) so that the projection (D) enters the slot marked "12" in the adjusting lever. Insert the material to be plaited between the two blue blades, following the line 2 (Fig. 55). The size or width of plaits is regulated by the adjusting screw

(C, Fig. 60) and the adjusting finger (F, Fig. 60). To make a wider plait, move the adjusting finger (F) back or toward the needle and turn the adjusting screw (C) downward. To make a smaller plait, turn the adjusting screw (C) upward. The distance between plaits is regulated by the length of stitch.

#### To Adjust the Ruffler for Group Plaiting and Gathering

The ruffler can be adjusted for group plaiting by lifting the adjusting lever (E, Fig. 61) and moving

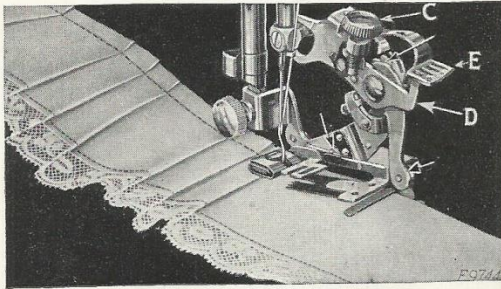


FIG. 61

it to the right so that the top of the projection (D, Fig. 61) enters the small slot indicated by the star on the adjusting lever. This should be done at the points where you wish to make the space between the plaits. The ruffler will then stop and plain stitching will be made. When the desired space has been made, adjust the lever (E) so that the projection (D) enters either the slot marked "6" or the slot marked "12." By alternately making groups of plaits and plain spaces, as shown in Fig. 61, very attractive work can be produced.

#### To Oil the Ruffler

Occasionally apply a drop of oil to the working parts of the ruffler at each of the places indicated by the unlettered arrows in Fig. 61. After oiling, operate the ruffler on a waste piece of material to prevent the oil soiling the work. If the ruffler does not plait evenly, a drop of oil may remedy the trouble.

## RELATIVE SIZES OF NEEDLES AND THREAD

(Class and Variety of Needles Used, 15x1)

SIZES OF NEEDLES	CLASSES OF WORK	SIZES OF COTTON, SILK OR LINEN THREAD
9	Georgette, chiffon, net, light weight synthetic fabrics, fine dimity, lawn, batiste, and other featherweight or sheer fabrics. For infants' clothes and for dainty lingerie; also fine lace and all delicate or gossamer fabrics.	100 to 150 Cotton OO & OOO Silk Twist
11	All medium, light weight summertime fabrics. For children's clothes, dainty washable dresses and aprons, glass curtains.	80 to 100 Cotton O Silk Twist 56-3 Nylon
14	Light weight woolens, firm dress silks and cottons, draperies and fabric furnishings. For smocks and men's fine shirts. For general household sewing; for fine quilting.	60 to 80 Cotton A & B Silk Twist
16	Heavy cretonne, madras, muslin, damasks and quilts. For stitching aprons and men's work shirts.	40 to 60 Cotton C Silk Twist
18	Heavy weaves of coating, canvas, bed ticking, awnings, porch furniture covers, boys' duck suits, work or sports uniforms.	30 to 40 Cotton D Silk Twist

When sending orders for needles, be sure to specify the size required.

### THE IMPORTANCE OF USING SINGER NEEDLES FOR YOUR SEWING MACHINE

You will obtain the best stitching results from your sewing machine if it is fitted with a Singer Needle.

Singer Needles can be purchased from any Singer Shop or Singer Salesman.

Singer Needles are contained in the Singer Green Needle Packet with the famous red letter "S" upon it.



**FOR YOUR PROTECTION!**

SINGER sells its machines only through SINGER SEWING CENTERS, identified by the Red "S" on the window, and never through department stores or other outlets.

When your machine needs servicing, call your SINGER SEWING CENTER and be sure of warranted SINGER parts and service.

Check local SINGER address in phone book.

SINGER SEWING MACHINE COMPANY

[www.Singer-Featherweight.com](http://www.Singer-Featherweight.com)