


THE SINGER NEEDLE THREADER

No. 120854

For Needle Size 11 and upwards

FOR USE ON MACHINES WHERE THE NEEDLE
IS THREADED FROM RIGHT TO LEFT

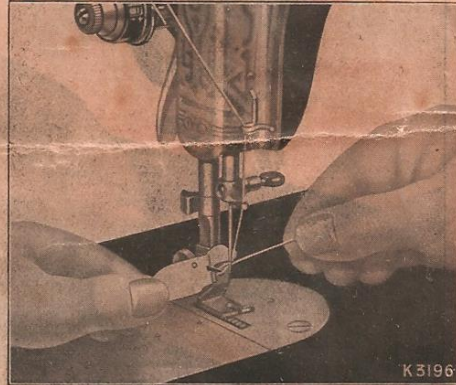

THE SINGER NEEDLE THREADER is the simplest appliance of its kind on the market. The needle is threaded easily and quickly, saving time, trouble and patience.


IMPORTANT

To obtain the best results from your Sewing Machine, it is necessary to use the Best Quality of Oil and Good Needles.

SINGER OIL, which is specially prepared for sewing machines, is supplied in tins, which have the well-known Singer Red "S" printed thereon.

SINGER NEEDLES are stamped with the Company's Trade Mark "Simanco" and are sold in green packets which also bear the Singer Red Letter "S."

To avoid trouble, be sure to purchase your Oil and Needles from a Singer Shop or Singer Salesman.

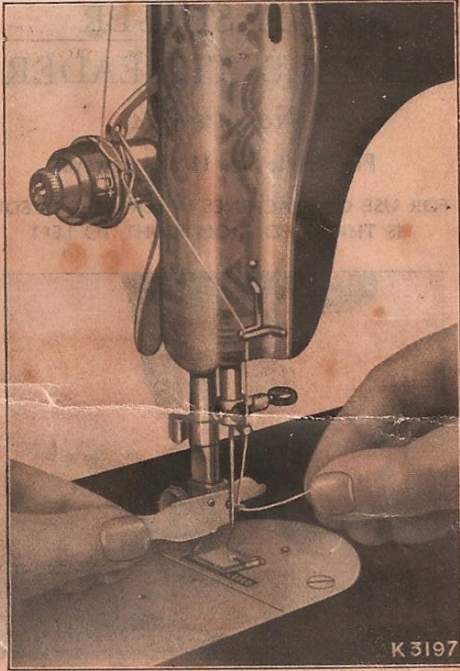

THE SINGER NEEDLE THREADER

Indispensable to every woman who sews



Singer Needle Threader No. 120854

LOWER the presser foot of the machine and raise the needle bar to its highest point. Hold the threader in the left hand, with its end against the back of the needle, and slide the hook down the groove of the needle until it enters the eye.

Pass the thread from the back under the end of the threader and under the hook, as shown in the illustration on the preceding page, then withdraw both hook and thread through the eye of the needle. Care must be taken, when withdrawing the hook, to keep its upper edge against the top of the eye of the needle.



No. 36804

Enlarged View of the Hook of the Singer Needle Threader

Two extra hooks are furnished with each Singer Needle Threader, and the threader itself should last a lifetime—as long as the Singer Sewing Machine. If further hooks are required order by No. 36804.

The Hook is held in position by Screw No. 50315d

THE BEST NEEDLES for all makes of sewing machines can be purchased from any Singer Salesman or Singer Shop.

www.Singer-Featherweight.com