

Form 19111  
(737)

**INSTRUCTIONS**  
For Using  
**SINGER UNIVERSAL THREADER**  
**AND SEAM RIPPER 121634**



*Illustrations 1, 2, 3 and 4 show threading of a needle from right to left. For threading needles from left to right, these illustrations would be reversed.*

Hold the threader horizontally in line with eye in needle. Straddle needle with jaws of hook guard, press lightly, then move the threader up or down until the Threader Hook slips into the eye and gently push the hook through the needle far enough to thread the hook, as shown in Fig. 1.

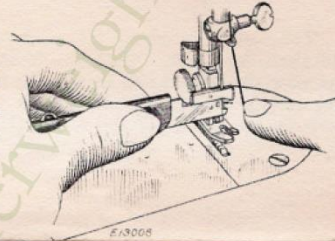


Fig. 1

Pass the thread to the rear of the Threader Hook and bring it forward, under and up into the Hook, as shown in Fig. 2.

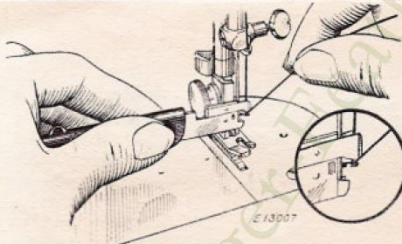


Fig. 2

Release the end of the thread, as shown in Fig. 3.

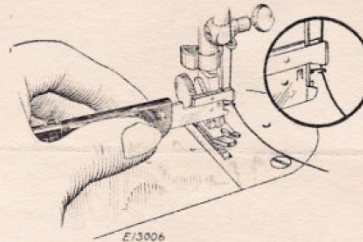


Fig. 3

Hold the Threader in a horizontal position, lift slightly and pull the Hook with the Thread through the eye of the needle, as shown in Fig. 4.

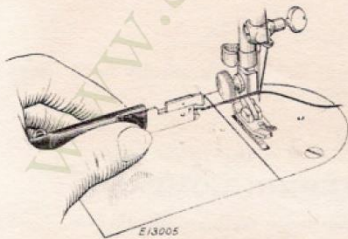


Fig. 4

(See other side)

### To Thread Hand Sewing Needles

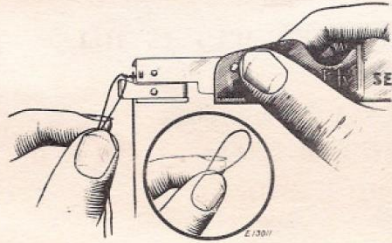


Fig. 5

Hold the Threader up-side-down with the hook at the top, as shown in Fig. 5. Straddle the needle with the jaws of the hook guard and push the threader hook through the eye of the needle as far as it will go.

Form a loop with the thread, as shown in Fig. 5. Place the loop over the threader hook and draw the thread downwardly into the hook, then hold the needle and pull the hook with the thread through the eye of the needle.

### To Remove and Replace the Threader Hook

Take out the screw (B) and remove the old threader hook. Slide the hooked end of the new threader hook under the hook guide (A) and fasten the threader hook securely in position by means of the screw (B).

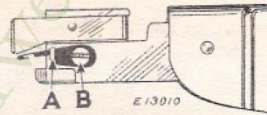


Fig. 6

### How to Use the Seam Ripper

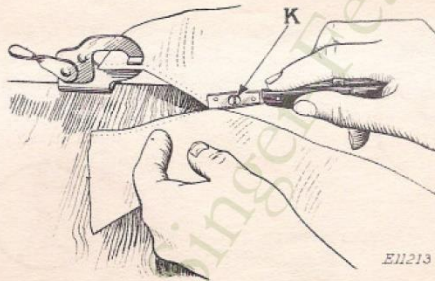


Fig. 7

When it is desired to rip a seam, the sharp blade of the "Ripper" quickly picks out the stitches. The slight angle of the blade enables you to hold the "Ripper" in an easy, comfortable position, and to cut the stitches without damaging the material.

### To Replace the Ripper Blade

If the blade of the "Ripper" becomes dull from exceptionally hard usage it may easily be replaced after taking out the screw (K, Fig. 7).

*Extra blades and hooks may be purchased at any Singer Shop*  
**THE SINGER MANUFACTURING COMPANY**

Copyright, U. S. A., 1935 and 1937, by The Singer Manufacturing Co.  
All Rights Reserved for all Countries

PRINTED IN U. S. A.