



Gerni

GERNI CLEANING EQUIPMENT A/S MYNTEVEJ 2 DK-8900 RANDERS DENMARK TEL 06 42 84 33 TELEX 65 123 DK TELEFAX 06 43 14 81

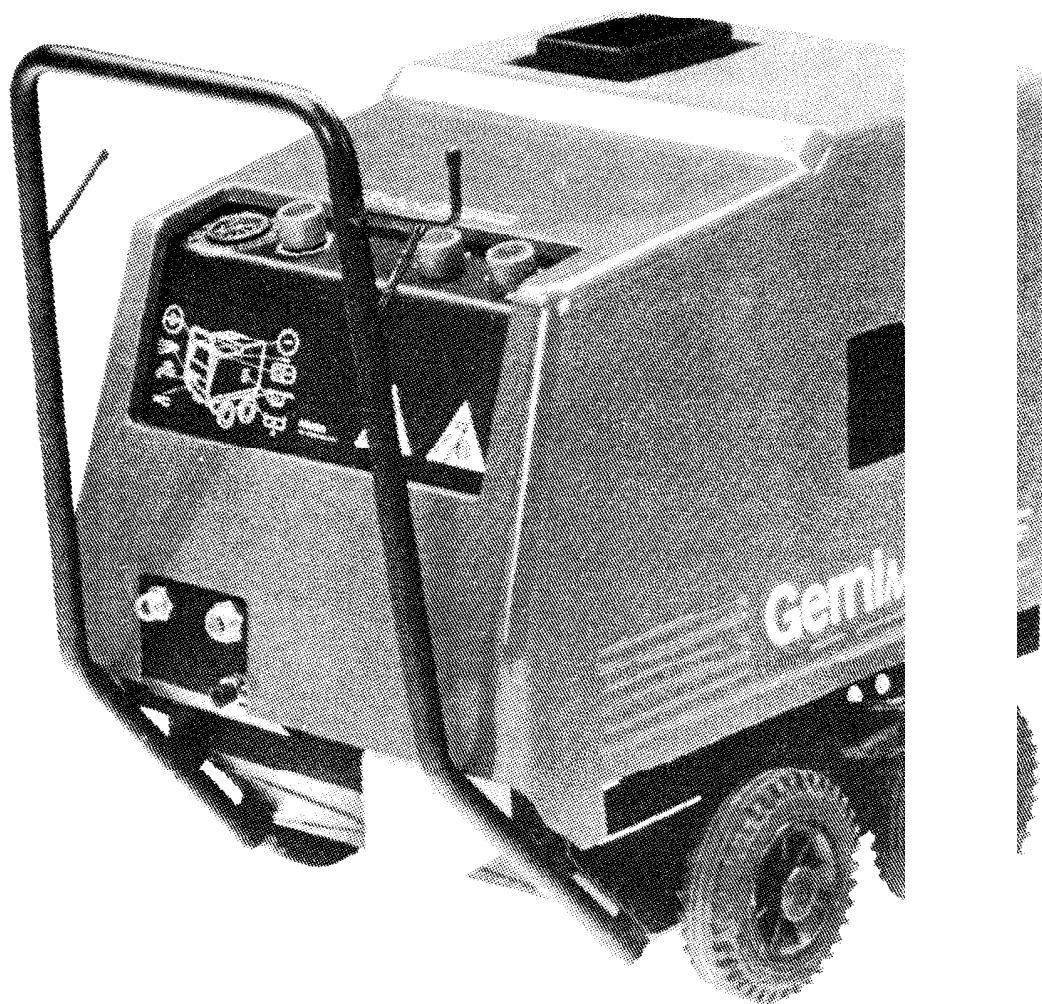


MiniHot

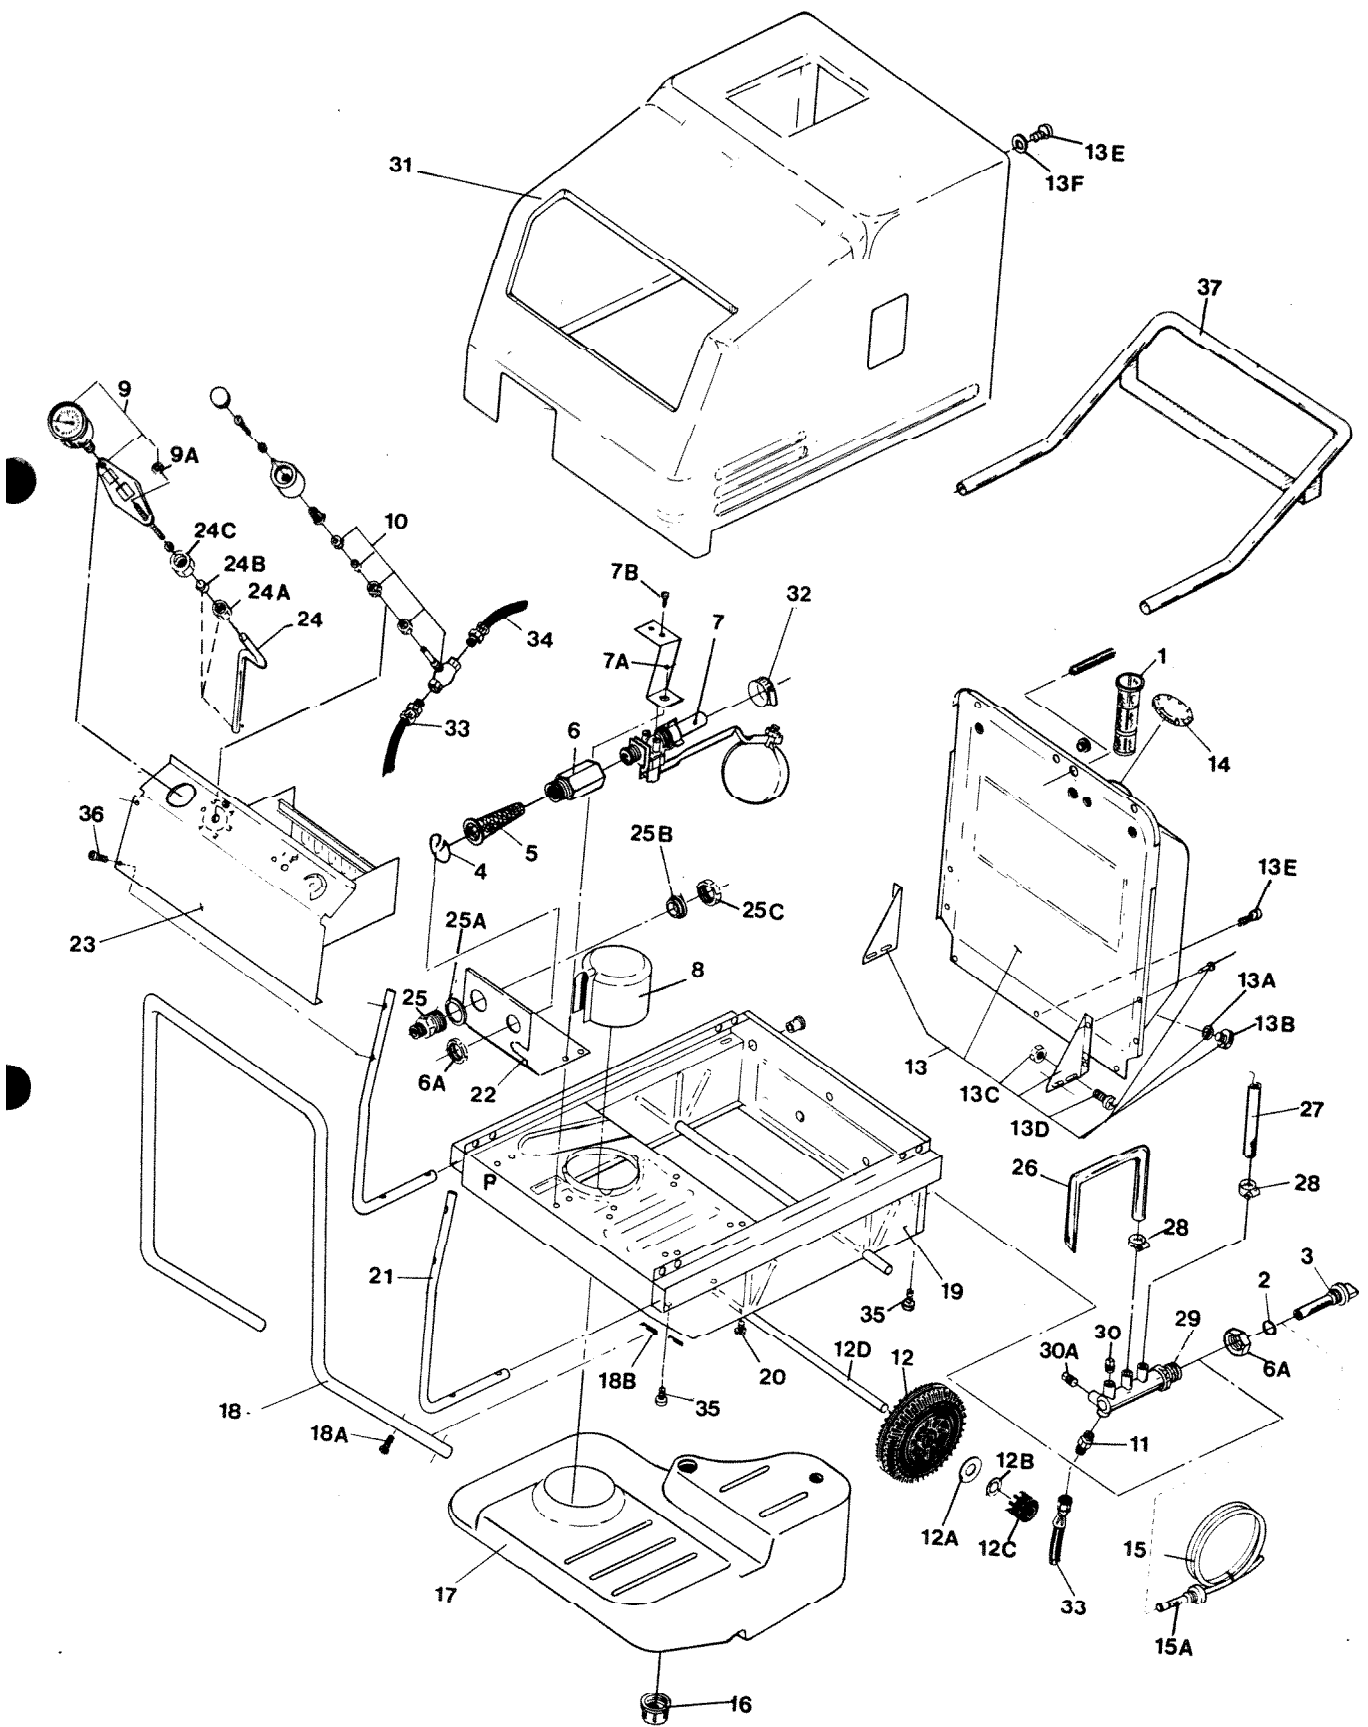

<u>Pos.</u>		<u>BODY/FRAME</u>	<u>Pcs.</u>
1.	10-0317	Fuel filter	1
2.	12-0224	O-ring	1
3.	10-0274	Filter	1
4.	08-0130	Locking ring	1
5.	10-0314	Filter	1
6.	18-0518	Inlet coupling	1
6A.	18-0384	Nuts	2
7.	10-0280	Float valve complete	1
7A.	06-0937	Ring	1
7B.	07-0024	Screws	2
8.	15-0204	Float masking	1
9.	22-0034	Manometer complete	1
9A.	08-0084	Nuts	2
10.	26-0720	Chemical valve kit	1
11.	10-0164	Ball non-return valve	1
12.	13-0172	Wheels	4
12A.	08-0075	Washers	8
12B.	08-0136	Locking washer	4
12C.	13-0092	Hub cap	4
12D.	05-0726	Axle	1
13.	15-0113	Tank complete	1
13A.	12-0232	U-ring	1
13B.	18-0579	Screw	1
13C.	08-0058	Nuts	4
13D.	07-0346	Screws	4

13E.	07-0427	Screws	7
13F.	08-0132	Screws	4
14.	15-0093	Cover	1
15.	17-0348	Frost protection equipment	1
15A.	12-0224	O-ring	1
16.	15-0106	Screw for water tank	1
17.	15-0102	Water container	1
18.	21-1027	Drive handle complete	1
18A+			
18B.	26-0831	Assembly kit for handle	1
18A.		Screws	4
18B.		Spacers	4
19.	21-0850	Frame complete	1
20.	07-0302	Screws	2
21.	05-0736	Rings (right and left)	2
22.	06-0938	Assembly plate	1
23.	21-1021	Panel/Electric box	1
24-			
24B.	26-0842	Manometer pipe complete	1
24.		Manometer pipe	1
24A.		Pipe unions	2
24B.		Cone rings	2
24C.	03-0526	Manometer connecting piece	1
25.	18-0468	Discharge connecting piece	1
25A.	12-0183	Washer	1
25B.	12-0184	Washer	1
25C.	19-0062	Nut	1

26.	11-0341	Suction hose	1
27.	11-0335	Suction hose	1
28.	11-0111	Clamps	2
29.	18-0494	Filter casing	1
30.	03-0246	Pointed screw	1
30A.	03-0152	Pointed screw	1
31.	24-0481	Body	1
32.	11-0028	Clamp	1
33.	11-0441	Chemical hose complete	1
34.	11-0358	Chemical hose complete	1
35.	01-0003	Bolts	6
36.	07-0346	Screws	4
37.	27-0303	Chemical ring	1
	30-0753	Transfers instrument panel	1
	30-0751	Transfers Mini-Hot	2

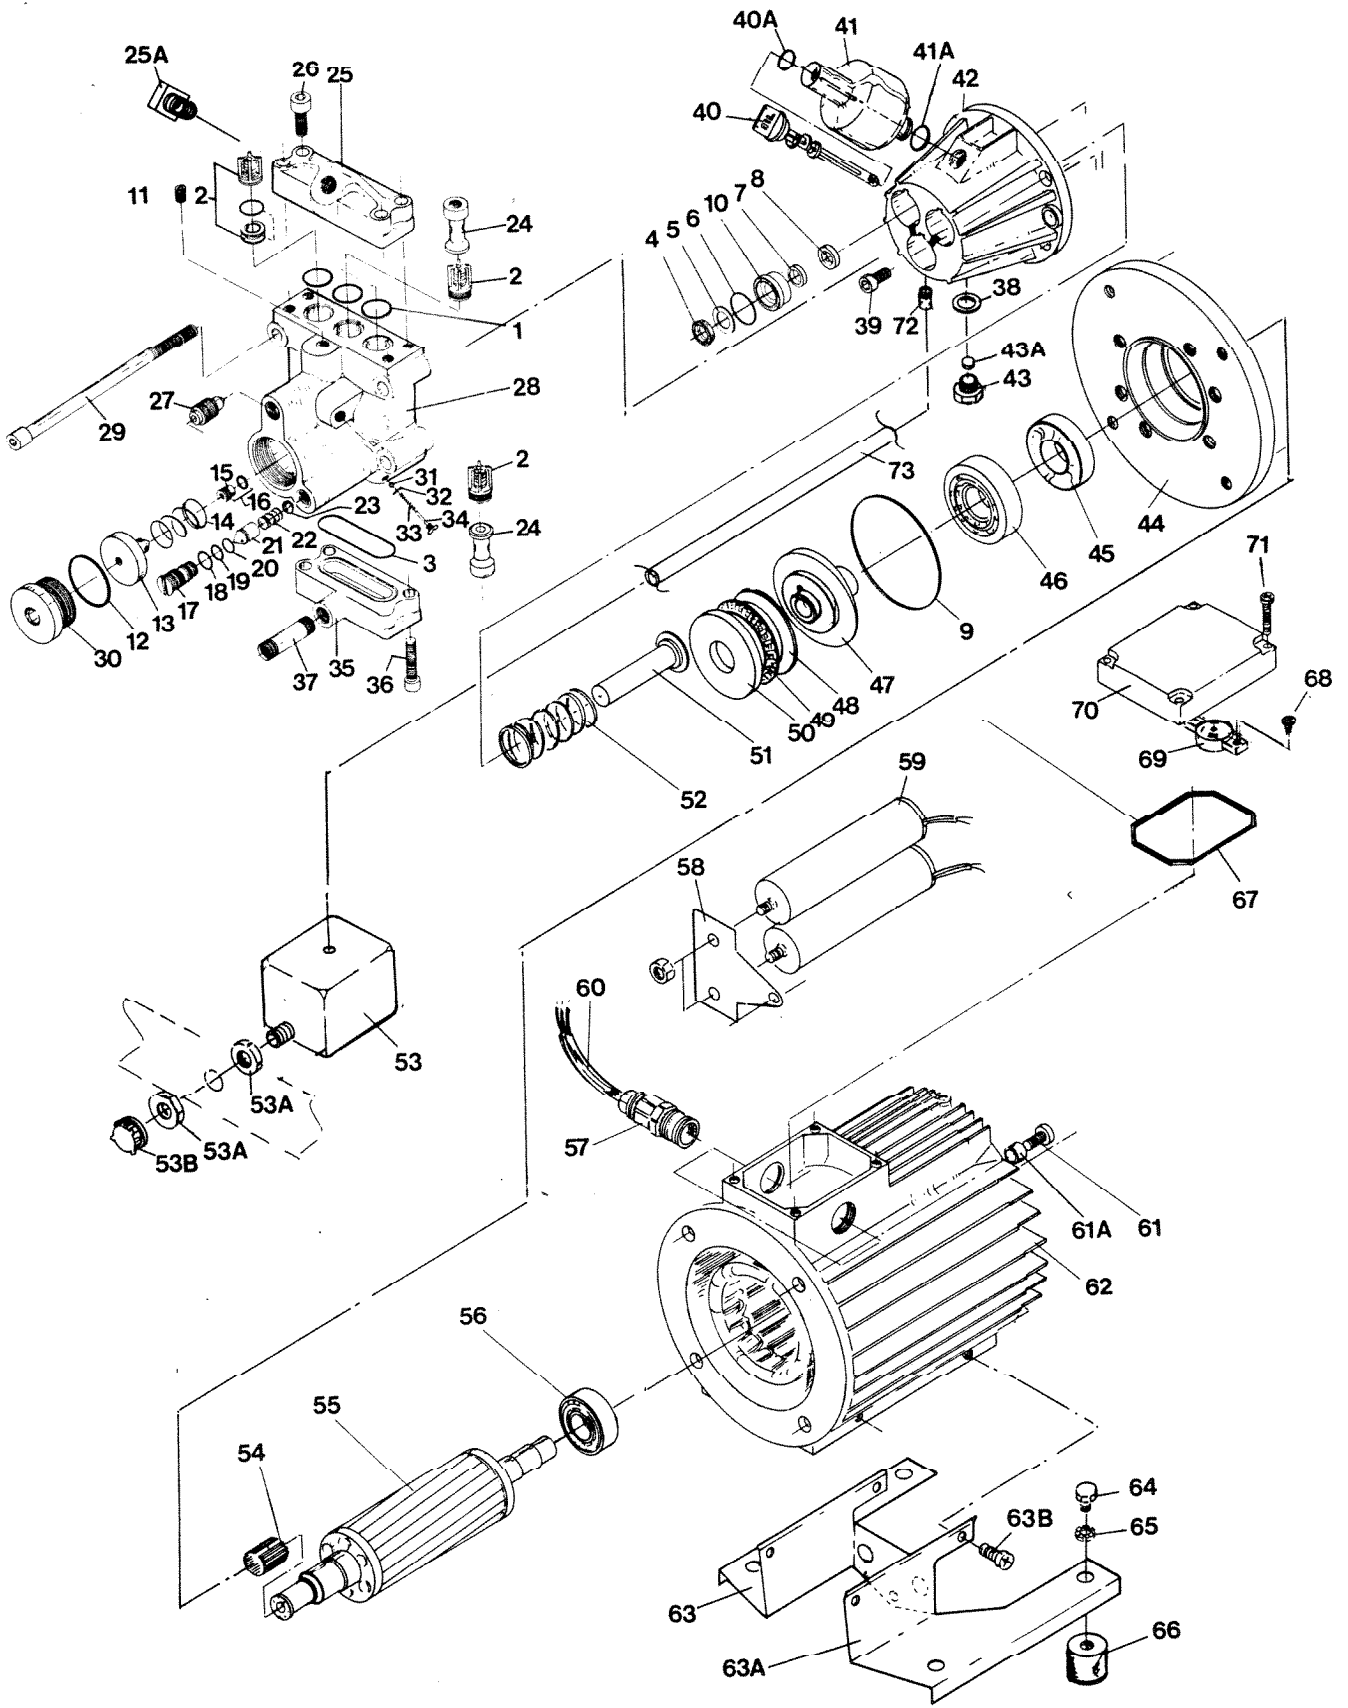


PUMP/ENGINE

<u>Pos.</u>			<u>Pcs.</u>
1-3.	26-0726	Valve kit	1
1-9+12+			
18-20	26-0611	Pump kit	1
10.	18-0631	Sleeve clips	3
11.	03-0554	Pointed screws	2
12-16	26-0845	Flow valve	1
17-23	26-0846	Escape valve kit	1
24.	18-0632	Spacers	3
25.	18-0650	Pressure manifold	1
25A.	03-0503		1
26.	07-0455	Allen bolts	4
27.	18-0644	Injector cone	1
28.	18-0649	Cylinder head	1
29.	07-0453	Allen bolts	4
30.	18-0635	Screw for flow valve	1
31.	28-0086	Steel ball	1
32.	12-0276	Usit ring	1
33.	28-0085	Spring	1
34.	21-0972	Spring control	1
35.	18-0648	Suction manifold	1
36.	07-0454	Allen bolts	3
37.	05-0683	Suction pipe	1
38.	12-0211	Washer	1
39.	07-0452	Allen bolts	2
40.	20-0160	Dipstick	1
40A.	12-0282	O-ring	1
41.	15-0119	Oil glass	1

42.	18-0785	Plunger control	1
43.	18-0481	Drain screw	1
43A.	20-0010	Magnet	1
44.	18-0646	Engine flange	1
45.	22-0233	Oil seal ring	1
46.	14-0035	Bearing complete	1
47.	18-0733	Washer 10.1 220/240V	1
	18-0734	Washer 8.3 115V/60Hertz	1
48-50	26-0843	Washer bearing kit	1
51.		Plungers complete	3
	26-0844	Plunger kit	1
52.	28-0095	Springs	3
53.	25-0205	Sediment container	1
53A.	18-0554	Nuts	2
53B.	15-0107	Screw	1
54.	28-0097	Tolerance ring	1
55.	27-0137	Rotor complete 220/240V	1
	27-0138	Rotor complete 115V/60 Hertz	1
56.	14-0036	Bearing	1
57.	16-0716	Cable screwed connection	2
58.	06-0933	Condenser clip	1
59.	27-0111	Operating condenser 220/240V	1
	27-0119	Operating condenser 115V	2
60.	16-0139	Engine cable (plastic) 3 x 1.5 x 700	1
	16-0702	Engine cable (plastic) 3 x 1 x 700	1
	16-0706	Engine cable (rubber) 3 x 1 x 700	1


61.	07-0427	Screws	4
61A.	18-0701	Control sleeve	1
62.	27-0122	Stator shell complete 220V	1
	27-0121	Stator shell complete 240V	1
	27-0123	Stator shell complete 115V/60Hertz	1
63.	06-0327	Engine base (right)	1
63A.	06-0326	Engine base (left)	1
63B.	07-0392	Screws	4
64.	07-0078	Bolts	4
65.	08-0018	Star washers	4
66.	08-0176	Vibration dampers	4
67.	12-0327	Washer	1
68.	07-0466	Screws	2
69.	16-0669	Thermo fuse 220/240V	1
	16-0686	Thermo fuse 115V	1
70.	27-0148	Engine cap	1
71.	07-0503	Screws	4
72.	18-0287	Oil waste pipe	1
73.	11-0430	Oil waste hose	1

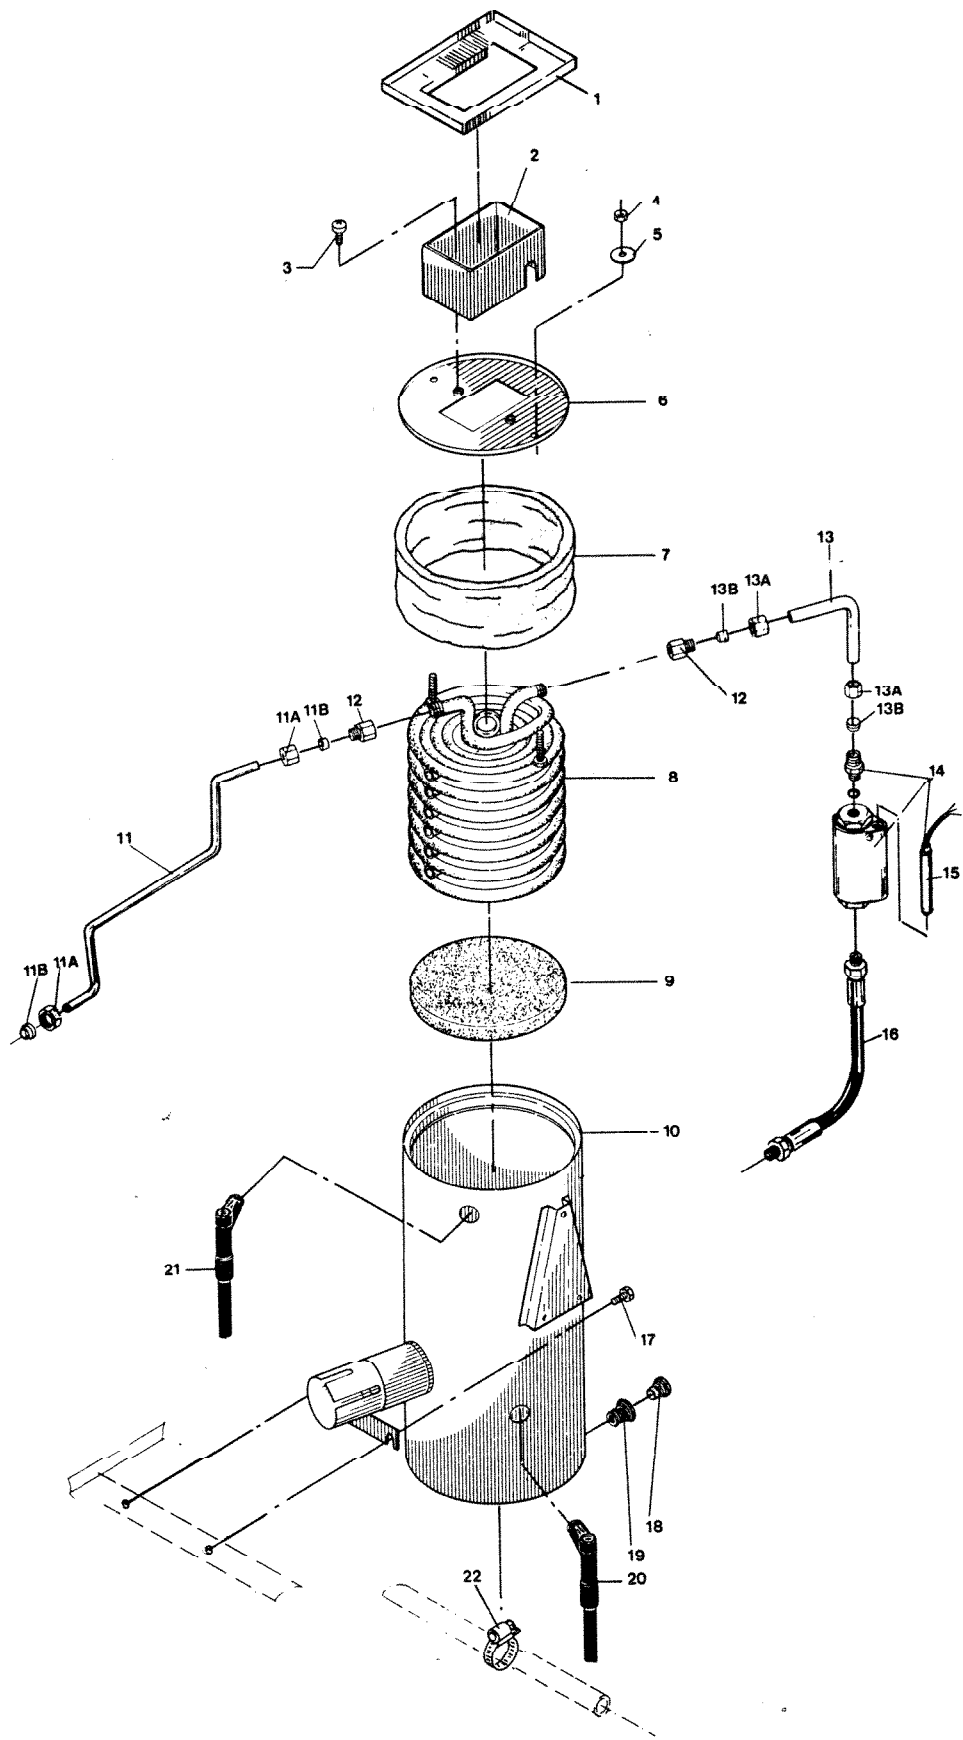

MINIHOT

BOILER

<u>Pos.</u>			<u>Pcs.</u>
1-2.	21-2028	Chimney complete	1
3.	07-0346	Screws 6 x 20	2
4.	08-0209	Nuts 8mm	2
5.	08-0089	Washers	2
6.	06-0715	Top plate	1
7.	12-0219	Insulation	1
8.	21-2015	Coil	1
9.	12-0212	Insulation	1
10.	21-0852	Boiler	1
11-			
11B.	26-0840	Discharge pipe complete	1
11A.		Pipe union	
11B.			
12.	03-0004	Screwed connections	2
13.	26-0841	Inlet pipe complete	1
13A.		Screwed connections	2
13B.		Cone rings	2
14.	17-0119	Flow switch complete	1
15.	17-0121	Reed contact	1
16.	11-0425	High pressure hose	1
17.	07-0168	Bolts 6 x 16	2
18.	20-0134	Drain screw	1
19.	12-0216	Drain coupling	1
20.	11-0361	Inlet hose complete	1
21.	11-0362	Overflow hose complete	1
22.	11-0206	Clamp	1

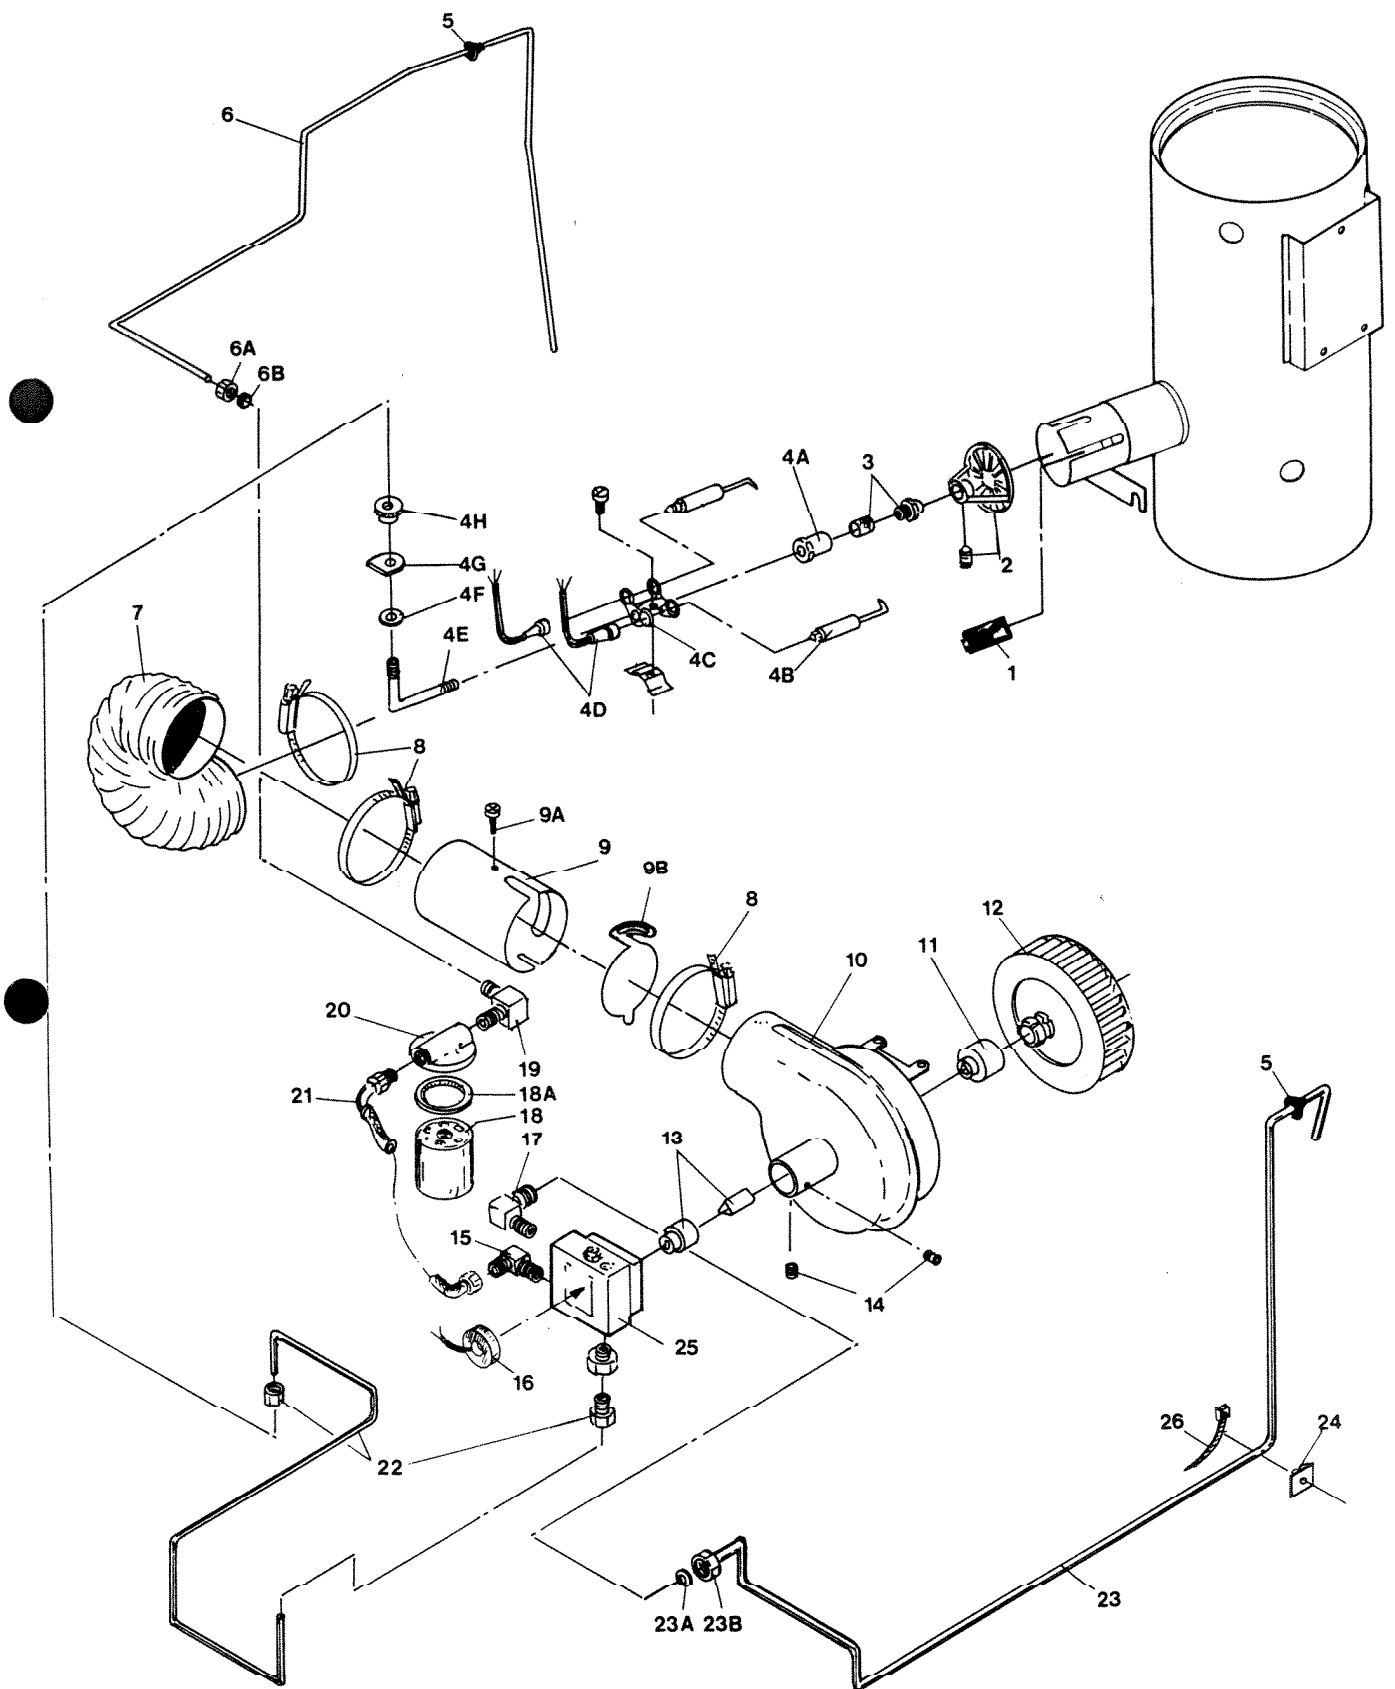


BURNER

<u>Pos.</u>			<u>Pcs.</u>
1.	23-0158	Sleeve	1
2.	23-0228	Mixing disc	1
3.	23-0258	Oil nozzle 3.2 kg. 220/240V	1
	23-0262	Oil nozzle 2.8 kg. 115/60 Hertz	1
4-4G	23-0275	Burner cartridge complete	1
4A.		Nozzle clip	1
4B.		Electrodes	2
4C.		Electrode clip complete	1
4D.		Spark plug caps	2
4E.		Oil pipe	1
4F.		Washer	1
4G.		Cover plate	1
4B+4D	26-0716	Electrode kit	1
5.	12-0111	Pipe lead-in	2
5-6B	26-0839	Suction pipe for oil pump	1
6A.		Pipe union	1
6B.		Cone ring	1
7.	11-0426	Metal hose	1
8.	11-0162	Clamps	3
9.	23-0270	Air regulation casing	1
9A.	07-0346	Screw	1
9B.	23-0271	Air regulator	1
10.	23-0266	Blower casing	1
11.	23-0208	Coupling	1
12.	23-0268	Blower wheel	1
13.	23-0274	Coupling complete	1


BURNER

<u>Pos.</u>			<u>Pcs.</u>
14.	07-0469	Screws	2
15.	03-0645	Angled screwed connection	1
16.	17-0103	Magnet coil	1
17.	03-0503	Angled screwed connection	1
18.	23-0263	Oil filter	1
18A.	23-0273	Washer for oil filter	1
19.	03-0584	Angled screwed connection	1
20.	23-0260	Cover for oil filter	1
21.	11-0429	Oil hose	1
22.	23-0265	Oil pressure pipe	1
5+23-			
23B.	26-0838	Return pipe complete	1
24.	08-0179	Pipe clip	1
25.	23-0267	Oil pump complete	1
26.	16-0058	Belt	1

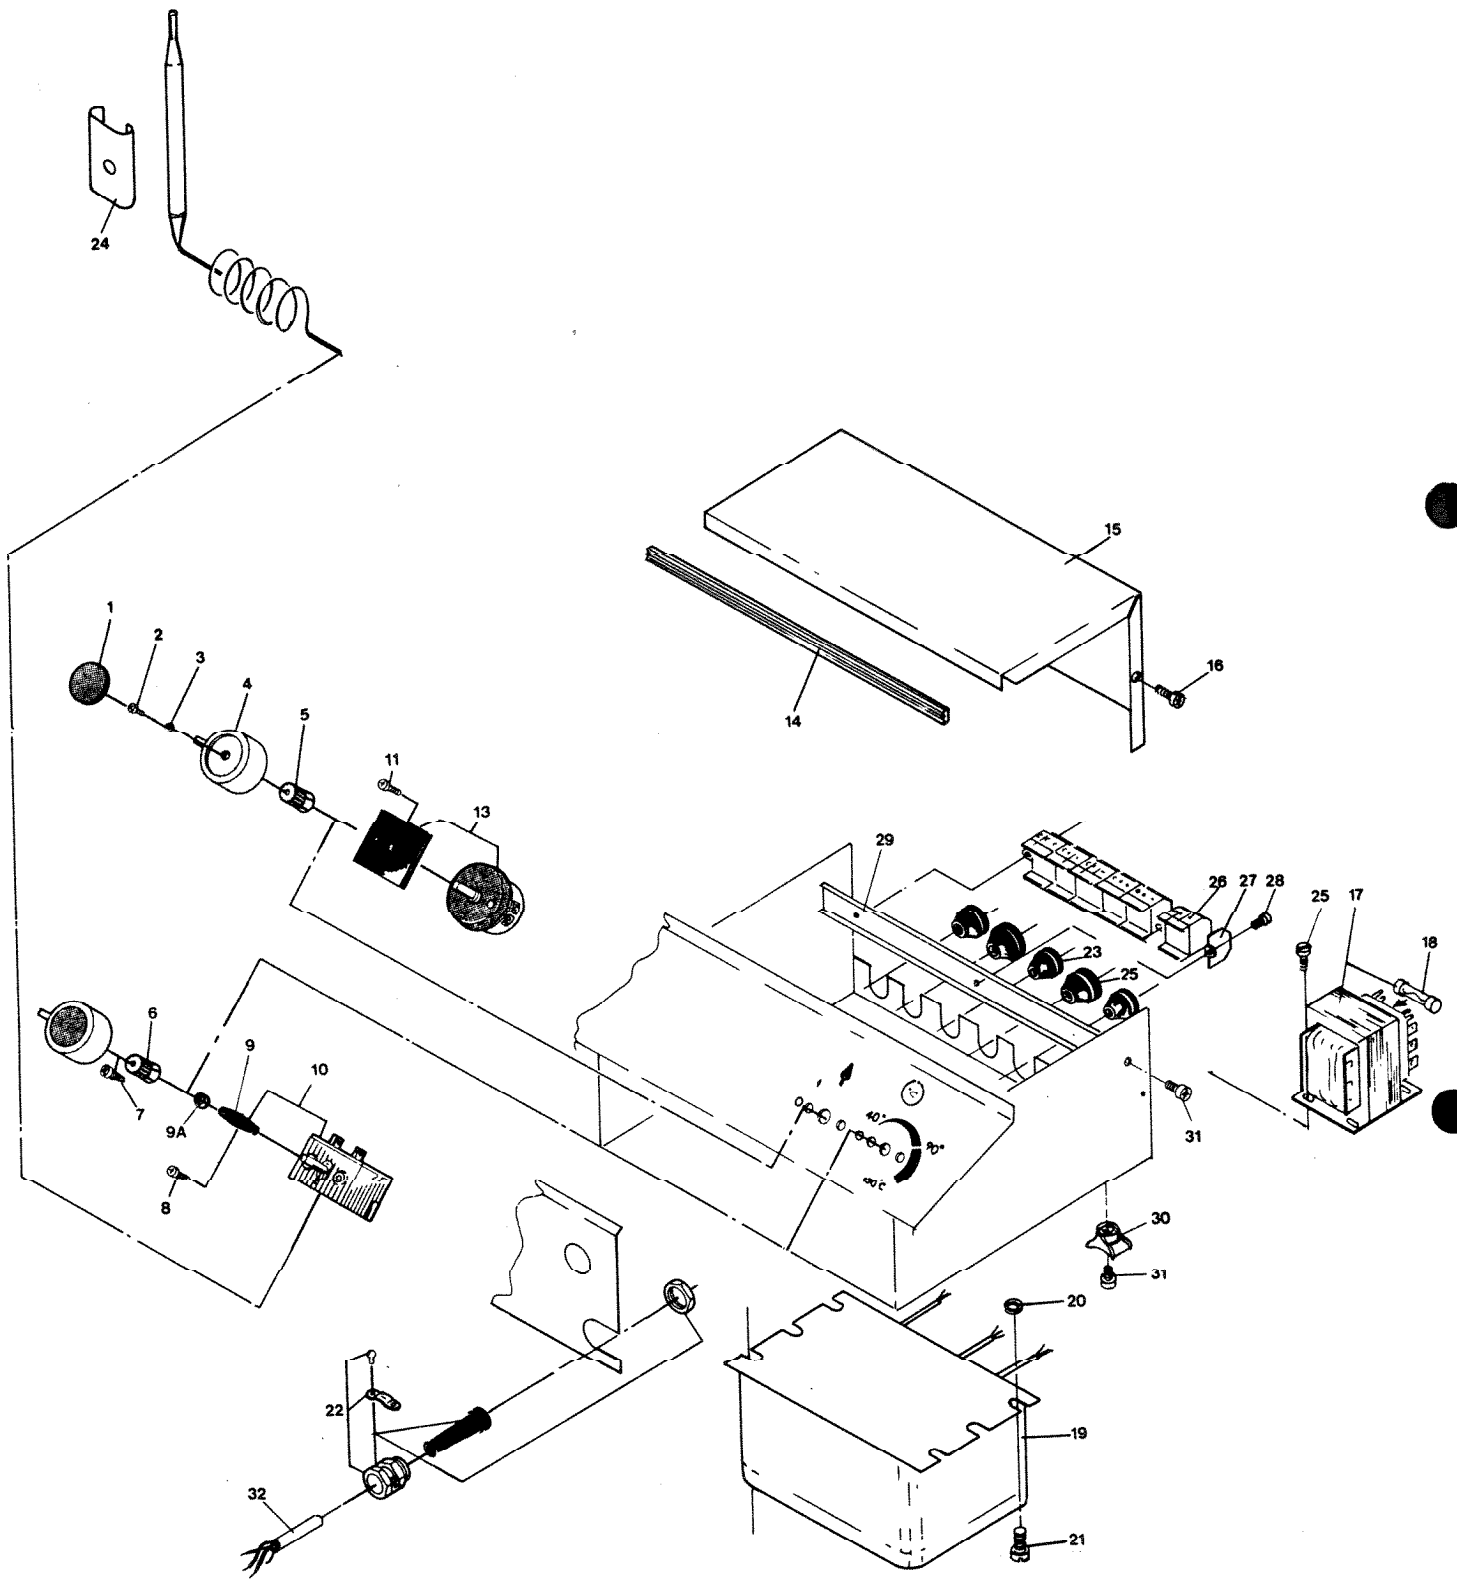


<u>Pos.</u>			<u>Pcs.</u>
1-7.	26-0724	Control button kit	1
1.		Plastic cover	1
2.		Screw	1
3.		Washer	1
4.		Plastic button	1
5.		Insert	
6.		Insert	
7.		Screw	1
8.		Screws	2
9		Spacer	1
10.	26-0837	Thermostat complete	1
9A.		O-ring	1
11.	07-0240	Screws	2
13.	16-0705	Contact complete	1
14.	12-0321	Packing strip	1
15.	06-0952	Cover for electric box	1
16.	07-0505	Screws	2
17.	17-0033	Transformer complete 220/240V	1
	16-0591	Transformer complete 110V/60 Hertz	1
18.	16-0067	Fuse	1

19.	23-0012	Spark transformer 220/240V	1
	23-0220	Spark transformer 110V	1
20.	08-0165	Spring washer 6mm	2
21.	07-0346	Screws 6 x 70	2
22.	26-0832	Cable lead-in bush complete	1
23.	12-0370	Rubber lead-in	5
24.	06-0843	Assembly clip for thermostat	1
25.	07-0505	Screws	2
26.	16-0345	Terminal	6
27.	16-0346	End piece	1
28.	07-0416	Screws	2
29.	06-0941	Ring for terminal strip	1
30.	16-0715	Cable clip	2
31.	07-0505	Screws 4 x 8	2
32.	16-0138	Main cable (plastic) 3 x 65 x 7700	1
	16-0703	Main cable (plastic) 3 x 1 x 7700	1
	16-0707	Main cable (rubber) 3 x 1 x 7700	1

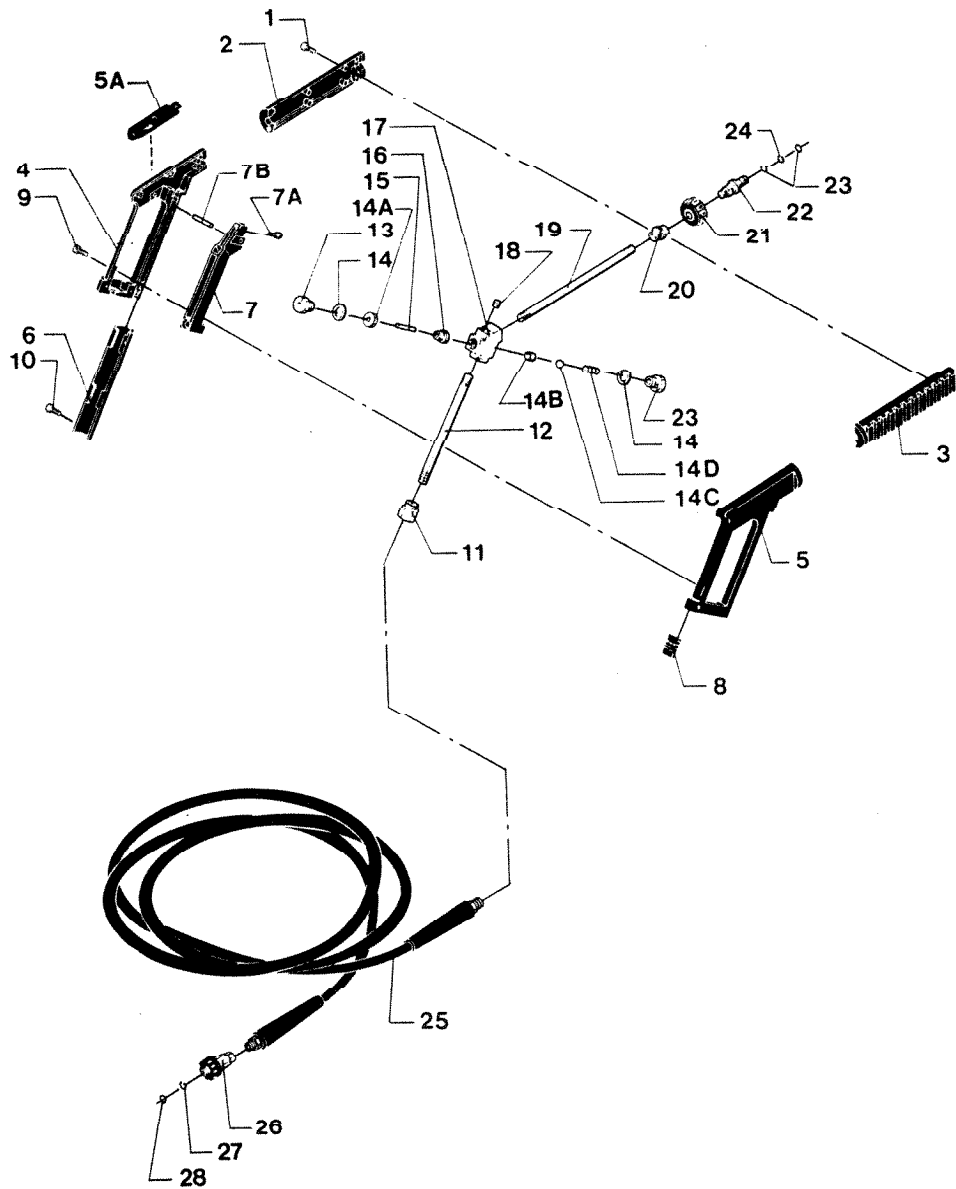

<u>Pos.</u>			<u>Pcs.</u>
1-29	26-0334	Pistol 5 4V	1
1.	07-0480	Screws 4 x 16	8
2-3	20-0035	Handle	1
4-5-			
5A.	26-0494	Pistol casing complete	1
5A.	20-0156	Cap	1
6.	20-0099	Masking cap	1
7.	26-0326	Trigger	1
7A.	18-0370	Wear piece	1
7B.	18-0388	Spindle	1
8.	26-0325	Lock pawl	1
9.	07-0479	Screws 4 x 20	7
10.	07-0480	Screw 4 x 16	1
11.	18-0389	Coupling	1
12.	03-0443	Inlet pipe o 13 x 194	1
13.	19-0141	Spindle screw	1
	26-0301	Service kit for pistol 5	1
14.		Copper washer	2
14A.		Sleeve	1
14B.		Valve seat	1
14B.		Ball	1
14D.		Spring	1
		O-rings	2
		Backup-ring	1
15.	19-0332	Spindle	1
16.	19-0228	Sleeve clip	1
17.	19-0330	Valve casing	1

18.	07-0155	Allen screw 8 x 8	1
19.	05-0444	Discharge pipe o 13 x 257	1
20.	18-0522	Coupling	1
21.	18-0459	Pipe union	1
22.	18-0520	Nipple	1
23.	12-0188	O-rings 10 x 2	2
24.	20-0117	Backup-ring	1
21-24	03-0486	Screw coupling complete	1
25.	11-0200	High pressure hose 3/8 x 10 metres	1
	11-0316	High pressure hose 3/8 x 8 metres	1
26-28	03-0266	Screw coupling complete	1
27.	20-0117	Backup-ring	1
28.	12-0188	O-ring	1

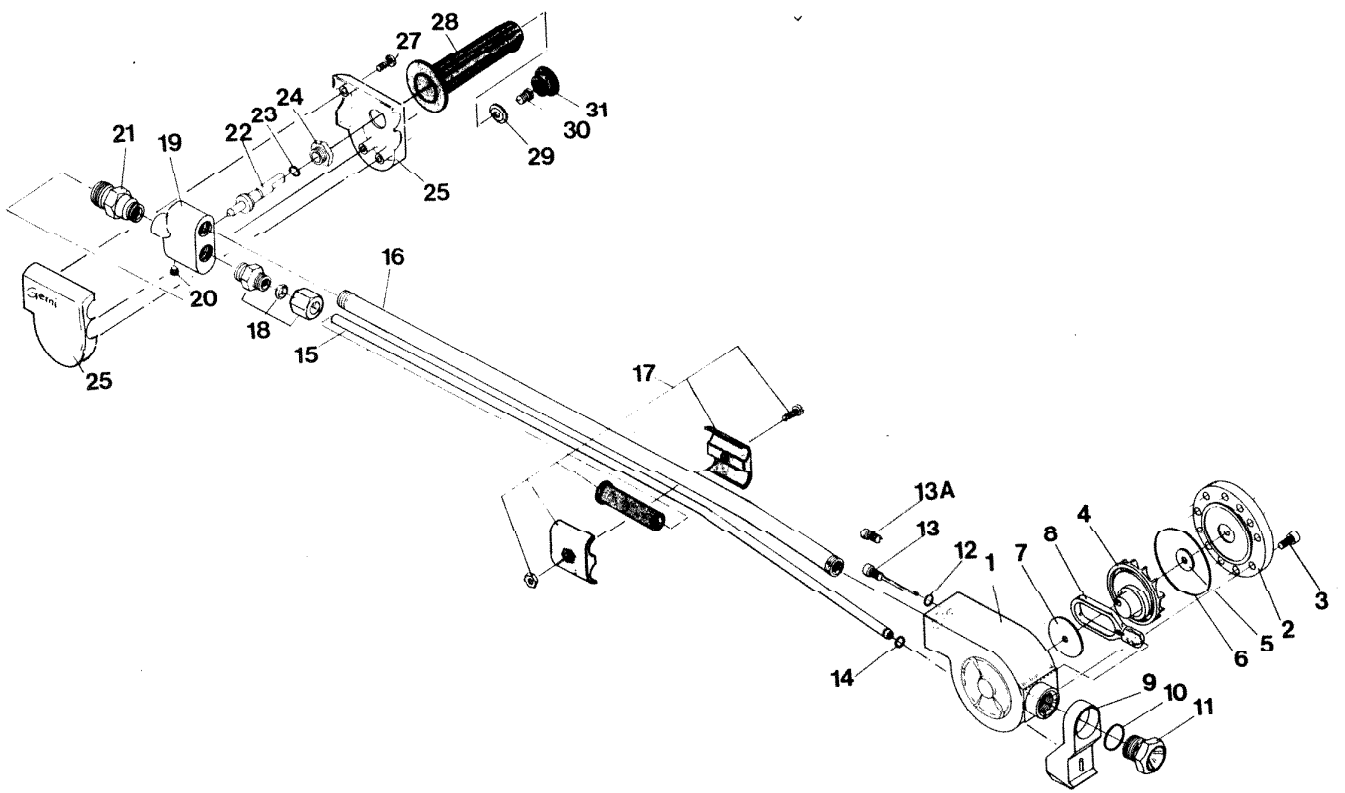

<u>Pos.</u>			<u>Pos.</u>
1.	18-0765	Casing	1
2.	18-0766	Turbo cover	1
3.	07-0432	Allen bolt 4 x 10	2
4.		Turbine wheel	1
5.		Spacer o 15	1
6.		O-ring 41 x 1.78	1
7.		Spacer o 30	1
8.		Rocker arm complete	1
9.		Chemical piping clip with chemical nozzle	1
10.		O-ring 14 x 1.78	1
11.		Clip with thrust bearing complete	1
12.		O-ring 3.5 x 1	1
13.	*18-0776	Needle nozzle (up to 11.5 l./min.)	1
13A.	*18-0777	Pointed screw for needle nozzle over 11.5 l./min.	1
14.		O-ring 5 x 1.5	1
15.	05-0732	Chemical pipe o 8 x 6.30	1
16.	05-0714	Lance o 13 x 5.96	1
17.	26-0527	Fittings for double lance	1
18.	03-0527	Nipple 5/16 x 1/4	1
19.	19-0329	Valve casing	1
20.	07-0155	Allen pointed screw 8 x 8	1
21.	03-0484	Screw coupling 1/4	1
22.	19-0276	Valve spindle	1
23.	12-0006	O-ring 6.75 x 1.78	1

<u>Pos.</u>			<u>Pcs.</u>
24.	19-0243	Valve nut	1
25.	20-0097	Cover for valve casing	1
27.	07-0377	Cutter screw 4 x 20	3
28.		Handle	1
29.		Washer o 15 x o 5.1	1
30.		Screw 5 x 14	1
31.		Pointed screw for handle	1
32.		Star washer 5mm	1
28-32	26-0232	Handle kit	1
4-12.	26-0778	Service kit for turbo laser 220/240V	1
14.	26-0836	Service kit for turbo laser 110/60 Hertz	1

MINI-HOT - SPECIAL TOOLS

31-0145	Adjustment drift for blower casing.
31-0061	Adjustment valve for breaking pressure.
31-0138	Valve trigger - suction and thrust.
31-0139	Assembly drift for oil seal ring.
31-0140	Assembly drift for valve seat.
31-0144	Special clip for plungers.
31-0146	Trigger for safety valve cone.
31-0141	Oil pressure manometer.
31-0147	Test thermometer.

