

89-01

Service Instructions

95-06


GS Motor

Book 4


0 B 1

Dismantling the motor


1. Turn the 2 blue screws of the handle 90°, lift up the handle.

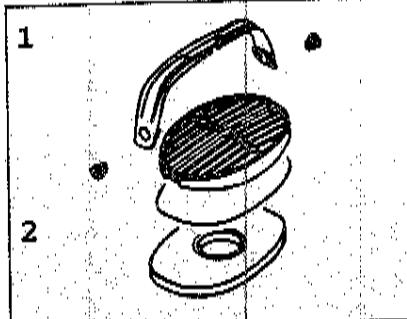


2. Lift off the grill and the air filter.

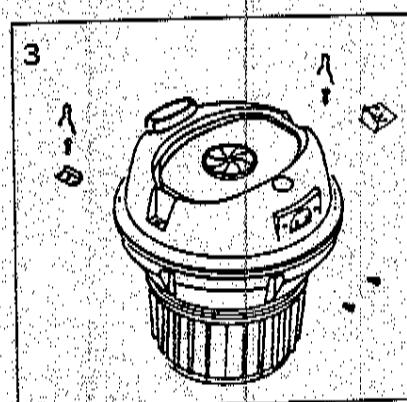

4. Lift off the motor top.

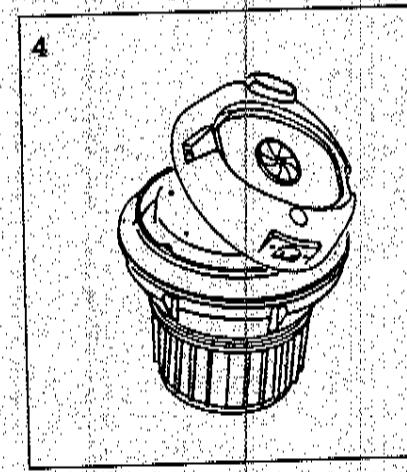

5. Detach the fan-gasket and the 3 supports with rubber springs and the nylon tube.

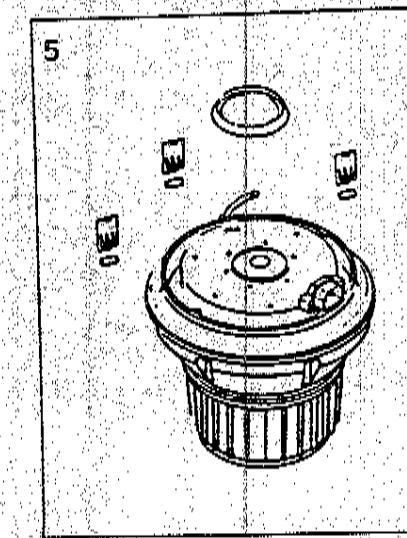

Book 4

0 B 2

Service Instructions**GS Motor**


6. Place support stand V-32692 on fan top.
Turn the unit 180°.

Release the lock in motor casing.

Turn casing counter clockwise and
lift the motor casing.


V-32692

6

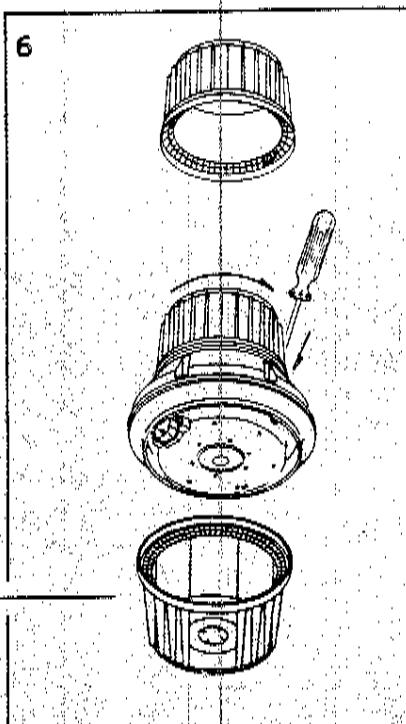

7. Detach 2 leads from capacitor.
Lift fan casing up.

7

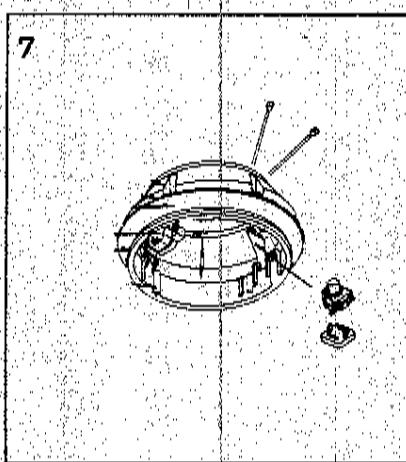


8. Detach nylon tube and all leads from:
Brush holder, capacitor, and remove
components.

Pneumatic switch not to be used.

Remove 2 screws, bearing plate
and cross washer.

8

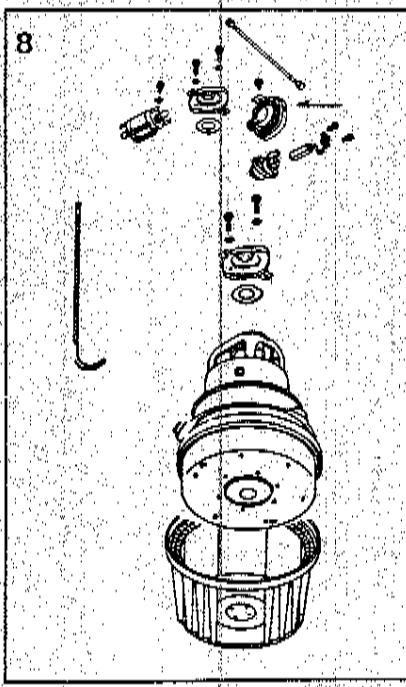

IMPORTANT: When assembling motor.
Grinding carbon brushes:
Seat new brushes with commutator-
stone S.15,1 ahead of each brush-
holder for 1 minute.

89-01


service Instruktions**GS Motor**

Book 4

0 B 3

Dismantling motor


9

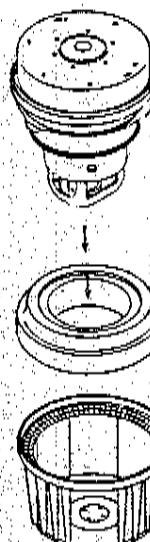


V- 32693

V- 32692


10

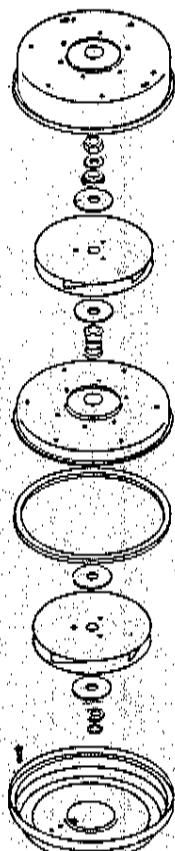

12

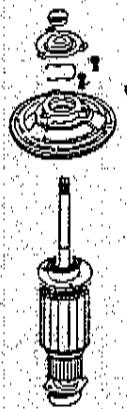

11


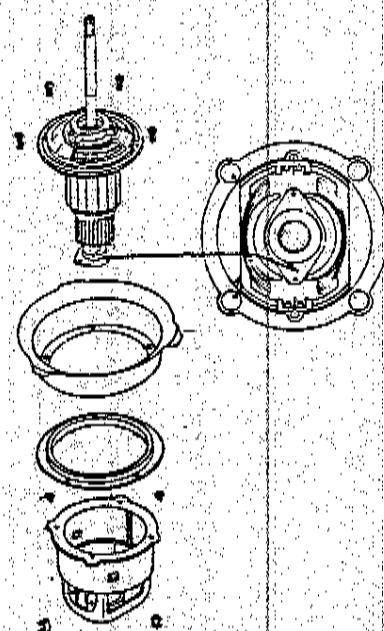
**Assembling motor**

Armature/bearings: see O A 3

Book 4

Service Instructions

0 B 4

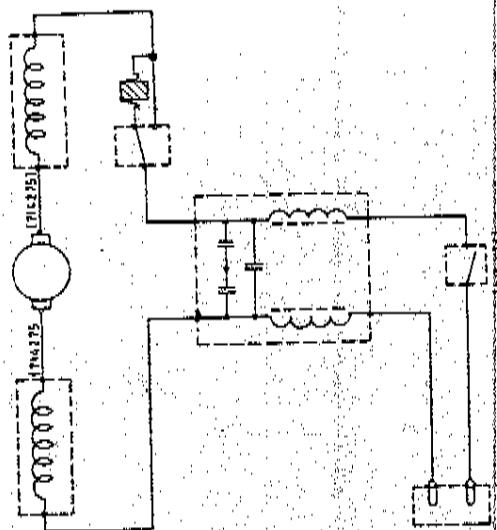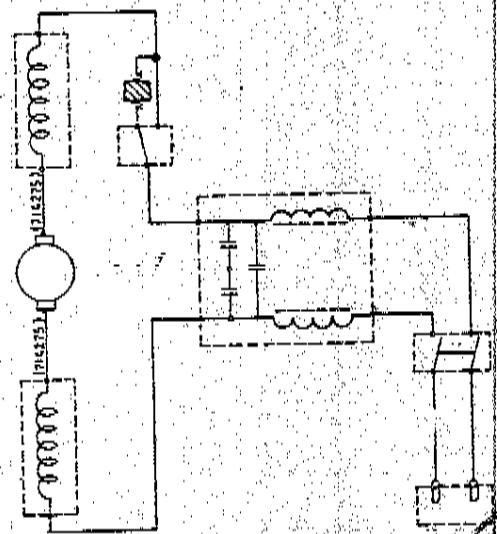GS Motor**Position of motor parts****Wiring instructions****GSD****GST-GSF****GSJ-GSJF**