
### Wool Picker Manual

"The Fainting Maid" Because it collapses...

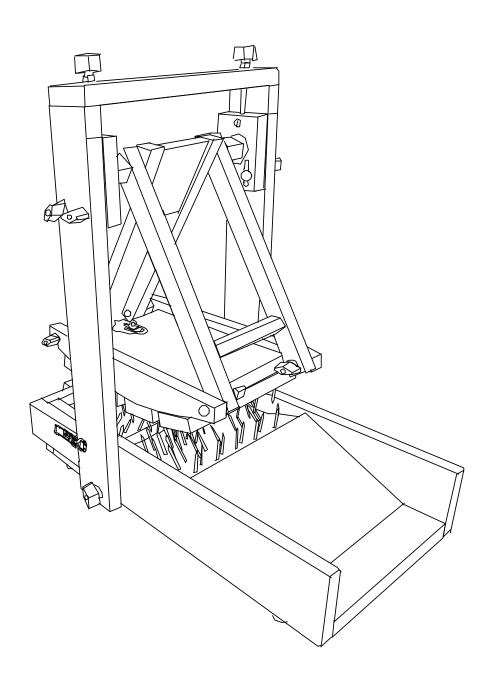




Congratulations on your new purchase! The "Fainting Maid" will speed up your fiber processing time, and you will appreciate the ease of transportation and storage the collapsed position offers. We encourage you to experiment with different adjustments on the Fainting Maid until you find the setting that works best for the fiber *you* are putting through the picker, and remember, if you ever get lost on the adjustments you can always start right back at the basic adjustment line and you're set! The following pages are filled with easy to follow diagrams showing you how to raise, collapse, and adjust your picker.

Below are a few pointers to keep in mind while operating the "Fainting Maid" wool picker.


- Remember it's a miniature swing picker; try taking "miniature swings" to pick the wool, and larger swings to send it out the back.
- Too Aggressive? Try adjusting the picker, See pages 17 & 18.
- Be very cautious while operating the swing picker, the points are very sharp.
- *Note:* a slight movement of the top of the picker during operation is normal and will not affect the performance in the least. To reduce movement, *firmly* tighten rocker frame knobs, and see step 8.

Get to know your Fainting Maid wool picker.

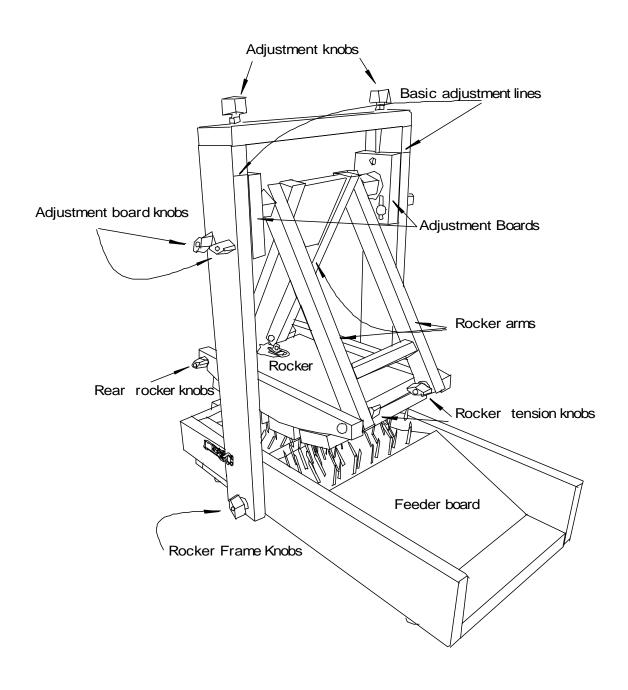


#### To raise the wool picker from the collapsed position:


1. Unclasp the safety board latch, then fold the safety board down.

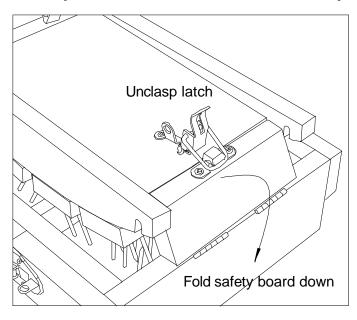

2. Loosen rocker frame knobs.

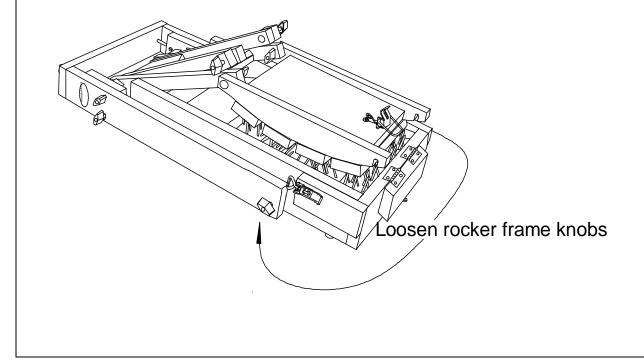


3. First fold the top two rocker arms up and back, then fold the rocker up.

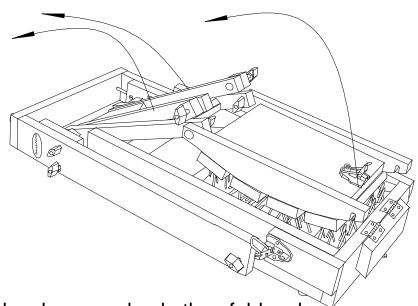



Fold rocker arms back, then fold rocker up

4. Fold rocker arms forwards. With rocker arms forward lift the rocker up, inserting the bolts on the rocker arms into the slots on the rocker.

With arms foward, lift rocker up and insert bolts into slots

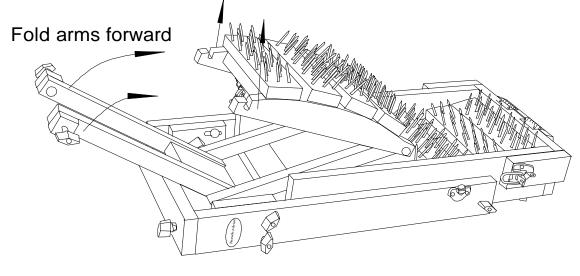


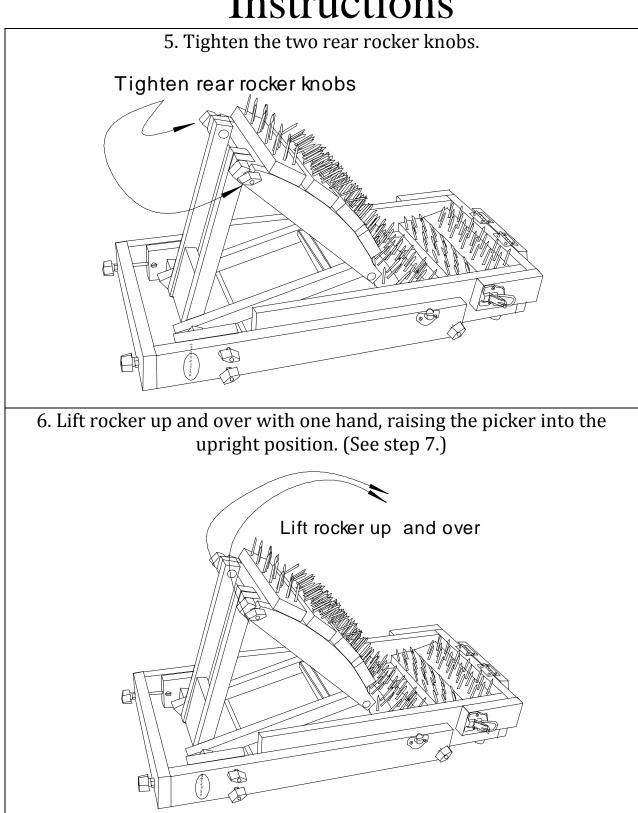

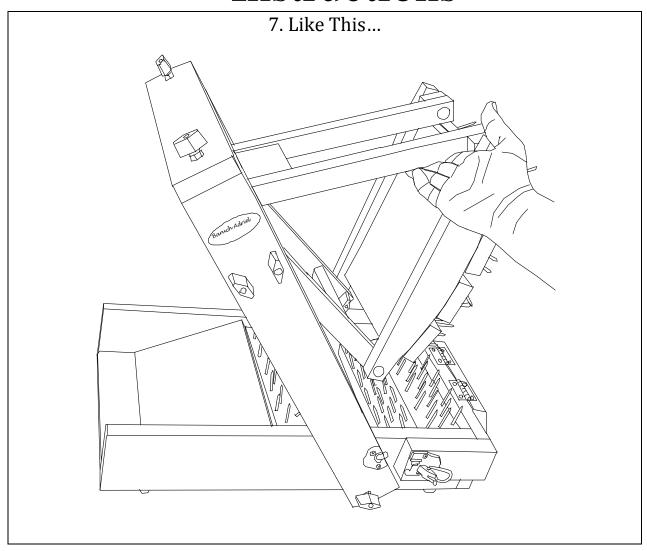



8. Clasp the rocker frame latches, holding the picker in the upright position.


(There is a latch on both sides of the picker.)

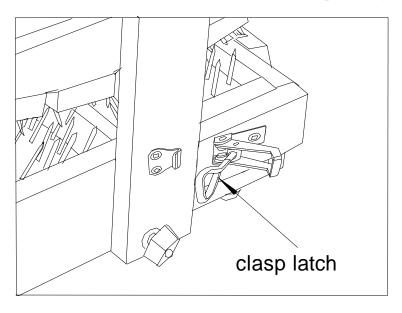

As you use your picker it will develop a slight forward and backward movement of the top of the picker. This is normal, and won't affect the picking process. If you wish to reduce this movement simply unclasp latch and rotate the latch screw clockwise ½ turn, and reclasp. (Repeat on other side).

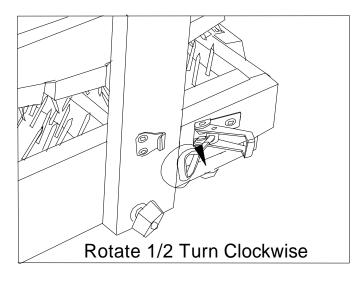


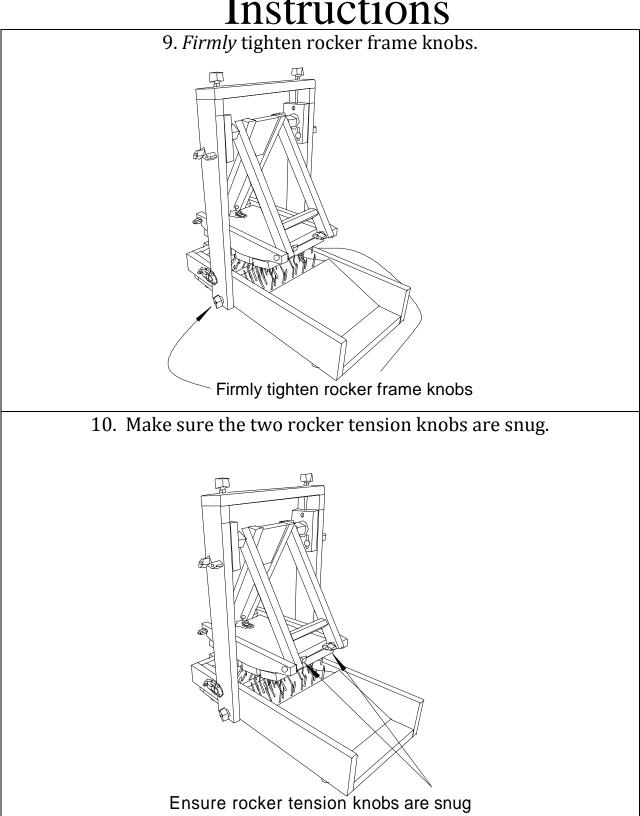

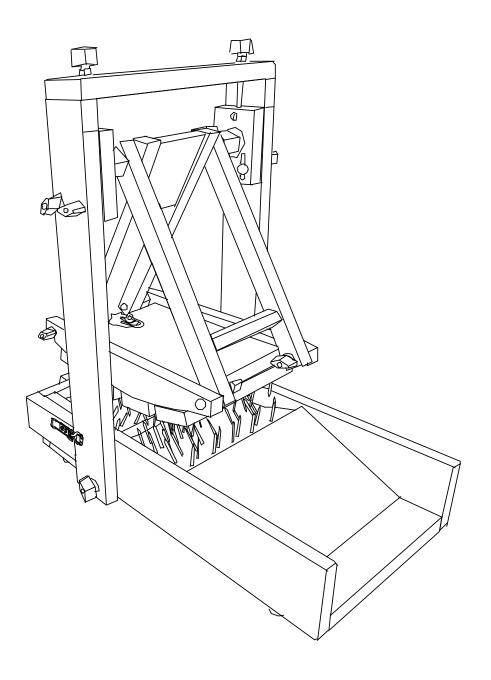


#### To collapse wool picker from raised position:


1. Slightly loosen rocker tension knobs as shown.

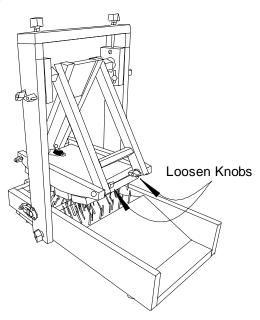


2. Loosen both rear rocker knobs.

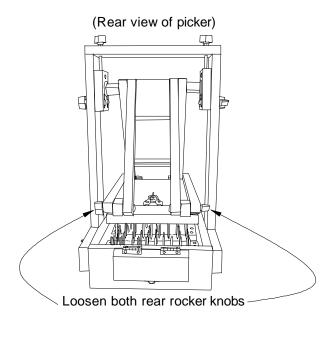


3. Slightly loosen *both* of the rocker frame knobs. There's a knob on both the right and left side of the picker, at the base.

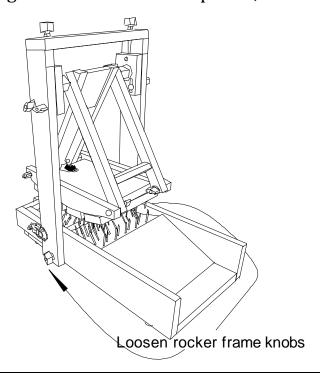

4. Unclasp both rocker frame latches. (One on each side of the picker.)

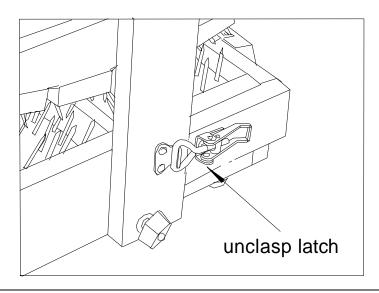


5. With picker standing sideways in front of you, swing rocker back and down as shown.

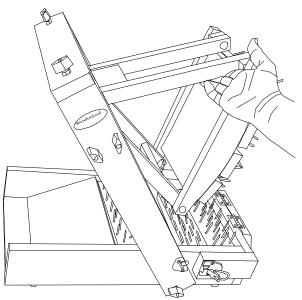


Swing rocker back, and fold down

6. First drop the rocker down, then fold the rear rocker arms back.

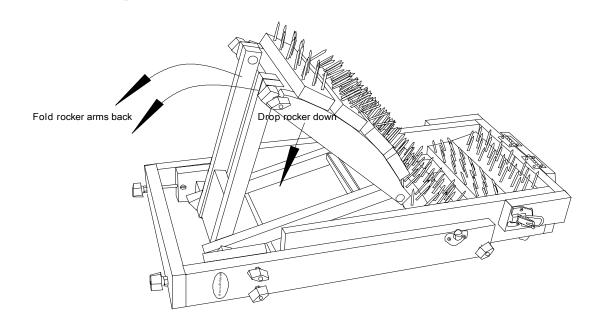


7. First, lift rocker up and fold it down into the bottom bed of teeth, then fold the rear rocker arms down.

Lift rocker and fold down.

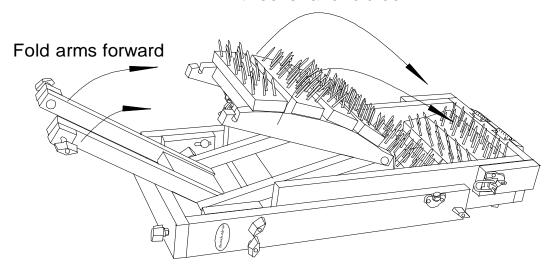


8. Fold the safety latch board up to the rocker as shown.

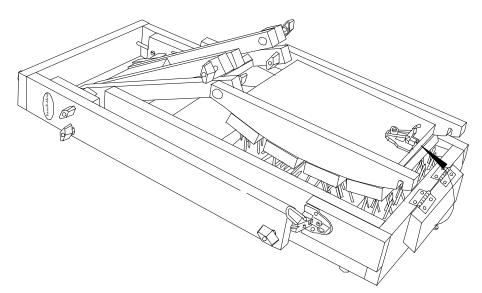



Fold safety latch board up

9. Latch safety board to rocker as shown.

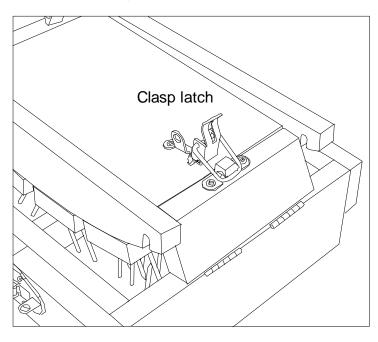


10. Firmly tighten the two rocker frame knobs. There's one on each side of the picker.

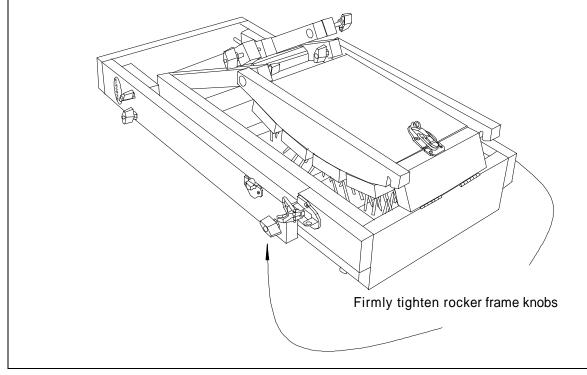

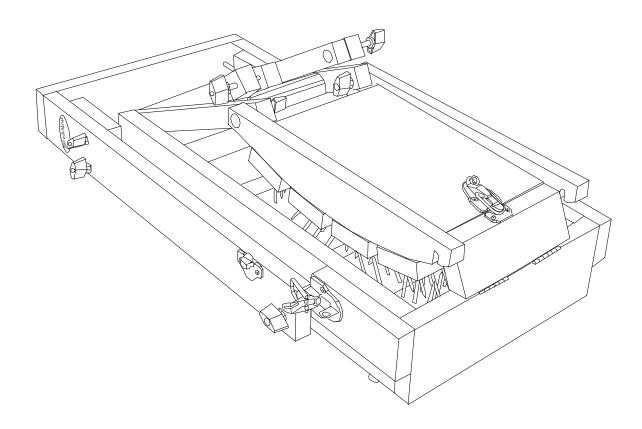


#### To adjust the wool picker:

1. Loosen the two adjustment board knobs on each side of the picker

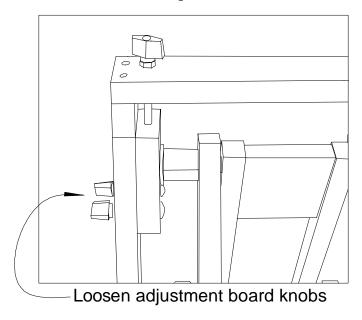


2. To raise and lower the rocker, simply turn the two adjustment knobs on the top of the picker.

(**Caution**: Do not force adjustment knobs. If knobs become hard to turn you have likely reached the highest adjustment possible.)

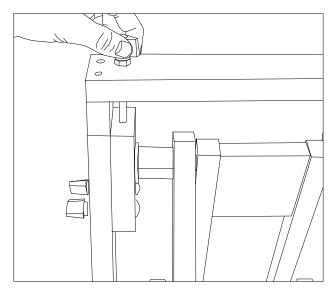


3. Begin by lining the top of the adjustment *boards* even with the basic adjustment *lines* as shown. The basic adjustment line is a recommended adjustment for medium wools. To further adjust wool picker to your own specifications, simply rotate the two adjustment knobs equal number of turns to raise or lower the rocker.

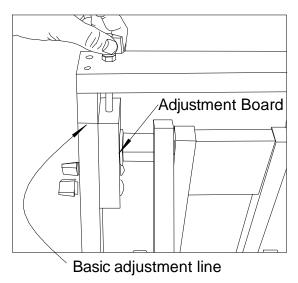

If the teeth knock against each other when you swing the rocker, raise or lower one side of the rocker until the teeth swing clearly between each other.

4. After you are finished with your adjustments, snugly tighten the two adjustment board knobs on each side of the picker.

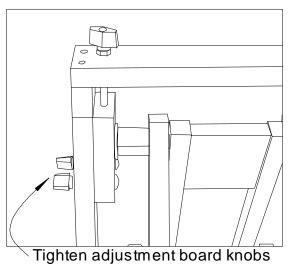

#### **Notes:**

Here you can make notes on which setting works best for each type of fiber you send through.

(Example: Romney wool, 1/2 turn below basic adjustment line.)

1			
4			
6	 	 	
8			
9	 	 	
10	 	 	
12			
14		 	
16		 	
17		 	
18.			