

DATA DOWNLOAD


Removing Play in the Folding Adapter

There are two adjustment screws in the folding adapter that can be adjusted to take any play out of the folder, allowing it to lock down tight when in the extended position.

Start by turning these screws counter-clockwise until they are flush with the main body of the adapter. Then continue to turn them counter-clockwise in $\frac{1}{4}$ turn increments evenly until the play is removed when the stock is extended and the stock still has positive engagement with the push button release.

Be aware that backing out the screws too far can prevent the adapter from fully closing and cause latch failure.

Always practice safe firearms handling. Be certain that your rifle is unloaded prior to making any modifications.

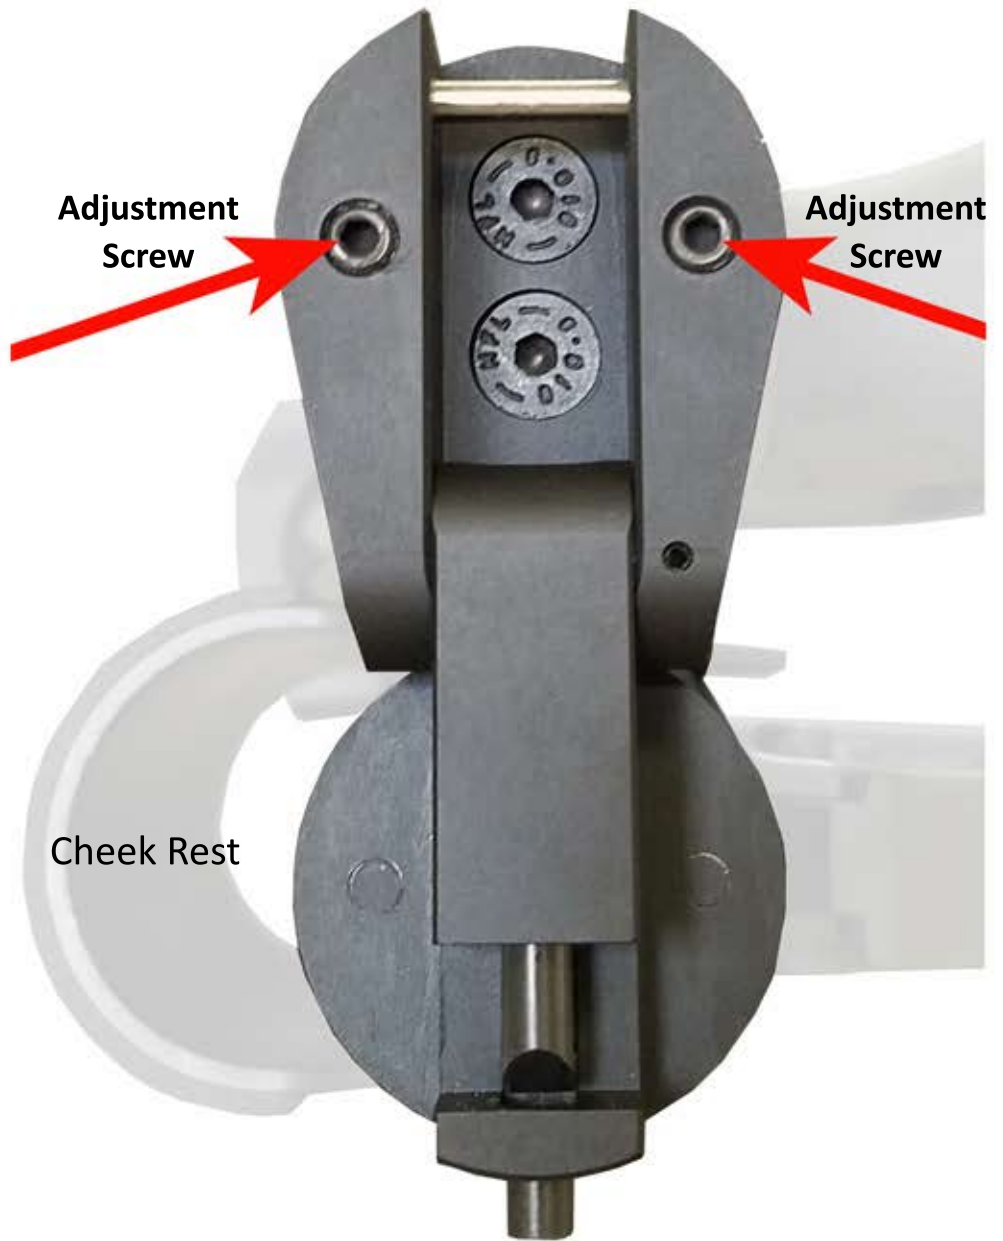

Questions? Concerns? Email us at info@xlrindustries.com.
XLR - 2323 Grand Drive - Grand Junction, CO 81506 (970) 241-1807