



## BATTERY INSTALLATION

Remove the Batter Cover (9) in order to open the Battery Compartment (8).

Insert 4 AAA batteries according to polarity.

Replace Battery Cover (9).

## HOW TO FILL

Turn Soap Chamber Cap (1) counter-clockwise and remove.

Fill soap chamber with preferred liquid soap, it is recommended to not fill more than 90% full. Liquid soap must be free of solid particles for proper operation.

Replace Soap Chamber Cap (1).

## OPERATION

Press Power Button (2) until Operation Indicator (3) illuminates blue. Operation Indicator (3) will continue to blink blue every 7 seconds to indicate normal operation.

To dispense soap place hand in front of motion sensor until Operation Indicator (3) illuminates.

Under normal operation soap will dispense for 1.5 seconds. To lengthen dispense time click the Power Button (2). Dispense time will cycle between 1.5, 2, and 2.5 seconds. The Operation (3) Indicator will blink 3 times to indicate switching of dispense mode.

To turn off the unit press Power Button (2) unit Operation Indicator (3) illuminates and dims.

## CLEANING AND CARE

Wipe the outside of the dispenser with a soft, damp cloth. Never immerse your dispenser in water. Dispenser can resist splashes of water but it is recommended to limit such occurrences as it may compromise the longevity of the unit.

## CAUTION

Do not use different types of batteries together. Do not mix old and new batteries. Always remove exhausted batteries and dispose of safely. Clean battery contacts and also those of the device prior to battery installation. Always dispose batteries safely Keep fingers clear when removing and replacing covers.