



## HOW TO USE

(Refer to image on the left) Prepare a soft-boiled egg, and let cool (large eggs work best). Once the egg is warm to the touch place it into the egg cup, wider side down. Place egg topper dome on top of the egg. Pull up on the spring mechanism with one hand, while holding the dome against the egg with the other (for best results do not push down too hard onto the egg with the hand holding the dome). Release the spring knob, the vibration will cause the sharp edge on the inside of the dome to score the egg. Rock the egg topper slightly and pull it off of the egg at an angle. If the egg shell is not removed with the topper lift it off with a small knife or supplied egg spoon.

## HOW TO CLEAN

Wash the with warm water and soap, it is not recommended to place the egg topper into the dishwasher.

## THE PERFECT SOFT-BOILED EGG

Bring a pot of salted water to a boil

Carefully drop your eggs into the pot, cover pot tightly, reduce heat to low

Allow eggs to boil for 5-6 minutes, meanwhile place your favorite buttered bread into your toaster

After 5-6 minutes immediately remove the pot from the flame and run the eggs under cold water

After removing the shell, salt as desired, and serve with toasted bread cut into strips for dipping

## CAUTION

Keep fingers clear of the spring mechanism. Take care when cleaning the interior of the egg dome as it has a sharp edge.