

EPEM002 INSTRUCTIONS

BATTERY INSTALLATION

OPEN TOP COVER (E) BY TURNING COUNTER CLOCKWISE, AND LOAD 6 AAA BATTERIES (D) ACCORDING TO POLARITY INDICATED ON THE MOTOR (C). REPLACE THE TOP COVER (E) AND TURN CLOCKWISE TO SECURELY FASTEN IT TO THE MOTOR (C)

TO REFILL MILL

UNSCREW MOTOR (C) FROM THE GLASS BASE (A) BY TURNING COUNTER CLOCKWISE. POUR DESIRED SPICE (B) INTO THE GLASS BASE (A). FOR SMOOTH FUNCTIONING, NEVER FILL THE BASE (A) MORE THAN 90%. SECURELY FASTEN THE MOTOR (C) BACK TO THE BASE (A) BY SCREWING ON CLOCKWISE

TO ADJUST GRIND

ADJUSTING KNOB IS LOCATED ON THE TOP OF THE GRINDER. TURN CLOCKWISE FOR A FINER GRIND AND COUNTERCLOCKWISE FOR A COARSER GRIND.

TO PREVENT CLOGGING

IN SOME RARE INSTANCES, YOUR GRINDER COULD GET CLOGGED WITH RESIDUE (PEPPERCORN OR SEA SALT) IF THIS HAPPENS, TURN YOUR ADJUSTMENT KNOB COUNTER CLOCKWISE UNTIL YOU COMPLETELY REMOVE THE ADJUSTMENT, THEN PUSH THE RESIDUE DOWNWARD USING A POINTED OBJECT TO CLEAN THE GRINDER AREA. ONCE CLEAN, TURN THE ADJUSTMENT KNOB CLOCKWISE BACK TO YOUR DESIRED GRIND LEVEL.

TO CARE

WIPE THE OUTSIDE OF THE MILL WITH A SOFT, DAMP CLOTH. NEVER IMMERSE YOUR MILL IN WATER. STORE YOUR MILL IN A DRY PLACE.

CAUTION

DO NOT USE DIFFERENT TYPES OF BATTERIES TOGETHER. DO NOT MIX OLD AND NEW BATTERIES. ALWAYS REMOVE EXHAUSTED BATTERIES AND DISPOSE OF SAFELY. CLEAN BATTERY CONTACTS AND ALSO THOSE OF THE DEVICE PRIOR TO BATTERY INSTALLATION. NEVER FULLY TIGHTEN THE KNOB BELOW THE BASE. KEEP FINGERS CLEAR WHEN ATTACHING COVER.

