

EPWE01 INSTRUCTIONS

BATTERY INSTALLATION

OPEN TOP COVER (E) BY TURNING COUNTER CLOCKWISE, AND LOAD 2 AAA BATTERIES (D) ACCORDING TO POLARITY INDICATED ON THE MOTOR (C). REPLACE THE TOP COVER (E) AND TURN CLOCKWISE TO SECURELY FASTEN IT TO THE MOTOR (C)

TO OPERATE

CHOOSE EITHER LONG ROD (F) IF AERATING A BOTTLE OR SHORT ROD (G) IF AERATING A GLASS. INSERT DESIRED ROD INTO THE MOTOR (C) BOTTOM. LOWER THE ROD INTO YOUR WINE AND PRESS BUTTON ON MOTOR CAP (E). MOTOR WILL OPERATE FOR 30 SECONDS. OPERATE ONCE WHEN AERATING A GLASS OR 3-4 TIMES WHEN AERATING A BOTTLE.

TO STORE

WHEN FINISHED AERATING STORE MOTOR (C) AND RODS (F) (G) IN THE STAND (B)

TO CARE

RODS (F) (G), STAND (B), AND STAND CAP (A) ARE ALL WASHABLE. TO WASH DISASSEMBLE AND RUN UNDER WARM WATER. PARTS (A) (G) (F) ARE DISHWASHER SAFE BUT USING SOAPS IS NOT RECOMMENDED.

CAUTION

DO NOT USE DIFFERENT TYPES OF BATTERIES TOGETHER. DO NOT MIX OLD BATTERIES WITH NEW ONES. ALWAYS REMOVE EXHAUSTED BATTERIES AND DISPOSE OF SAFELY. CLEAN BATTERY CONTACTS AND ALSO THOSE OF THE DEVICE PRIOR TO BATTERY INSTALLATION. KEEP FINGERS CLEAR WHEN ATTACHING COVER. DO NOT SUBMERGE MOTOR OR ITS COMPONENTS INTO WATER. IT IS NOT RECOMMENDED TO WASH STAND IN DISHWASHER. IT IS NOT RECOMMENDED TO USE SOAPS WHILE WASHING

- A. Stand Cap
- B. Stand
- C. Motor
- D. 2 AAA Batteries
- E. Motor Cap
- F. Long Rod
- G. Short Rod

