




Replacement Float - DS00019

Designed For Installation With Rotary Disc Humidifier System


Models: DS3200/DS2001/DS2000/DS-PP

INSTALLATION INSTRUCTIONS

Install the float valve into the slot in the side of the basin, ensuring that the float seal is against the outside wall of the basin. Hand tighten the float locking nut.

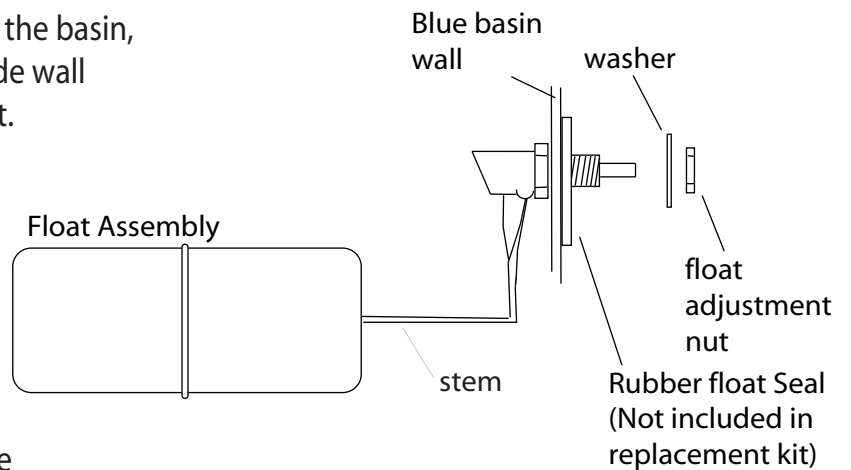

Insert one end of the elbow connector onto the to lock. Push in the Plastic or Copper water line into the other end to lock

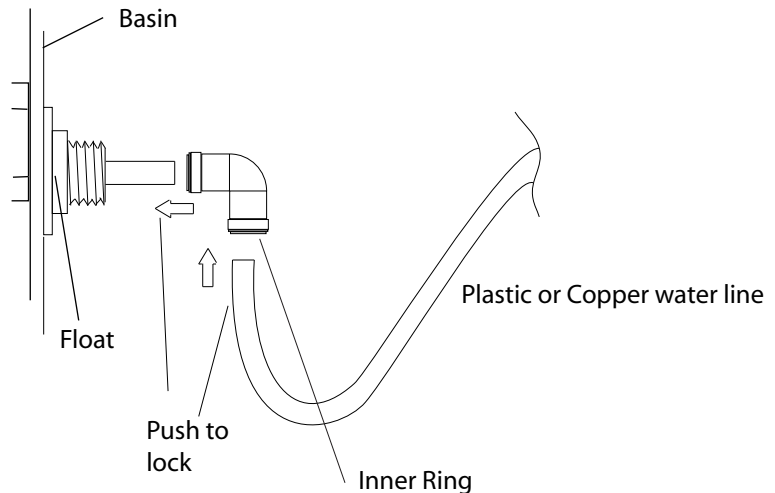

To release water line, push inner ring towards elbow and pull

An **extra** Float stopper (Black Rubber) is included with your kit
To replace the float stopper, remove cotter pin with a pair of pliers