



Pizzeria Pronto®/Piazzaque® Wind Door Instructions

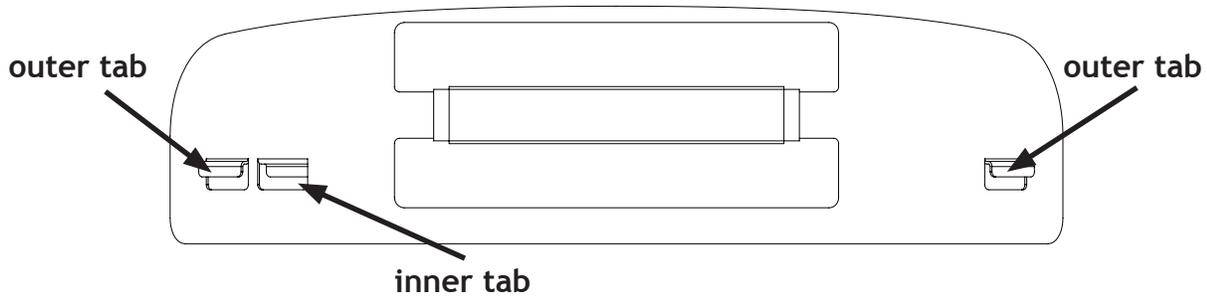

The Pizzeria Pronto®/Piazzaque® Wind Door is intended to be used in adverse or windy conditions. Using the wind door in calm weather conditions is not recommended and could lead to a decrease in oven performance. The door should be attached during pre-heating the oven and while cooking pizza. The door should not be left attached longer than 15-20 minutes with the oven on high when it is not cooking pizza. Leaving the door attached longer than this may cause your pizza stones to overheat. To keep the oven in a ready state for an extended time period between pizzas turn the oven temperature down to the med/low setting.


PizzaQue®

Portable Outdoor Pizza Oven

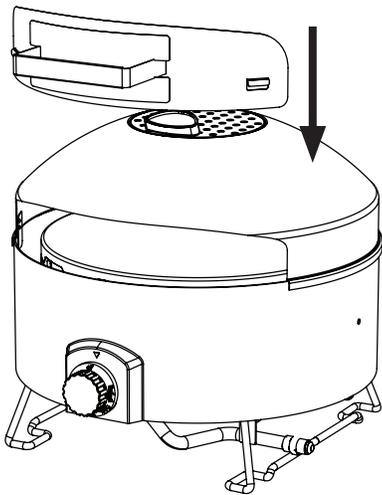


Insert wind door from the top of the oven opening. The bottom edge of the wind door should go inside the body of the oven with the two outer tabs on the outside edge of the oven body.

To open wind door, use handle to lift upwards until tabs clear the oven body and remove door.


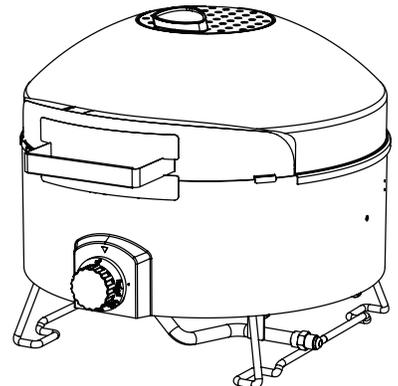


PIZZERIA Pronto® OUTDOOR PIZZA OVEN

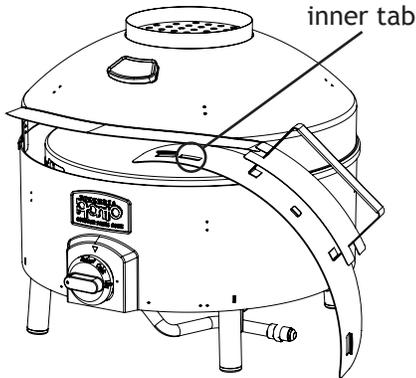

Step 1. Angle wind door handle upwards and insert left side into oven body to align inner tab to the right side of oven opening. The tab should be on the inside edge of the oven and the wind door on the outside of the oven body. Then angle handle downwards until tab fits over the edge of the oven body.

Step 2. With tab in place, slide the wind door to the left along the base until the door covers the opening of the oven. The wind door should slide between the outside of the oven body and behind the Pizzeria Pronto name badge that is attached to the front of the oven.

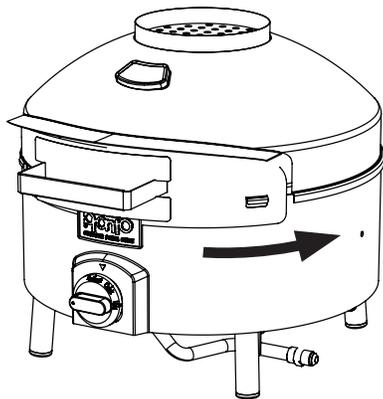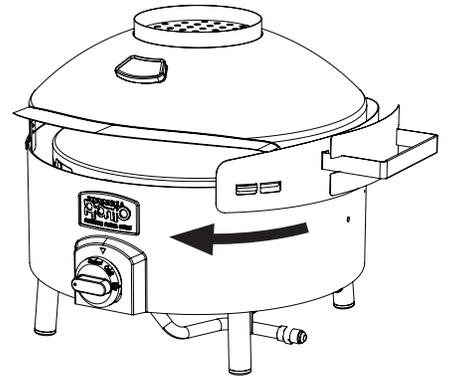

To open the door slide it to the right until the inside tab can be lifted free of the oven body.

CARE AND MAINTENANCE

Wipe periodically with soft cloth, using soap if needed. Do not use abrasive scrubbers. Dishwasher safe.

⚠ WARNING

WIND DOOR HAS SHARP EDGES. DOOR WILL BECOME HOT WITH PROLONGED CONTACT WITH OVEN. TAKE CARE NOT TO PINCH FINGERS WHEN SLIDING DOOR INTO PLACE.