

# Auxiliary lighting instructions: Pizzeria Pronto®

As a second option to starting your oven the below procedure can be followed.

## To Light the Burner

1. Make sure the control knob is in the "OFF" position.
2. Remove the hood and two baking stones and set aside. If oven is hot from previous cooking use extreme caution handling oven components. Use heat resistant gloves and place components on a heat resistant surface.
3. Open the LPG tank valve.
4. Remember to keep face and hands away from burner area.
5. Push the control knob in and turn the knob to the [left] to "Preheat" position until it clicks. Repeat quickly for 5 seconds until the burner lights.
6. Once lit set burner to low and using heat resistant gloves replace stones and hood in place. Return knob to high for preheating.
7. If the burner does not ignite within 5 seconds, immediately turn control knob back to "OFF" position. Wait 5 minutes and repeat step 5 a second time.
8. If the burner still does not ignite, TURN OFF THE GAS. WAIT 5 MINUTES for excess gas to dissipate. The use of a gas match lighter is then recommended to light the burner using the low setting. Then follow step 6.
9. If the burner still can't be lit, refer to the Troubleshooting section or call customer service at 800-521-0505.
10. Keep the tank valve closed when not in use.

