

# USER MANUAL



## **About This Manual**

The contents in this document is for information purpose only and is subject to change at any time without prior notice. We have made every effort to ensure that this User Manual is accurate and complete.

However, no liability is assumed for any errors or omissions that may have occurred.

The manufacturer reserves the right to change the technical specifications of the software and hardware described in this manual and accessories at any time without prior notice.

## **Battery Warning**

1. Never dismantle, crush, or pierce the battery, or allow the battery to short-circuit. Do not expose battery being placed in high temperature environment, if battery leaks or bulges, stop use.
2. Always charge the camera. Do not attempt to change/remove the battery due to risk of explosion.
3. Keep the battery out of reach of children.
4. Batteries may explode if exposed to open fire. Never dispose of batteries in a fire.
5. Never replace the battery on your own; have the dealer do it for you.
6. Disposed of used batteries observing local regulations.

## Notes

1. Do not touch the lens with your fingers. Finger grease may be left on the lens and will result in unclear videos or snapshots. Clean the lens on a regular basis.
2. A specific emission frequency may influence the image quality.
3. Always charge the battery fully before use, especially when the device is not used for a long time.
4. Please keep the device's bottom away from water to avoid short circuit or oxidation.
5. Please only use the original accessories provided in the box. Using others might cause damage to the device.
6. Please don't disassemble the device without an authorized instruction.
7. It is advisable to always keep the device password enabled, even if it's the default one. If you disable the password, anyone can access the device and its contents.
8. The default password is 000000. You can change it in the settings.
- 9 You are able to retrieve files (videos/audio/photo etc.) without the need for driver installation. Simply connect the camera to your PC and enter the password (000000 / the OK button 6 times).
10. You can change the settings from the in-built camera menu, or via PC software ("Cam Manager") which is found inside the drive. It is advisable to copy these files to your PC as they will be erased if you format the camera/drive.

# TABLE OF CONTENTS

- 1. Introduction**
- 2. Box Contents**
- 3. Product Overview**
- 4. Settings**
- 5. Operation**
- 6. Optional PC Settings Software**
- 7. FAQ**

The device is a new generation video recorder of High Efficiency video coding (HEVC, H.265) and low power consumption. If you record videos using H.265 coding format, it is suggested to download Media Player Codec Pack (check the link below) to assist in H.265 video playback videos on Windows Media Player.

<https://www.mediaplayercodecpack.com/>

# 1. Introduction

Please read the user manual to understand the functions of your body camera. Any mention of “U Disk” in this manual is referring to the camera drive where you can access your files.

## 1.1 Connect to PC with Password Enabled.

 
In Password On Mode, please refer to the steps below.

A. Connect the device to PC via the original USB cable.

B. A “Please Enter Password” window will show up on the LCD screen of your body camera (see photo below).



C. Please **press the OK button six times (000000)** and a “USB connecting” notice will show up on the LCD screen (see photo below). This means that your camera is recognized successfully by your PC as another drive.

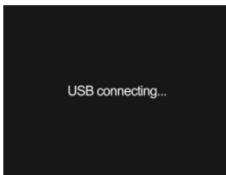

D. Depending on your PC setup, the drive may automatically open, or you can go to MyComputer/This PC and look for the drive under “devices and drives”.

E. Copy the **BodyCam PC software** file to your PC if you ever wish to change the body camera’s settings via software rather than manually.

### **1.2 Connect to PC with Password Disabled.**

In Password Off Mode, a reminder “USB connecting” will show up on the LCD screen directly after connecting the device to PC via the original USB cable. The next steps are the same as D and E above.

## **2. Box contents**

- Body Camera
- Charging Dock
- USB Cable
- Wall Charger
- Rotatable Epaulette Clip
- Rotatable Crocodile Clip

### 3. Product Overview

 


Item	Description
<b>1. Lens</b>	Capture high resolution images/videos
<b>2. Light Sensor</b>	Detect changes of light and turn on/off IR for low-light recording automatically
<b>3. Infrared LED</b>	Providing infrared light compensation in low light conditions, to help the device record good quality video with clear face view up to 10 meters
<b>4. White Light</b>	Hold <b>IR/Photo button</b> to turn on/off white light
<b>5. Scroll Up Button</b>	a) In Menu or Playback mode, press to scroll up previous page or file b) In standby or video recording or playback photo mode, hold to zoom out c) In playback mode, press to rewind video
<b>6. OK Button</b>	a) In menu set-up or playback file type (video, photo and audio) selection, press to make a selection b) In playback mode, press to pause/resume video or audio playback
<b>7. Menu &amp; Scroll Down Button</b>	a) In standby mode, press to enter menu set up b) In Menu or Playback mode, press to scroll down next page or file c) In standby or video recording or playback photo mode, hold to zoom in d) In playback mode, press to fast forward video
<b>8. USB Port</b>	For power charging or data transmission
<b>9. Reset button</b>	Inside the USB port, press to reset the device
<b>10. Star button</b>	a) Press to mark important video/audio file when the device is in video/audio recording b) Press to switch between video, photo and audio when playback files.



<b>11. Audio Recording Button</b>	<p>a) Press to start/stop audio recording when not in video recording mode</p> <p>b) Press to mute/unmute video when the device is in video recording</p> <p>c) Hold to switch resolution between 1080P and 720P when not in video recording mode</p>
<b>12. Photo button</b>	<p>a) Press to take photo in standby mode</p> <p>b) Press to take a single snapshot image while in video recording</p> <p>c) Hold to turn on/off white flash light</p>
<b>13. Video recording button</b>	<p>a) In power on mode, press to start/stop recording</p> <p>b) In audio recording, press to switch to video recording and keep the audio file</p> <p>c) In power off mode, hold 3 seconds to power on the device and start video recording</p>
<b>14. IR button</b>	<p>a) Press to turn IR light on/off;</p> <p>b) Hold to turn on/off white light</p>
<b>15. Status Indicator LED</b>	<p><b>Still Green:</b> the device is in standby mode (Power on but not recording)</p> <p><b>Still Red:</b> the device is on prerecording mode</p> <p><b>Flashing Red:</b> the device is recording video</p> <p><b>Flashing Yellow:</b> the device is recording audio only</p>
<b>16. Charging Indicator LED</b>	<p><b>Red:</b> Charging Status</p> <p><b>Green :</b> Fully Charged</p>
<b>17. Power Button</b>	<p>a) Hold 3 seconds to power on/off the device</p> <p>b) In power on mode, press to turn on/off LCD</p> <p>c) Press to exit to the previous interface when navigating setting or playing back files</p>
<b>18. Pogo Pin</b>	<p>Connection port to charging dock</p>

## LCD Interface:

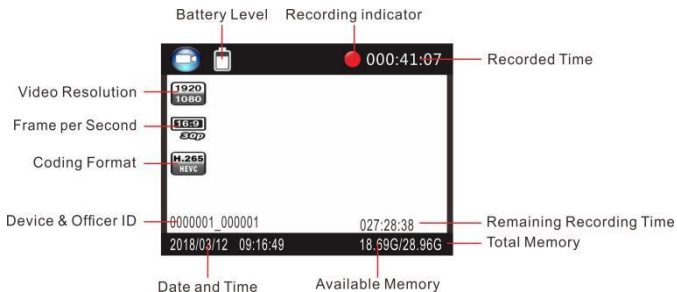

## 4. Settings

### To enter the setting menu:

1. Press Menu button **M** and then enter the password.
2. Enter the password by the following commands:
  - Press Scroll Up button **▲** to change the character to the previous letter or number.
  - Press Menu button **M** to change the character to the next letter or number.
  - Press OK button **OK** to confirm and move to the next character

**PS:** The default password is 000000.

3. After selecting the last character, press OK button **OK** to enter the setting menu.

### To navigate the settings menu:

- Press Menu button **M** to select next setting or option.
- Press Scroll Up button **▲** to select the previous setting or option.
- Press OK button **OK** to move to confirm the selection or enter the sub-menu.
- Press Power button **⏻** to return to the previous menu.

The following is a list of the available settings and options. Bold = default.

Setting	Description	Options
<b>Video Resolution</b>	The image resolution for video	2688×1512 30P 2560×1440 30P 2304×1296 30P <b>1920×1080 30P</b> 1280×720 30P 848×480 30P
<b>Photo Resolution</b>	The image resolution for photos	<b>5M (3008×1692 16:9)</b> 12M (4608×2592 16:9) 20M (5984×3366 16:9) 25M (6656×3744 16:9) 30M (7296×4104 16:9) 40M (8448×4752 16:9)


<b>Burst</b>	The number of images captured when take a photo.	<b>Off</b> , 2, 3, 5, 6, 8, 10, 15, 20
<b>Record Cam</b>	When choose Ext., it will only record the external mini cam. When choose both, it will record both the main cam and mini cam.	<b>Single</b> ,Dual
<b>Dewarp</b>	When on, video distortion correction will be corrected, with more power consumption.	<b>Off</b> , On
<b>Self Timer</b>	The time that the device waits until taking a photo after press Snapshot button.	<b>Off</b> , 5 secs, 10 secs, 20 secs, 30 secs, 1 min
<b>Quality</b>	The quality of the image for video and photo files.	S. Fine, Fine, <b>Normal</b>
<b>Pre-record</b>	When on, a certain time (depends on the video resolution) will be combined into the recorded video before record button is pressed to start recording; When off, video start until the Record button is pressed to start recording.	<b>Off</b> , On
<b>Post Record</b>	The amount of the time that the device waits to stop recording video after press the Record button.	<b>Off</b> , 5 secs, 1 min, 10 mins, 20 mins, 35 mins
<b>CarDV Mode</b>	When on, the device will power up automatically and start video recording when it is charged. The device will power off as it normally does when it is disconnected from the power source.	<b>Off</b> , On
<b>Loop Recording</b>	When on, the device will overwrite the oldest video file with the most current video file once its memory is full.	<b>Off</b> , On

<b>Split Time</b>	While recording video, the device will automatically split its recording into files of this length.	1 min, 3mins, 5 mins, 10 mins, <b>15 mins</b> , 20 mins, 30 mins, 45mins
<b>Slideshow</b>	When on, viewing photo file will start a slideshow where each photo will be shown for around 5 seconds.	<b>Off</b> , on
<b>Infrared</b>	When set to manual, hold Snapshot button to turn IR LEDs on/off. When set to Auto, these lights will activate automatically based on the light sensor's reading.	<b>Manual</b> , Auto
<b>Motion Detect</b>	When on, the device will start recording when front movement is detected by the lens.	<b>Off</b> , On
<b>Record Warning</b>	When on, a voice confirmation will be heard when start recording. When off, voice confirmation is disabled.	Off, <b>On</b>
<b>Video Mute</b>	When on, there is no sound in the video. When off, there is sound in the video	<b>Off</b> , On
<b>Global Positioning</b>	When GPS is on, position of video will be recorded and can be reviewed by GPS player.	<b>Off</b> , On
<b>Time Zone</b>	Adopt local time in real time zone	-12 to +12, default <b>+0</b>
<b>Language</b>	The language of the text on the device interface	<b>English</b> , 简体中文, Русский, Polski, 한국, French, 日本語, Portuguese, Español, Türk


<b>Screen Saver</b>	The amount of the time that the device can be idle before deactivating the display to conserve power.	Off, 30 secs, <b>1 min</b> , 3 mins, 5 mins
<b>LCD Brightness</b>	Screen lighting to view	Low, Medium, <b>High</b>
<b>Auto Power off</b>	The amount of the time that the device can be idle before powering off.	<b>Off</b> , 30 secs, 1 min, 3 mins, 5 mins
<b>Led Light</b>	When on, indicator LED will tell the status of the device; When off, the device is entering covert mode	Off, <b>On</b>
<b>White Led</b>	White Led light to offer light source	Off, <b>On</b>
<b>Key Tone</b>	When on, the device will play a tone each time press a button. When off, tone is disabled.	Off, <b>On</b>
<b>Volume</b>	The volume of the device speaker. This affects the loudness of the key tone and record warning.	0-12
<b>Coding format</b>	The coding format of video files	<b>H.264</b> , H.265
<b>Time Setup</b>	Adjust time to real location	yyyy/mm/dd
<b>ID setting</b>	User is able to set Device ID and Officer ID	Alphanumeric characters
<b>Password</b>	If password is on, user needs to enter password to get access to setting and connection to PC	Off, <b>On</b>
<b>Change User Password</b>	Password can be set or changed	Alphanumeric characters
<b>Default Setting</b>	Use this to return the device to its original settings. This does not erase the memory.	O (Yes), X (No)
<b>FW Name</b>	Firmware version	

## 5. Operation



### 5.1 Power on/off

Hold Power button  for 3 seconds to start up and enter standby mode;

In any mode, hold Power button  for 3 seconds and the device will shut down.

PS: In standby / video recording / audio recording mode, short press power button  to enable/disable screen saver.

### 5.2 Audio recording



In standby mode, press audio Recording Button  for audio recording. The device will beep and vibrate once. LED indicator on the top will turn yellow and flash. Press audio Recording Button again  to stop audio recording (the device vibrates twice) and saves the file.

In audio recording mode, short press **Star Button** to mark it as important and a yellow star icon will appear on the right side of the screen.

### 5.3 Photo shooting


In standby mode, press photo button  to take photos.

### 5.4 Video recording


In standby mode, press video Recording Button  to start video recording. The device will beep and vibrate once. LED indicator on the top will turn red and flash. Press again video Recording Button  to stop video recording (the device vibrates twice) and save the file.

In video recording mode, short press **Star Button** to mark the file as important and a yellow star icon will appear on the right side of the screen.



### 5.5 One-button video recording

In power off mode, hold video Recording Button  for three seconds to power on the device and start video recording immediately.

## 5.6 PIV (picture in video)




In video recording mode, press photo button  to capture photo.

## 5.7 Zoom

In standby or video recording mode, hold Scroll Up button  and scroll down button  to zoom out and in the image.

## 5.8 IR night vision

Under dark circumstances, infrared LED will help to record clear image or video.

In standby mode, PRESS Menu button  to navigate. Find option **【Infrared】**, PRESS OK button  to enter sub-menu: Manual & Auto, press OK button  to select.

### 1) Auto infrared mode:

In low light situations, 4 IR LEDs will be turned on automatically and the device will switch on the infrared filter lens. Video will turn black and white. When the camera detects light, it will automatically switch back to colour mode.

### 2) Manual infrared mode:



When night vision is needed, PRESS **IR button** to switch to Infrared mode. IR LEDs will be turned on and there will be black and white video. PRESS this button again to turn off IR LEDs and video becomes colourful.





## 5.9 White LED





In standby or video recording mode, hold **IR or Photo button** to turn on/off white LED.



## 5.10 Playback

In standby mode, press scroll-Up button  to enter playback mode. There are Video, Photo, and Audio options. Press Star button to select, and press OK button  to confirm the selection.






1) In video file playback mode, PRESS OK button  to pause/resume playback; PRESS scroll-Up button  to rewind, PRESS Scroll-down button  to fast forward and PRESS OK button  to play normally. User is able to fast forward or rewind 2x, 4x, 8x, 16x, 32x, 64x.

2) In photo file playback mode, hold  and  button to zoom out and in the image. Adjustable is X1.0~X10.0. In the zoom in and out image, short press  and  button to move the image to right or left side.


## 5.11 Reset

If the device is frozen, use a pin to reset and restart the device. Reset button is inside USB port.




## 5.12 Device ID/ User ID

In standby mode, PRESS Menu button  to enter settings. Find [ID setting], and PRESS OK button  to select. The Device & Person SN interface will show up, 5 characters for device ID and 6 characters for person ID. PRESS scroll-Up button  or Scroll-down button  to choose a character and PRESS OK  button to select.

## 5.13 Time Setting

In standby mode, PRESS Menu button  to enter settings. Find Time bar, for example, 2022/02/02 07:40. PRESS OK button  and enter the password.

User is able to change the date and time.

Press scroll-Up button  or Scroll-down button  to choose a character and PRESS OK button  to select.

### **5.14 Video/Photo/Audio files can only be deleted on PC/laptop.**

The video, photo and audio files of the device can only be deleted on PC/laptop but not on the LCD screen of the device. Loop recording is also an option.

### **5.15 Charging**

When the battery is low, the battery icon will flash on the LCD screen and an alert tone will be heard. While the device is charging, the indicator light will turn red and turn green after the device is fully charged.

#### **Charging methods:**

1). Attach the device to the charging dock. Use the original USB cable to connect the charging dock to the wall charger or direct to a USB interface.

Use the original supplied cables so that you don't damage the ports. It is also advisable to turn off the camera when charging, and to disconnect/eject the drive from the PC. Using the individual docking station will ensure a faster charge.

## 6. Optional PC Settings Software

The device settings can be changed through the camera menu or via **Camera Manager** (Please find it in **BodyCam PC Software**).

Please refer to the steps if you wish to change camera settings using PC software.

A. Copy BodyCam PC Software file to your PC and find Camera Manager.

> 本地磁盘 (E:) > BodyCam PC Software-v0.5

名称

- Auto Driver Installation Software
- Camera Manager 4.1**
- Driver Installation Procedure & Camera Manager Operation Guide.pdf
- GpsPlayerv1.2.7.msi
- H.265 player software Plugins accelerator.txt

> 本地磁盘 (E:) > BodyCam PC Software-v0.5 > Camera Manager 4.1

 
名称	修改日期
<b>Camera Manager 4.1.exe</b>	2021/11/2 16:57
h22_4g_pc.dll	2020/9/28 14:53
h22_4g_pc.h	2021/7/27 14:51
h22_4g_pc.lib	2020/7/29 10:34
Language.ini	2021/9/18 9:00
libusb0.dll	2016/10/18 9:26
mfc140u.dll	2016/2/15 16:43
mfc140ud.dll	2016/7/21 23:05
ucrtbased.dll	2016/8/14 5:32
vcruntime140.dll	2017/2/2 15:49

B. Choose “Password On” in the menu of the device.


C. Install the driver (Read the instruction in BodyCam PC Software file to install it).

D. Connect the device to PC.


E. Open Camera Manager and enter password 000000, connect and login.

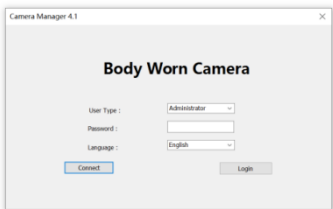

 F. Click "Get" to show up the device's original settings. Choose the target setting and click "Set" to change the setting.

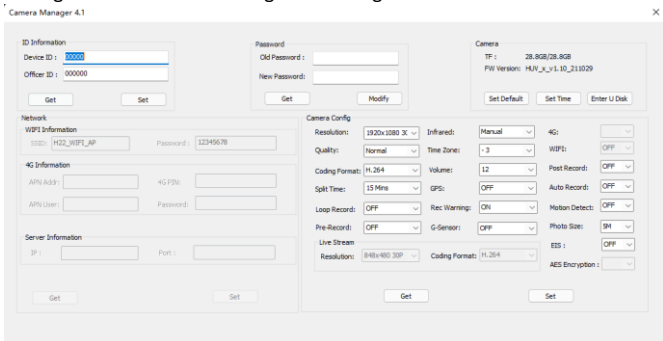

 G. Click "Enter U Disk" (in the upper right corner) to open the drive. All files can be checked in U Disk.

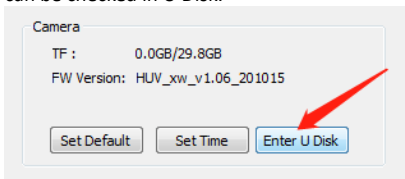

## 7. FAQ

### 7.1 How to format U Disk of the device?

After enter U Disk of the device, right click it. Choose “Restore the default setting” and click “Begin to format”.

Once the format finished, unplug USB cable from PC. A reminder “Card non-optimum! Format?” will show up on the LCD screen of the device.

Choose the left circle to format. A reminder “Caution! Delete All?” will show up. Choose the left circle to delete. Finally a reminder “Format successful!” will show up.

**Please format U Disk only when “0.0G/0.1G” shows up on the LCD screen of the device or the device cannot take videos, photos or audios or SD card is full.**

Generally, you should never need to format the U Disk/ drive. It may cause the camera to malfunction!

### 7.2 How to playback the videos, photos and audios on the LCD screen of the device?

**There are two choices here.**

A. In Password On Mode, press Scroll Up button and press OK button for six times to playback the videos, photos and audios on the LCD screen.

B. In Password Off Mode, press Scroll Up button once to playback the videos, photos and audios on the LCD screen.

### **7.3 How to set the time?**

**There are two choices here.**

A. Set the time and date manually in the device menu.

B. Set the right timezone and turn on GPS in the device menu directly or via Cam Manager. After GPS is searched successfully, GPS icon will not flash and longitude and latitude will show up on the LCD screen of the device. At this time, time and date will be synchronized.

### **7.4 How to check the videos by GPS player on PC?**

Find the GPS player software in the camera drive and copy it to your PC. Open the GPS player to check the recorded videos and there will be GPS tracking in the player.

### **7.5 Why will it fail when connecting the device to PC?**

The connection may not be good.

Reset the device first.

Change to another PC or another USB port in your PC.

### **7.6 Why will it fail when connecting the device to Cam Manager on PC?**

**There are four possibilities here.**

A. The driver may not be installed successfully. Please strictly follow the instruction step by step to make sure that the driver is installed successfully.

B. After connect the device to PC, user may input password on the LCD

screen of the device to enter USB connecting mode. Please don't input password and just let it be.

C. User may set Password Off in the menu. If do like this, the device will enter USB connecting mode directly. Please only set Password On when connect to Cam Manager.

D. When the device connects to PC, the connection may not be good. Reset the device first.  
Change to another PC or another USB port of PC.

## IMPORTANT INFORMATION

### **The clips and attachment studs rotate 360 degrees -**

The crocodile clip, epaulette clip, chest harness and shoulder harness attachment studs ALL turn 360 degrees.

Slot the clip into the back of the device and turn the clip vertically.

Or slot the clips into the back of the device first and attach the device to the chest or shoulder harness. Finally turn the device vertically.

### **Reset device -**

To reset the device, use a small needle to jab the reset button. The reset button is located next to the USB port.

### **Delete files -**

The recorded files can only be deleted on PC. This is to stop people from getting rid of the evidence straight from the device itself. To delete the files on PC, right click to delete them.

### **Product warranty -**

We offer a 12-month warranty on the device. This warranty covers faults that were caused by the manufacturer. If the fault was caused by the customer, the warranty will be void.

### **USB cable -**

Please only use the USB cable provided in the product box. Using other USB cables might cause damage to the body camera.

### **Attention -**

Please charge camera fully after camera is left without working for long time. Please keep camera bottom away from water to avoid short circuit or oxidation.

Please don't disassemble camera without authorized instruction.