

LIMITED WARRANTY

Blazer Products Inc. warrants each Torch and parts thereof manufactured for it or included with it to be free from defects in material and workmanship, under normal use and service for a period of no more than 1 year from date of purchase.

If for some reason a problem should develop return the unit along with proof of purchase postage prepaid to Blazer Products Inc. Include a note detailing the problem. If our inspection shows that the part/piece is defective we will make all necessary repairs free of charge, or replace it, at Blazer's sole discretion. This warranty does not apply to the outer finish of your Torch. If we determine the problem is not covered by our warranty we will explain why and advise the cost to repair. Blazer Products Inc. will not be held liable for any consequential damages resulting from the misuse of the Torch.

Blazer offers this warranty in lieu of all other expressed or implied warranties including warranties of merchantability of fitness to be in effect only for the duration of the expressed warranty set forth above. For more information, visit www.blazerproducts.com, or write to:

Blazer Products Inc.
88 Allen Blvd
Farmingdale, NY 11735
USA

Tel: 631-694-5058

Fax: 631-694-5063

E-mail: info@blazerproducts.com

WARNINGS & PRECAUTIONS

DANGER
EXTREMELY FLAMMABLE
KEEP OUT OF THE REACH OF CHILDREN

Read and follow all operating instructions as well as all warnings and precautions included with your Blazer Torch before attempting to use.

- Do not expose The Torch™ to heat or store at temperatures exceeding 120°F
- Do not store in direct sunlight
- Do not use near fire, flames, sparks or combustible materials
- Never point directly at face or body when igniting
- Exercise caution when using your Torch outdoors as flame may be invisible in sunlight
- Treat your Torch as you would any fine instrument: Do not drop or otherwise abuse
- Never use a damaged or malfunctioning Torch
- Do not attempt to modify the Torch construction or use unapproved accessories
- Keep the Torch out of the reach of anyone who has not read all enclosed instructions and warnings



MODEL PB207-cr Instruction Manual

DANGER
EXTREMELY
FLAMMABLE
WILL CONTAIN BUTANE GAS
CONTENTS UNDER PRESSURE

**Read all warnings and
precautions before use.**

Thank you for your purchase of The Original Blazer Torch™, the world's first cigar torch lighter that ignited an industry, sparked a revolution in design and set the standard for cigar lighters worldwide. The Blazer Torch™ features the industry first state-of-the-art piezo electric quartz crystal instant ignition system and a powerful butane blue wind resistant 2500°F flame. The precision engineering and fine craftsmanship makes The Torch™ the ultimate cigar lighter and a worldwide hit that endures to this day. Our new and unique child resistant feature ensures complete safety while also maintaining an intuitive easy to use ignition.

Use The Torch™ when you're on the go, the wind resistant flame is ideal for outside use, whether you're driving down the coast, on the golf course, beach, boating, or just walking down the street you'll get a fast reliable flame every time.

With our commitment to maintaining the Blazer tradition of quality and innovation Blazer Products Inc. has continued to expand the choices available in torch and traditional lighters while offering a strong emphasis on customer care and support.

For more information be sure to visit us online at www.blazerproducts.com


HOW TO OPERATE

FILLING WITH GAS

1. Be sure the cap is on The Torch™ before filling with gas.
2. Shake butane gas canister.
3. Vertically insert gas canister nozzle into gas inlet valve located at the bottom of The Torch™ and press down for approximately 5-10 seconds. Check gas level through the transparent fuel gauge.
4. Allow 1 minute for the butane gas to stabilize before igniting.

IGNITION AND EXTINGUISHING

1. Remove cap from top of The Torch™.
2. Roll forward, this will cause the Trigger Lock Lever to swing backwards, allowing the plunger trigger motion to be completed.
3. Release the lever to extinguish.

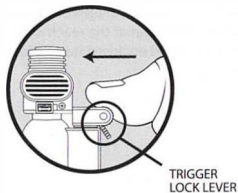

MODEL PB207-CR PRODUCT FEATURES

