

MAEN

USER GUIDE

ABOUT THE BROOKLYN 36 TRIPLE CALENDAR

USING YOUR WATCH

OVERVIEW

SETTING THE MAEN BROOKLYN 36 TRIPLE CALENDAR

SERVICE

WARRANTY

Wearing the watch for the first time

Before being worn for the first time, or if it has stopped, a MAEN watch must be wound manually in order to function correctly and precisely. To wind the watch manually, unscrew the winding crown completely, then turn it several times clockwise. (Turning in the other direction has no effect.) A minimum of 25 turns is required for adequate partial winding.

The watch will then be wound automatically as long as it is worn on the wrist. Carefully screw the crown back down against the case to ensure waterproofness.

The Brooklyn 36 Triple Calendar

With its modest dimensions, robust build, and everyday elegance, this new model might very well become the new timepiece that you wear every day.

We have a thing for vintage dimensions and for making watches that are more than an object that you strap on your wrist. We like watches that aid in navigating the unforeseen challenges of each day and that have actual purpose.

That's why we made the Brooklyn 36 and we hope you are as excited as we are with this release!



Brooklyn 36 Overview

- 1

HOUR HAND
- 2

MINUTE HAND
- 3

SECONDS HAND
- 4

DAY SUBDIAL
- 5

MONTH SUBDIAL
- 6

DATE WINDOW
- 7

CROWN



Setting your Brooklyn 36

MANUAL WINDING (POSITION 0):

To wind the watch manually, turn the crown clockwise; turning in the other direction has no effect.

When setting the watch for the first time or after the watch has stopped, complete a minimum of 25 turns for partial winding.



Setting the date, day and time

SETTING THE DATE & DAY (POSITION 1):

the crown is pulled out to the first notch. To set the day, turn the crown counter clockwise. To set the date turn the crown clockwise.

SETTING THE TIME (POSITION 2):

the crown is pulled out to the second notch. The seconds hand is stopped, allowing you to set the time to the precise second. To set the hour and minute, turn the crown in either direction. To avoid confusion between a.m. and p.m. hours, move the hour hand to 12 o'clock. If the date changes, it is midnight.



Setting the month

SETTING THE MONTH

Next to the crown on the right side of the case is a little hidden pusher located. By carefully pressing this pusher with a small pen or toothpick you will be able to select between months.

Make sure to first set the date and time before setting the month.



HIDDEN PUSHER

Warranty term: Two year from the date of purchase. This warranty covers manufacturing defects on the watch itself (movement, case, crystal). Other parts than the above are not covered by this warranty. To have replacement covered under this warranty performed, please use our contact form on the “contact us” page. In the e-mail you need to specify your name, address, order number and a detailed description of the issue at hand. Finally, write ‘reclaim of purchase’ as subject of the e-mail and mail. Note that repair/replacements will be charged in the following cases, even during the warranty term.

- Failure or damage caused by improper use or carelessness (knocks, dents, crushing, broken crystal, etc.)
- Failure or damage caused by unjustifiable repair or modification
- Failure or damage caused by fire or water, or a natural disaster such as for example an earthquake
- Esthetic changes that occur during normal wear and tear and aging (minor scratches, etc.; on the case and/or crystal, alteration of the colour on the wristband and the peeling of the plating)
- In case the retail store and the purchase date are not indicated on the warranty, or if this information has been rewritten

The case, dial, hands, crystal, watchband or other parts thereof may be replaced with substitutes if the originals are not available. This warranty warrants that you can receive free replacement in accordance with the terms set forth herein and within the specified term, and shall not restrict any lawful right of the Customer.

Any damage caused due to the modification of the watch is not covered by our warranty. Only if the modification is arranged and executed directly via our service center the original warranty will be maintained.

WWW.MAENWATCHES.COM