# MAEN

#### **USER GUIDE**

### ABOUT THE GREENWICH 38 AUTOMATIC CERTIFIED SWISS MADE

### **USING YOUR WATCH**

OVERVIEW
SETTING THE MAEN GREENWICH 38 AUTOMATIC
USING THE GMT

SERVICE

CARING FOR YOUR GREENWICH 38 AUTOMATIC WARRANTY

## Wearing the watch for the first time

Before being worn for the first time, or if it has stopped, a MAEN watch must be wound manually in order to function correctly and precisely. To wind the watch manually, turn it several times clockwise. (Turning in the other direction has no effect.) A minimum of 25 turns is required for adequate partial winding.


The watch will then be wound automatically as long as it is worn on the wrist.

### The Greenwich 38 Automatic GMT

The Greenwich is the perfect travel watch with its GMT function and comfortable rubber Tropic strap.

The dial offers very good legibility due to the oversized hour indicators. At night, the watch is also a pleasure to look at due to the Swiss Super-LumiNova with superior Grade X1 quality.

The Greenwich has an elegant, but at the same time very powerful appearance. The case design is based on our Hudson and is also 38mm in diameter. There are some obvious differences though. First of all the Greenwich has a step up bezel with alternating brushed and polished effects. The overall brushing is also more prominent. Next to that the crown is oversized and the case has lug holes.

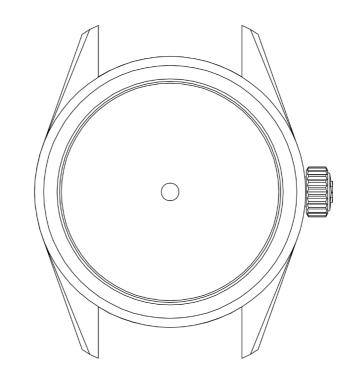



# Certified Swiss Made

The Greenwich GMT Automatic is assembled in La Chaux-de-Fonds , Switzerland. Waterproof testing, entrance inspection and final quality control will also be performed in Switzerland.

The Swiss Made SwissTech S24-045 movement will be in-house regulated and each individual movement will be passing tests to certify the precision of the movement.

The Swiss Made label is a representation of the ultimate sign of quality - the perfect combination of function and design.

### Greenwich 38 Automatic Overview

- 1 HOUR HAND
- 2 MINUTE HAND
- 3 SECONDS HAND
- 4 GMT HAND
- 5 CROWN

6

DATE WINDOW



### Setting your Greenwich 38 Automatic

#### SCREWED-DOWN POSITION (POSITION 0):

the crown is completely screwed down against the case. When the crown is in this position, the Greenwich Automatic is guaranteed waterproof to a depth of 10ATM = 100 metres (330 feet)

#### MANUAL WINDING (POSITION 1):

The crown is unscrewed. To wind the watch manually, turn the crown clockwise; turning in the other direction has no effect.

When setting the watch for the first time or after the watch has stopped, complete a minimum of 25 turns for partial winding.



To screw the crown back down against the case, return it to position 1 and apply light pressure on it while screwing it down clockwise against the case.

After every use, carefully screw the crown back down against the case to guarantee the waterproofness. The crown should never be unscrewed under water.

# Setting the date and GMT

#### SETTING THE DATE (POSITION 2):

the crown is unscrewed and pulled out to the first notch. To set the date, turn the crown counter-clockwise. Turning the crown clock wise will set the GMT hand

#### **SETTING THE TIME (POSITION 3):**

the crown is unscrewed and pulled out to the second notch. The seconds hand is stopped, allowing you to set the time to the precise second. To set the hour and minute, turn the crown in either direction. To avoid confusion between a.m. and p.m. hours, move the hour hand to 12 o'clock. If the date changes, it is midnight.

Avoid changing the date after setting the time in a counterclockwise direction between 4 p.m. and 10.30 p.m.



To screw the crown back down against the case, return it to position 1 and apply light pressure on it while screwing it down clockwise against the case.

After every use, carefully screw the crown back down against the case to guarantee the waterproofness. The crown should never be unscrewed under water.

## Caring for your Greenwich Automatic

You can help preserve its lustre by cleaning it occasionally with a microfibre cloth. If you require any service on your watch, please make sure to send in a request via our website and we will make sure to have your watch serviced and restored to original condition.

Warranty term: Two year from the date of purchase. This warranty covers manufacturing defects on the watch itself (movement, case, crystal). Other parts than the above are not covered by this warranty. To have replacement covered under this warranty performed, please use our contact form on the "contact us" page. In the e-mail you need to specify your name, address, order number and a detailed description of the issue at hand. Finally, write 'reclaim of purchase' as subject of the e-mail and mail. Note that repair/replacements will be charged in the following cases, even during the warranty term.

- Failure or damage caused by improper use or carelessness (knocks, dents, crushing, broken crystal, etc.)
- Failure or damage caused by unjustifiable repair or modification
- Failure or damage caused by fire or water, or a natural disaster such as for example an earthquake
- Esthetic changes that occur during normal wear and tear and aging (minor scratches, etc.; on the case and/or cystal, alteration of the colour on the wristband and the peeling of the plating)
- In case the retail store and the purchase date are not indicated on the warranty, or if this information has been rewritten

The case, dial, hands, crystal, watchband or other parts thereof may be replaced with substitutes if the originals are not available. This warranty warrants that you can receive free replacement in accordance with the terms set forth herein and within the specified term, and shall not restrict any lawful right of the Customer.

Any damage caused due to the modification of the watch is not covered by our warranty. Only if the modification is arranged and executed directly via our service center the original warranty will be maintained.