

MAEN

USER GUIDE

ABOUT THE HUDSON 38 GMT
CERTIFIED SWISS MADE

USING YOUR WATCH

OVERVIEW
SETTING THE MAEN HUDSON GMT

SERVICE

CARING FOR YOUR HUDSON 38 GMT
WARRANTY

Wearing the watch for the first time

Before being worn for the first time, or if it has stopped, a MAEN watch must be wound manually in order to function correctly and precisely. To wind the watch manually, unscrew the winding crown completely, then turn it several times clockwise. (Turning in the other direction has no effect.) A minimum of 25 turns is required for adequate partial winding.

The watch will then be wound automatically as long as it is worn on the wrist. Carefully screw the crown back down against the case to ensure waterproofness.

The Hudson 38 GMT

The Hudson 38 GMT is based on our flagship model, the Hudson 38 MK4, and shares all the improvements of this fourth generation.

With its 30 ATM water resistance, X1 Superluminova, GMT function and screw-down crown the Hudson GMT is the perfect travel companion.





Certified Swiss Made

The Hudson 38 GMT is assembled in La Chaux-de-Fonds, Switzerland. Waterproof testing, entrance inspection and final quality control is also performed in Switzerland.

The Swiss Made label is a representation of the ultimate sign of quality - the perfect combination of function and design.

Hudson 38 GMT Overview

- 1 HOUR HAND
- 2 MINUTE HAND
- 3 SECONDS HAND
- 4 GMT HAND
- 5 WINDING CROWN
- 6 DATE WINDOW



Setting your Hudson 38 GMT

SCREWED-DOWN POSITION (POSITION 0):

the crown is completely screwed down against the case. When the crown is in this position, the Hudson GMT is guaranteed waterproof to a depth of 30ATM = 300 metres

MANUAL WINDING (POSITION 1):

The crown is unscrewed. To wind the watch manually, turn the crown clockwise; turning in the other direction has no effect.

When setting the watch for the first time or after the watch has stopped, complete a minimum of 25 turns for partial winding.



Setting the date & GMT hand

SETTING THE DATE (POSITION 2):

the crown is unscrewed and pulled out to the first notch. To set the date, turn the crown counter clockwise. To set the GMT hand turn the crown clockwise.

SETTING THE TIME (POSITION 3):

the crown is unscrewed and pulled out to the second notch. The seconds hand is stopped, allowing you to set the time to the precise second. To set the hour and minute, turn the crown in either direction. To avoid confusion between a.m. and p.m. hours, move the hour hand to 12 o'clock. If the date changes, it is midnight.



Caring for you Hudson 38 GMT

You can help preserve its lustre by cleaning it occasionally with a microfibre cloth. You can also wash the case and bracelet from time to time using soapy water and a soft brush.

After wearing your watch in the sea, it is important to rinse it with fresh water to remove any salt and sand deposits. Before cleaning your watch, always ensure that the crown is screwed down properly against the case to guarantee waterproofness.

Warranty term: Two year from the date of purchase. This warranty covers manufacturing defects on the watch itself (movement, case, crystal). Other parts than the above are not covered by this warranty. To have replacement covered under this warranty performed, please use our contact form on the “contact us” page. In the e-mail you need to specify your name, address, order number and a detailed description of the issue at hand. Finally, write ‘reclaim of purchase’ as subject of the e-mail and mail. Note that repair/replacements will be charged in the following cases, even during the warranty term.

- Failure or damage caused by improper use or carelessness (knocks, dents, crushing, broken crystal, etc.)
- Failure or damage caused by unjustifiable repair or modification
- Failure or damage caused by fire or water, or a natural disaster such as for example an earthquake
- Esthetic changes that occur during normal wear and tear and aging (minor scratches, etc.; on the case and/or crystal, alteration of the colour on the wristband and the peeling of the plating)
- In case the retail store and the purchase date are not indicated on the warranty, or if this information has been rewritten

The case, dial, hands, crystal, watchband or other parts thereof may be replaced with substitutes if the originals are not available. This warranty warrants that you can receive free replacement in accordance with the terms set forth herein and within the specified term, and shall not restrict any lawful right of the Customer.

Any damage caused due to the modification of the watch is not covered by our warranty. Only if the modification is arranged and executed directly via our service center the original warranty will be maintained.

WWW.MAENWATCHES.COM