

*MAEN*

## **USER GUIDE**

---

**ABOUT THE SKYMASTER 38 AUTOMATIC  
CERTIFIED SWISS MADE**

## **USING YOUR WATCH**

---

**OVERVIEW  
SETTING THE MAEN SKYMASTER 38 AUTOMATIC  
USING THE CHRONOGRAPH**

## **SERVICE**

---

**CARING FOR YOUR SKYMASTER 38  
WARRANTY**

## *Wearing the watch for the first time*

Before being worn for the first time, or if it has stopped, a MAEN watch must be wound manually in order to function correctly and precisely. To wind the watch manually, turn it several times clockwise. (Turning in the other direction has no effect.) A minimum of 25 turns is required for adequate partial winding.

 
The watch will then be wound automatically as long as it is worn on the wrist.

# *The Skymaster 38 Automatic*

The Skymaster 38 is a balanced, vintage inspired chronograph with a sophisticated yet powerful appearance.

The box domed hesalite glass combines very well with the thin profile of the watch and the brushed and polished finish on the indicators play beautifully with the light. Other interesting features are radial subdials, vintage styled rehaut and a narrow bezel.

This watch does not only look good, it is also a very versatile tool. From timing boiled eggs to keeping track of flight durations, the chronograph is there to assist and the 12H GMT bezel let's you keep track of an additional time-zone. Very useful for the frequent traveller!

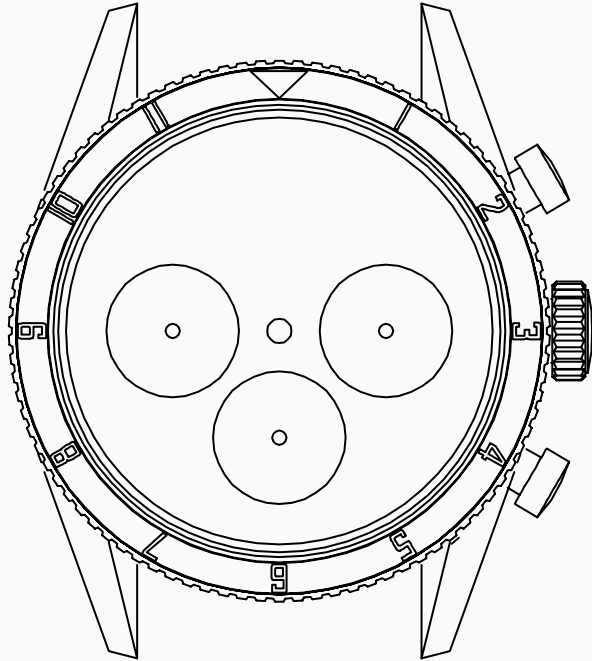



# *Certified Swiss Made*

The Skymaster 38 will be Swiss Made and is assembled in La Chaux-de-Fonds, Switzerland. Waterproof testing, entrance inspection and final quality control will also be performed in Switzerland. The Swiss Made ETA 2894-2 movement will be passing tests to certify the precision of the movement. This movement has 37 jewels, a power-reserve of around 48 hours and is equipped with the ETA-Chron regulator system for easy regulation.

The Skymaster 38 will have a ghost position on the crown, as we have decided to omit the date window for aesthetic reasons.

The Swiss Made label is a representation of the ultimate sign of quality - the perfect combination of function and design.

# *Skymaster 38 Automatic Overview*

1

**HOUR HAND**

2

**MINUTE HAND**

3

**STOPWATCH HAND**

4

**SECONDS HAND**

5

**30 MIN COUNTER**

6

**12 HOUR COUNTER**

7

**CROWN**

8

**START / STOP BUTTON**

9

**RESET BUTTON**





# *Setting your Skymaster 38 Automatic*

## **MANUAL WINDING (POSITION 1):**

This is the normal running position. To wind the watch manually, turn the crown clockwise; turning in the other direction has no effect.

When setting the watch for the first time or after the watch has stopped, complete a minimum of 25 turns for partial winding.

## **GHOST POSITION (POSITION 2):**

This position is usually meant for setting the date on your watch. However since the Skymaster 38 is not showing any date on the dial. This crown position will not have any function for the watch



# *Setting your Skymaster 38 Automatic*

## **SETTING THE TIME (POSITION 3):**

the crown is pulled out to the second notch. The seconds hand is stopped, allowing you to set the time to the precise second. To set the hour and minute, turn the crown in either direction.



# *Using the chronograph*

## **1 PUSH START STOP BUTTON :**

When pushing the start stop button just once, the chronograph will start running.

## **2 PUSH START STOP BUTTON :**

When pushing the start stop button again, you will now pause the chronograph and can read the time on the dial. You can now proceed to step 3, or keep repeating step 1 and 2.

## **3 PUSH RESET BUTTON :**

When pushing the reset button, the chronograph will stop working and all hands will jump back to their neutral position until step one is activated again.



# *Caring for your Skymaster Automatic*

You can help preserve its lustre by cleaning it occasionally with a microfibre cloth. Any scratches on the Hesalite crystal can be polished away with a special gel. If you require any service on your watch, please make sure to send in a request via our website and we will make sure to have your watch serviced and restored to original condition.

The Skymaster 38 Automatic has a water resistance rating of 5ATM which means you should not swim or dive with it, and if possible avoid showering.



Warranty term: Two year from the date of purchase. This warranty covers manufacturing defects on the watch itself (movement, case, crystal). Other parts than the above are not covered by this warranty. To have replacement covered under this warranty performed, please use our contact form on the "contact us" page. In the e-mail you need to specify your name, address, order number and a detailed description of the issue at hand. Finally, write 'reclaim of purchase' as subject of the e-mail and mail. Note that repair/replacements will be charged in the following cases, even during the warranty term.

- Failure or damage caused by improper use or carelessness (knocks, dents, crushing, broken crystal, etc.)
- Failure or damage caused by unjustifiable repair or modification
- Failure or damage caused by fire or water, or a natural disaster such as for example an earthquake
- Esthetic changes that occur during normal wear and tear and aging (minor scratches, etc.; on the case and/ or crystal, alteration of the colour on the wristband and the peeling of the plating)
- In case the retail store and the purchase date are not indicated on the warranty, or if this information has been rewritten

The case, dial, hands, crystal, watchband or other parts thereof may be replaced with substitutes if the originals are not available. This warranty warrants that you can receive free replacement in accordance with the terms set forth herein and within the specified term, and shall not restrict any lawful right of the Customer.

Any damage caused due to the modification of the watch is not covered by our warranty. Only if the modification is arranged and executed directly via our service center the original warranty will be maintained.

[WWW.MAENWATCHES.COM](http://WWW.MAENWATCHES.COM)